COLOR VIDEO CAMERA

DXC-D35 DXC-D35P DXC-D35WS DXC-D35WSP

SERVICE MANUAL

Volume 1 1st Edition

Power HAD WS

△警告

このマニュアルは、サービス専用です。

お客様が,このマニュアルに記載された設置や保守,点検,修理などを行うと感電や火災, 人身事故につながることがあります。

危険をさけるため、サービストレーニングを受けた技術者のみご使用ください。

⚠WARNING

This manual is intended for qualified service personnel only.

To reduce the risk of electric shock, fire or injury, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer all servicing to qualified service personnel.

∆WARNUNG

Die Anleitung ist nur für qualifiziertes Fachpersonal bestimmt.

Alle Wartungsarbeiten dürfen nur von qualifiziertem Fachpersonal ausgeführt werden. Um die Gefahr eines elektrischen Schlages, Feuergefahr und Verletzungen zu vermeiden, sind bei Wartungsarbeiten strikt die Angaben in der Anleitung zu befolgen. Andere als die angegeben Wartungsarbeiten dürfen nur von Personen ausgeführt werden, die eine spezielle Befähigung dazu besitzen.

AVERTISSEMENT

Ce manual est destiné uniquement aux personnes compétentes en charge de l'entretien. Afin de réduire les risques de décharge électrique, d'incendie ou de blessure n'effectuer que les réparations indiquées dans le mode d'emploi à moins d'être qualifié pour en effectuer d'autres. Pour toute réparation faire appel à une personne compétente uniquement.

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Vorsicht!

Explosionsgefahr bei unsachgemäßem Austausch der Batterie.

Ersatz nur durch denselben oder einen vom Hersteller empfohlenen ähnlichen Typ. Entsorgung gebrauchter Batterien nach Angaben des Herstellers.

ATTENTION

Il y a danger d'explosion s'il y a remplacement incorrect de la batterie.

Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur.

Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

ADVARSEL!

Lithiumbatteri-Eksplosionsfare ved fejlagtig håndtering. Udskiftning må kun ske med batteri af samme fabrikat og type. Levér det brugte batteri tilbage til leverandøren.

ADVARSEL

Lithiumbatteri - Eksplosjonsfare.
Ved utskifting benyttes kun batteri som anbefalt av apparatfabrikanten.
Brukt batteri returneres apparatleverandøren.

VARNING

Explosionsfara vid felaktigt batteribyte.
Använd samma batterityp eller en likvärdig typ
som rekommenderas av apparattillverkaren.
Kassera använt batteri enligt gällande
föreskrifter.

VAROITUS

Paristo voi räjähtää jos se on virheellisesti asennettu. Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

For the customers in the U.S.A. and Canada

RECYCLING NICKEL-CADMIUM BATTERIES

Nickel Cadmium batteries are recyclable. You can help preserve our environment by returning your unwanted batteries to your nearest point for collection, recycling or proper disposal.

Note: In some areas the disposal of nickel cadmium batteries in household or business trash may be prohibited.

RBRC (Rechargeable Battery Recycling Corporation) advises you about spent battery collection by the following phone number.

Call toll free number: 1-800-822-8837 (United States and Canada only)

Caution: Do not handle damaged or leaking nickelcadmium batteries.

Für Kunden in Deutschland

Entsorgungshinweis: Bitte werfen Sie nur entladene Batterien in die Sammelboxen beim Handel oder den Kommunen. Entladen sind Batterien in der Regel dann, wenn das Gerät abschaltet und signalisiert "Batterie leer" oder nach längerer Gebrauchsdauer der Batterien "nicht mehr einwandfrei funktioniert". Um sicherzugehen, kleben Sie die Batteriepole z.B. mit einem Klebestreifen ab oder geben Sie die Batterien einzeln in einen Plastikbeutel.

X-RAY RADIATION WARNING

Be sure that parts replacement in the high voltage block and adjustments made to the high voltage circuits are carried out precisely in accordance with the procedures given in this manual.

For the customers in the Netherlands Voor de klanten in Nederland

Dit apparaat bevat een MnO2-Li en Li-ion batterij voor memory back-up.

Raadpleeg uw leverancier over de verwijdering van de batterij op het moment dat u het apparaat bij einde levensduur afdankt.

Gooi de batterij niet weg. maar lever hem in als KCA.



Bij dit produkt zijn batterijen geleverd. Wanneer deze leeg zijn, moet u ze niet weggooien maar inleveren als KCA.

Table of Contents

Man	ual	Stru	ctu	re
INTERNI	uuı			

Purp	pose of this manual	3
Rela	ated manuals	3
1.	Operating Instructions	
	,	
•	Service Overview	
۷.	Service Overview	
2-1.	Board Layout	2-1
2-2.		
	2-2-1. Removal of Side Plate	
	2-2-2. Removal/Attachment of Top Chassis	2-3
2-3.	Replacement of CCD Unit	2-5
2-4.	. Connectores and Cables	2-7
	2-4-1. Connector Input/Output Signals	2-7
	2-4-2. Connection Connector	2-11
2-5.	. How to Attach of the Extension Board EX-591	2-11
2-6.	Replacement Way of ROM (IC102)	2-12
2-7.	. Switch Settings on Boards	2-12
2-8.	. DC-DC Converter Voltage	2-13
2-9.	. Recommended Replacement Parts	2-14
2-10	0. Attaching the 4-type or 5-type Viewfinder	2-15
2-11		
2-12		
	2-12-1. Service Menu	
	2-12-2. File Menu	

3. Electrical Alignment

3-1.	Preparatio	on	3-1
	3-1-1.	Equipment Required	3-1
	3-1-2.	Connection	3-1
	3-1-3.	Setting Before Adjustment	3-2
	3-1-4.	Notes on Adjustment	3-2
	3-1-5.	Maintaining the Grayscale Chart	3-3
3-2.	Before A	djustment	3-5
	3-2-1.	Color Bar Signal Confirmation	
	3-2-2.	Sensitivity Measurement Confirmation	
3-3.	Camera A	Adjustment	
	3-3-1.	Sub-Carrier Frequency Adjustment	
	3-3-2,	INT SC-H Phase Adjustment	
	3-3-3.	Y/R-Y/B-Y CLP Level Adjustment	
	3-3-4.	Y/SYNC/R-Y/B-Y Level Adjustment	
	3-3-5.	Carrier Balance Adjustment	
	3-3-6.	Chroma (VBS) Level Adjustment	
	3-3-7.	Y (VBS) Level Adjustment	
	3-3-8.	Y (YC) Level Adjustment	
	3-3-9.	Chroma (YC) Level Adjustment	
	3-3-10.	VF SYNC/BLKG Level Adjustment	3-11
	3-3-11.	CCD Output Level Adjustment	
	3-3-12.	Carrier Adjustment at DPR (Double Pixel Reading) ON	
	3-3-13.	Shading Adjustment	
	3-3-14.	Flare Adjustment	3-14
	3-3-15.	MIC Level/MIC Level IND Adjustment	
	3-3-16.	Character Position Adjustment	3-16
	3-3-17.	4:3 Title Adjustment (Only for DXC-D35WS/D35WSP).	
3-4.	Changing	the Standard Setting Values (Video Level)	3-18
	3-4-1.	Setting Status before Changing the Setting	3-18
	3-4-2.	Changing the Setting Value of Black Level	
	3-4-3.	Changing the Flare Compensation Setting Value	
	3-4-4.	Changing the Gamma Correction Setting Value	
	3-4-5.	Changing the Manual Knee/White Clip Setting Value	

Manual Structure

Purpose of this manual

This is the Service Manual Volume 1 of the color video camera DXC-D35/D35P and DXC-D35WS/D35WSP.

Contains the operation manual related to the operations of this equipment, the replacement of the parts and adjustments.

Related manuals

Besides this Service Manual Volume 1, the following manuals are availabel for color video camera DXC-D35/D35P and DXC-D35WS/D35WSP.

Service Manual Volume 2 (Available on request)

Part No. 9-955-214-21

This manual describes parts list, semiconductor pin assignments, block diagrams, schematic diagrams and board layouts.

For obtaining, contact your local Sony Sales Office/Service Center.

Service Manual DXF-801/801CE (Available on request)

Part No. 9-955-212-01

This manual describes the replacement of the parts, alignments, parts list, semiconductor pin assignments, block diagrams, schematic diagrams and board layouts of the viewfinder.

For obtaining, contact your local Sony Sales Office/Service Center.

Service Manual VCT-U14 (Available on request)

Part No. 9-977-221-01

This manual describes exploded view and parts list of the tripod adaptor. For obtaining, contact your local Sony Sales Office/Service Center.

Service Manual VCL-918BY (Available on request)

Part No. 9-977-329-01

This manual describes exploded view and parts list of the zoom lens. For obtaining, contact your local Sony Sales Office/Service Center.

"Semiconductor Pin Assignments" CD-ROM (Available on request)

This "Semiconductor Pin Assignments" CD-ROM allows you to search for semiconductors used in Communication System Solutions Network Company equipment.

Semiconductors that cannot be searched for on this CD-ROM are listed in the service manual for the corresponding unit. The service manual contains a complete list of all semiconductors and their ID Nos., and thus should be used together with the CD-ROM.

Part number: 9-968-546-XX



Section 1 . Operating Instructions

This section is extracted from operation manual.

203-895-11(1)

Color Video Camera

Operating Instructions
Before operating the unit, please read this manual
thoroughly and retain it for future reference.


Power HAD Power HAD WS DXC-D35K/D35PK
DXC-D35L/D35PL
DXC-D35WSL/D35W

300 by Sony Corporation

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

the cabinet. Refer servicing to qualified To avoid electrical shock, do not open personnel only.

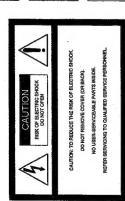



This symbol is intended to alert the user to the presence of uninsulated 'dangarous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Owner's Record

The model and serial numbers are located on the top. Record these numbers in the spaces provided below. Peter to them whenever you call upon your Sony dealer regarding this product.

Serial No.

Model No.

LITHIUM BATTERY
Replace the battery with a Sorry CR2032 lithium battery. Use of another battery may present a risk of fire or explosion.

Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.

Keep the lithium battery out of the reach of children Should the battery be swallowed, consult a doctor immediately.

Lithiumbatteri - Eksplosionsfare ved fejlagtig håndtering. Udskiftning må kun ske med batteri af samme fabrikal og type. Levér det brugte batteri tilbage til faverandøren. ADVARSEL!

ADVARSEL

Lithiumbatten - Eksplosjonsfare. Ved utskifting benyttes kun batten som anbefalt av apparatfabrikanten. Brukt batteri returneres apparatleverandøren.

VARNING

Explosionsfara vid felaktigt batteribyte. Använd samma batterityp eller en likvärdig typ som rekommenderas av apparattillverkaren. Kassera använt batten enligt gällande föreskrifter.

Paristo voi rājāhtāā jos se on virheeliisesti asennettu. Vaihda paristo ainoastaan faitevalmistajan suosittelemaan VAROITUS

tyyppiin. Hävitä käyletty paristo valmistajan ohjeiden mukaisesti.

For customers in the USA (for DXC-D35K/D35L/D35WSL/D35H)

D35H)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the PCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instituction manual, may cause harmful inferference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own

The shielded interface cable recommended in this mainual must be used with this equipment in order to comply with the finite for a digital device pursuant to Subpart B of Part 15 of FGC Rules.

For the customers in Europe (for DXC-D35PK/D35PL/

This product with the CE marking complies with the EMC Directive (89/336/EEC) issued by the Commission of the European Community.

Compliance with this directive implies conformity to the following European standards:

Electromagnetic Environment(s): E1 (residential), E2 (commercial and tight industrial), E3 (urban outdoors) and E4 (controlled EMC environment, ex. TV studio). ENS5103-1: Electromagnetic Interference (Emission)
 ENS5103-2: Electromagnetic Susceptibility (Immunity)
This product is intended for use in the following

You are caulioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

RECYCLING NICKEL-CADMIUM BATTERIES For the customers in the USA and Canada You can help preserve our environment by returning your unwanted batteries to your proper disposal. Note: In some areas the disposal of nickel cadmium batteries in household or business trash may be prohibited. Nickel Cadmium batteries are recyclable. nearest point for collection, recycling or

RBRC (Rechargeable Battery Recycling Corporation) advises you about spent battery collection by the following phone number.

Call toll free number: 1-800-822-8837 (United States and Canada only) Caution: Do not handle damaged or leaking nickel-cadmium

For safety reasons, be sure to discharge the battery before discarding it.

Q

ble of Contents

lapida		TOPICAL PROPERTY OF THE PROPER	
Overview	Product Configurations7	Shooting	Basic Procedure for Shooting43
	Features9		Using the DynaLatitude Function 45
	Features on the DXC-D35/D35WSL/D35WSPL 9		Shooting with the DSR-1/1P46
	Features on the DXC-D35WSL/D35WSPL		Using the ClipLink Function46
	Location and function of Parts13		Using the Edit Search Function While Back Space
	Camera Head		Editing 48
	VCL-918BY Zoom Lens		Using the Freeze Mix Function
	DXF-801/801CE Viewfinder		
apte 2		Viewfinder Screen	Viewfinder Screen Indications
Titting and	Replacing the Lithium Battery23	Indications and	Changing the Viewfinder Display51
Connection	Fitting a VTR	Menus	Viewfinder Normal Indications54
	Using the Camcorder Grip		Status Indications57
	Fitting the Lens		Viewfinder Basic Menu58
	Using Accessories32		Basic Menu Operations 58
	Using the Viewfinder		Contents and Settings of Each Page 58
	Using an Optional Microphone33		Viewfinder Advanced Menu64
	Fitting to a Tripod34		Advanced Menu Operations 64
	Using the Optional CAC-4 Chest Pad34		Contents and Settings of Each Page 64
	Using the Carrying Case 35		Video Output and Vicwfinder Picture
	Connections36		Column Ellow
	Connecting a Portable VTR 36		
	Connecting a Number of Cameras (Using a Camera		Calling up a Soup Fire
	Control Unit)37		Changing rue Setungs
	Connecting a Number of Cameras (Without Using		Saving File Settings
	a Camera Control Unit)39		Using Setuphavi and SetupLog with the DSR-1/1P 76
	Power Supply40		Setting up the Camera Using Data Recorded on Tape 76
	Using Battery Packs40		Recording the Menu Settings onto a Tape
	Carnera Adaptor Power Supply		Viewing SetupLog Data78

Table of Contents

Chapter

Overview

Adjustments and	White Balance Adjustment	79
Settings	Saving an Appropriate White Balance Value	
	in Memory	79
	Using the Preset White Balance Settings	8
	Light Sources and Color Temperatures	81
	Using the ATW (Auto Tracing White Balance)	
	Function 81	81
	Black Balance Adjustment	
	Shutter Settings84	84
	Setting the Clock and Timestamping Recordings 86	98
	Viewfinder Screen Adjustments88	88
	Adjusting the Lens89	89
	Flange Focal Length Adjustment	89
	Iris Adjustments	06
	Adjusting the Iris Sensitivity	91
٠	Macrophotography	91
	Settings for Special Cases	92
	Skin Detail Correction	93
	Adjusting Color in the Specified Area	93

he eight models, DXC-D35K, DXC-D35L/D35WSI,, XC-D35H, DXC-D35PK, DXC-D35PL/D35WSPL, and DXC-D35PH, comprise both NTSC and PAL

.. 102

103 50 5

How ClipLink Changes Video Production Techniques ... 102

Example System Configuration.. Data Generated When Shooting

ClipLink Operation Flow

Chart of Optional Components and Accessories 101

What Is ClipLink? Related Products. Specifications

8

8


Important Notes on Operation ... Characteristics of CCD Sensors

Warning Indications

Product Configurations

versions and the components as shown in the figure on next page. The operation of the basic camera unit is the same in all cases.

Product Configurations

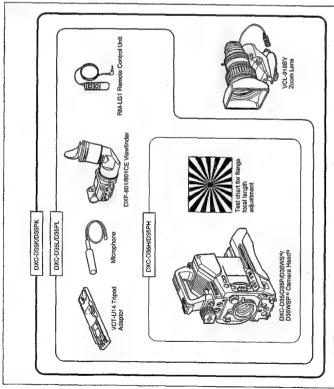

a) DXC-D35WSL/D35WSPL only b) Illustration: DXC-D35WS/D35WSP

Camera adaptor

The product kit does not include a camera adaptor; to use a camera adaptor, you will need to purchase a model CA-537/537P or CA-327/327P.

Features on the DXC-D35/D35P/ D35WSL/D35WSPL

are described in this section. See also "Features on the DXC-D35WSL/D35WSPL" (page 12) for using the DXC-D35WSL/S35WSPL. type (4:3-16:9 switchable) digital video camera while digital video camera. Common features on both types The DXC-D35WSL/S35WSPL is a 16:9 wide-screen the DXC-D35/D35P is a 4:3 standard-screen type

2/3-inch IT type Power HAD (WS) CCD

CCD cameras for high-end use, in both picture quality The DXC-D35/D35P Color Video Camera uses 4/3-D35WSL/D35WSPL, Power HAD WS CCDs are used.) It outperforms most of the exiting FIT type inch IT type Power HAD CCDs. (For the DXCand sensitivity

(DXC-D35WSL/D35WSPL),
•Sensitivity: F11.0 (at 3200 K, 2000 lux)
•SN: 63 dB (DXC-D35/D35WSL) or 61 dB (DXC-*Smear: -125 dB (DXC-D35/D35P) or -120 dB

Sophisticated image processing

processing has brought reproduction of natural colors to the level achieved by the human eye. TruEyeTM processing makes possible the following performance features. This new digital signal

Enables detailed adjustment of contrast control in each pixel in accordance with a histogram of fuminance signal levels (see page 45). **DynaLatitude™**

DCC+ (dynamic contrast control plus)
Prevents white breakup when shooting a high intensity subject, and also prevents color faults in high intensity

Black stretch and compress
Enables control of luminance signal levels in black
areas without changing the huc.

0

Chapter 1 Overview

Variety of detail corrections

softer appearance to the subject's face. The target Skin detail function: this function gives a slightly skin color can be automatically set.

performs vertical detail compensation for both red Red/green vertical detail correction: this function Horizontal detail frequency control · Black halo correction and green signals.

Recording and managing setup data

D35WSPL is equipped with the following functions to In addition to the setup menu that is displayed in the viewfinder screen, the DXC-D35/D35P/D35WSL/ facilitate camera head setup. Setup file system

You can use setup files when making adjustments or settings. The DXC-D35/D35P/D35WSL/D35WSPL comes with factory preset files that contain shipped settings and you can freely create user files as well.

Automatic recording of setup data (when using DSR-1/1P)

SetupLogTM: Shooting-related environment settings are recorded onto the tape at intervals of a few When the DXC-D35/D35P/D35WSL/D35WSPL is connected to the DSR-1/1P VTR, two types of setup data can be recorded.

SetupNaviTM: The setup conditions selected with the identify the causes of problems in previous shots. other camera heads so that the same setup can be seconds. This recorded data can then be used to setup menu and setup files are recorded onto the tape. The recorded setup data can be copied to subsequent shots. It also makes it easier to reproduce the same shooting conditions in shared among several camera heads.

8 Chapter 1 Overview

ClipLink[™] Function (when using DSR-

The ClipLink function can be used at every step from editing is recorded when shooting to ensure fast and acquisition to editing. Information necessary for

24 dB+DPR and hyper gain.

you press the TAKE button to set a Mark IN point, the When you set a recording start (Rec IN) point or when compressed form as an Index Picture. In addition, the and scene number) into cassette memory (as ClipLink log data). Unsuccessful scenes containing faults can also be marked in cassette memory an "NG", so that other editing point data (such as the cassette number video image at that point is recorded on the tape in OUT points or cue points) are recorded along with time codes for such editing points (Mark IN/Mark only the good scenes are taken up from cassette memory when editing.

Dockable with various types of VTRs

The DXC-D35/D35P/D35WSL/D35WSPL docks with docks with the EVV-9000/9000P Hi-8 VTR. Using an camcorder. It also docks with the PVV-3/3P Betacam SP VTR to configure a Betacam SP camcorder. In addition, the DXC-D35/D35P/D35WSL/D35WSPL adaptor (not supplied), it is also able to dock with a the DSR-1/1P DVCAM VTR to configure a digital ariety of existing S-VHS VTRs.

New Functions boost operability

EZ (easy) mode function

When there isn't time to check the camera head settings, simply press the EZ mode button to start the auto adjustment function using standard settings. There is no need to lose a shot for lack of setup time.

EZ (easy) focus

Press the EZ focus button before shooting to ensure a quick and accurate focus.

Programmable gain

The amount of gain relative to the GAIN switch setting (H, M, or L) can be programmed as -3 dB, 0 dB, 3 dB, 6 dB, 9 dB, 12 dB, 18 dB, 18 dB+DPR!!, 24

Hyper gain (36 dB or 42dB, i.e. about 60 times or 120 Hyper gain

This times greater than 0 dB) can be easily set via one switch setting. can also be done from remote equipment.

Color temperature display
When reading the white balance, the color temperature

Auto tracing white balance

useful when there is no time to manually adjust the white balance or when shooting moves between indoor This function automatically traces the white balance, change. Auto tracing white balance is especially which constantly changes as lighting conditions and outdoor locations,

Total level control system (TLCS)

gain control (AGC) or auto exposure (AE) backs up to Even if the incoming light exceeds the range in which the standard auto iris can control exposure, the auto ensure proper exposure.

Dual pixel readout (DPR)When the gain is set to either 18 dB or 24 dB, the gain setting can be doubled (6 dB up) without increasing the noise level.

Recording time display

Recording time can be displayed in either of the · Total recording time for current cut Total recording time for all cuts following modes.

Viewfinder super detail

Video signals for the viewfinder are mixed with DTE signals to make focusing easier.

Designed for ease of operation

Thanks to the Dynafit Pad which fits well to the shoulder, the camera is stable on the shoulder. Dynafit Pad

IRE on the DXC-D35/D35WSL (or from 70 to 90% on

the levels of 100 IRE for the DXC-D35/D35WSL or

more (or the levels of 100% or more for the DXC-

D35P/D35WSPL).

zebra 1 can be set to the levels ranging from 70 to 90 the DXC-D35P/D35WSPL) and the zebra 2 indicates

be displayed simultaneously or independently. The

Two types of zebra patterns, zebra 1 and zebra 2 can

Dual zebra pattern display

Slide cover

The slide cover can hide the switches and buttons that are seldom used during shooting. The cover can be locked so as not to open during shooting.

High-performance viewfinder (DXF-801/ 801CE)

· High resolution (600 TV lines of horizontal resolution)

focusing PEAKING potentiometer for vertical and horizontal Large-diameter eye cup for easier viewing and

 Two indicators can be used = TALLY indicators. detail control

 DISPLAY switch that can turn the character display Tough die-cast aluminum body on and off

The video signal with text superimposed that is shown in the viewfinder can also be output to an external

video monitor.

Video monitor output with text

control. The preset white balance can be changed to other value through menu setting (see page 59).

You can select the preset white balance at 3200 K (default) or 5600 K (default) by setting the FILTER

Switching the color temperatures for the is displayed on the viewfinder screen.

preset white balance

Switching the aspect ratio automatically between 16:9 (wide screen) and 4:3 (standard screen) when used with the DXC-D35WSL/D35WSPL Light that can light the lens control elements

An indication P appears in the viewfinder whenever a signal is being output from the camera head's

Camera head microphone output indicator

VTR data display

Along with a color bar, a 1-kHz reference signal can

also be output.

1-kHz reference signal output

D35WSL/D35WSPL is able to display the following When connected to a VTR, the DXC-D35/D35P/ data on the viewfinder screen.

The freeze mix function superimposes any previously

facilitme framing the subject when reshooting the recorded still picture on the viewfinder screen to

scene.

Freeze mix function (when using DSR-1/1P)

· Time values (counter, time code, or user bit vales)

 Remaining tape time VTR audio levels

 Remaining battery capacity (when using an Anton Bauer Intelligent Battery System) · ClipLink information (when using the DSR-1/1P) VTR operation mode

Edit Search Function (when using DSR-1/1P)
When using the DXC-D35/D35P/D35WSL/D35WSPL

buttons allow the tape to play back in search mode.

Set either of two playback speeds.

with the DSR-1/1P, pressing the EDIT SEARCH

Chapter 1 Overview

Ξ

Features

Location and Function of Parts

Camera Head

Right side view

Features on the DXC-D35WSL/

described in this section. See "Features on the DXC. D35/D35P/D35WSPL" (page 9) for common features on ■ 4.3 standard-screen type digital video camera and 16:9 wide-screen type digital video Features only on the DXC-D35WSL/S35WSPL is

Switchable between 16:9 and 4:3 aspect ratios

A simple menu operation provides instant switching between the 165 and 43 aspect ratios. In 4:3 mode, a screen equivalent to a 4:3 screen is obtained through digital processing of the 1659 video signals produced by the WS CCD. (See page 68.)

Wide-aspect ID signals

A menu setting is available to add wide-aspect ID signals 1 to 16:9-mode video signals 2 (See page 68.)

Selection of the safety zone size in 16:9

When the aspect ratio is 16.9, you can change the safety zone size through menu setting (see page 65.)

SKIN DTL SET button - HYPER GAIN switch D TTL RESET button THEC TIME switch SKIN DTL switch **⊕** DOWNOFF butter - SET UP switch ZEBRA switch ● UP/ON button AJRIS MODE switch and indicator -O ATW button and indicator - MENU/STATUS switch OUTPUT/DL/DCC+ 8 - Ez MODE button and indicato B POWER switch The see of -O W. BAL switch Breaker switch 1 N GAIN switch MG button - EDIT SEARCH button 0 -B EZ FOCUS button - Stide cover fock Illustration: DXC-D35WS/D35WSP

ID signals complying with EIAJ CPR-1204 (DXC-D35WSL.) or complying with ETS WSS (DXC-D35WSPL).

Video signals refer to the following:

 Video signals output from the VIDEO OUT connector and MONITOR OUT connector.
 The Y component of Y/C separate signals and the Y component of component signals output from the VTR connector.

Chapter 1 Overview

(See page 68.) When this function is used, the iris and the white balance are adjusted automatically. (The total level control system functions.) Press this button again to return the camera to the previous settings (EZ Depress this button (EZ mode on) when you want to adjustment of the camera settings to standard values. D EZ ("easy") MODE button and indicator be able to shoot immediately, with automatic

mode off).

M7P) Camera Control Unit or the RM-M7G Remote When connecting the CCU-M5/M7 (or CCU-M5P/ Control Unit, the "easy mode" function is disabled

D EZ FOCUS button

on, the function automatically turns off after about ten appears in the viewfinder while the function is on; to Press this button to turn the "easy focus" function on urn it off, press the BZ FOCUS button again. If left This opens the iris, to make it easier to focus before peginning shooting. The indication "EZ FOCUS"

If the "easy focus" function is still on when you press the VTR button, it turns off automatically and recording starts about one second later.

B EDIT SEARCH buttons (for operation with

search playback while pressing either of these buttons When using the DSR-1/1P to record, you can see the available, and press either of the buttons to the inner at recording pause mode to quickly find the next recording start point. Two playback speeds are position to increase the speed.

This lock keeps the slide cover closed. D Slide cover lock

≅0 80 90 Locked position buil the upper panel forward and then lift it up. H **3**0 **3**0 Unlocked position

pixel according to a histogram of luminance signal function, which finely adjusts the contrast of each levels, Low, STD (standard), and High with basic levels. Access advanced menu page 2 to set the DynaLatitude function ON or OFF. The DynaLatitude effect can be set to any of three CAMOL: This setting uses the DynaLatitude menu page 2.

BARS: This setting displays color bars. light to back-lit subjects, and selecting SPOT L adjusts When you use the auto iris function (by setting the iris A.IRIS (auto iris) MODE switch and indicator shooting conditions. Selecting BACK L gives more selector on the lens to A), set this switch to suit the for high contrast in spot-lit subjects. For normal shooting, set this switch to STD.

ATW (auto tracing white balance) button and

want the white balance to be adjusted automatically to follow changes in lighting conditions. (See page 81.) Press this button, turning the indicator on, when you

This powers the camera on and off. There are two different ON settings as follows. POWER switch

head, the lens or a camera adaptor starts recording ON STBY: This puts the VTR on standby. In this state, pressing the VTR button on the camera

ON SAVE: This puts the VTR in the power-saving state, with the video head drum stationary. In this state, it takes a few seconds to start recording after pressing the VTR button.

The VTR state when this switch is in the ON STBY or

When you press this switch to the MENU position, the displays. When you press the switch to the STATUS ON SAVE position may depend on the VTR model. MENU position to cycle through the various menu basic menu is displayed. Keep pressing it to the MENU/STATUS switch

status (of current settings) is displayed.

position, the DXC-D35/D35P/D35WSL/D35WSPL's

This selects the white balance setting from the preset value, the value in memory A or the value in memory W. BAL (white balance) switch B. (See page 79.)

OUTPUT/DL/DCC+ (DynaLatitude/dynamic

CAM/DCC+: This activates the DCC+ function. Use this switch to select the DCC+ function, the Select the CAM/DCC+ position in most cases. DynaLatitude function, or color bar output. contrast control plus) switch

This prevents color faults when shooting high-

intensity subjects.

Chapter 1 Overview

5

The recording time displayed when this switch is set to the TTL or DUR position is obtained by counting the duration of the internal reference signal input to The value may not agree exactly with the value the camera.

derived from the time code values. Furthermore, value displayed may not be correct when another manufacturer's VTR is connected to the camera.

For details of menu operation, see Chapter 4 "Viewfinder

Screen Displays and Menus" (page 51).

© TTL (total) RESET buttonPressing this button resets the total recording time (TTL selection) to zero.

Set this switch to ON to use the skin detail correction SKIN DTL (skin detail) switch

unction.

-3 dB to 24 dB + DPR and HYPER GAIN. (See page 64.) The factory default selections are 18 dB (H), 9 dB

(M) and 0 dB (L).

When the HYPER GAIN switch (1) is in the ON

position, the GAIN switch has no effect.

NG button

assigned to the H, M and L settings from values from

medium or low. You can choose the gain values

This selects one of the three gain settings, high,

GAIN switch

For details, see "Skin Detail Correction" (page 93). SKIN DTL (skin detail set) SET button

display the area detect cursor on the viewfinder screen. Place the cursor on the target and press this button to Press this button with the SKIN DTL button (6) to perform skin detail correction.

For details, see "Skin Detail Correction" (page 93).

Use this switch to select the camera head setup C SET UP switch

When using the ClipLink function during shooting, you can designate a particular scene as "NO" (No Good) by pressing this button before shooting the next

scene. Press the button again to cancel the NG setting

STD: Set up using the setup menu. Setup file data is FILE: Set up using setup files and the setup menu not displayed. method.

HYPER GAIN switch

disconnected. Correct the fault in the power supply,

then press this switch.

breaker trips, and the camera power supply is

If there is a fault in the camera power supply, the

Breaker switch

dB (a 30 or 36 dB increase by electronic amplification When finished shooting, return this switch to the OFF position. The "HYPER" indication disappears and the When this switch is in the ON position, the indication gain by a factor of about 60 or 120 with respect to 0 and a 6 dB increase for DPR, bringing about a total "HYPER" appears in the viewfinder, and the GAIN Setting this switch to the ON position increases the UP indicator in the viewfinder also lights. gain increase of 36 or 42 dB). 3AIN UP indicator goes out.

item (TC IND) to ON (see page 67), then the VTR

time data (time code, CTL count, or user bit

value) is displayed.

advanced menus you set the time code display

DUR: Displays the recording time of the current cut If, however, a PVV-3/3P is connected, and in the

example, to replace the battery pack

OFF/TC: Switches off the recording time display.

you stop the VTR and power off the camera, for

The total recording time is not reset even when

TTL: Displays the total recording time.

viewfinder.

This selects the recording time indication in the

TREC (recording) TIME switch

Increasing the gain with this switch reduces the horizontal resolution by 50%.

Chapter 1 Overview

Location and Function of Parts

@ ZEBRA switch

Depending on the zebra setting in advanced menu page 4 (page 65), the zebra 1 for video levels between 70 to 90 IRE (or 70 to 90%) and the zebra 2 for video levels 100 IRE or more (or 100% or more) can be displayed Set this switch to the ON position to display = zebra pattern (diagonal stripes) in the viewfinder independently or simultaneously.

Front view

⊕ UP/ON button

Use this button to open displays and to make "ON" settings. When using the advanced menus, use this button to change menu pages or to switch to the ordinary screen display.

DOWNOFF button

Press this button to specify an editing point (Mark IN/

TAKE button switch to OFF.

OUT or cue point) at the current tape position during

settings. You can also use this button to change menu Use this button to close displays and to make "OFF" pages when using the advanced menus.

Use this switch to set the shutter speed, CLS (clear scan), or EVS setting (see page 84). Usually, set this

SHUTTER switch

When the DSR-1/1P is attached, you can use this knob to manually adjust the channel 1 audio recording level. ® AUDIO LEVEL knob

WHT/BLK (white/black) switch

This switch is used for automatic adjustment of the white balance and black balance. (See pages 79 to 83.) **WYR button**Pressing this button starts and stops recording on the VTR.

Left and upper view

MIC IN +48 V connector

Ø VF connector

MIC LOW CUT switch

FILTER control

- Viewfinder front-to-back position focking lever -@ Viewfinder left-to-right positioning ring Accessory fitting shoe and screw hole 🖜 Fitting for optional microphone holder - MONITOR OUT connect Viewfinder fitting shoe -@ VIDEO OUT connector Shoulder strap (Itting) B REMOTE connector 1 ♠ REMOTE connector 2 LENS connector WTR connector ⊕ VF connector

Witting for optional microphone holder You can fit an optional CAC-12 Microphone Holder

Set this switch to the ON position to insert a high-pass

MIC LOW CUT switch

MIC (microphone) IN +48 V connector (XLR 3-

Connect the supplied microphone or an optional

microphone (operable with a 48 V supply).

② VF (viewfinder) connector (20-pin) This is the connector for the DXF-801/801CE

Illustration: DXC-D35WS/D35WSP

O AUDIO LEVEL knob

TAKE button

WHT/BLK switch

● VTR button

SHUTTER switch

Lens mount

filter in the microphone circuit, reducing wind noise.

Normally leave the switch in the OFF position.

Accessory fitting shoe and screw hole here. (See page 33.)

Attach optional video lights or other accessories here.

appropriate to the lighting conditions. (See page 43.)

Select the color temperature conversion filter

4 FILTER control

Shoulder strap fixture

To use the supplied shoulder strap, fix one end here and the other end to the VTR.

Viewfinder fitting shoe Fix the DXF-801/801CE Viewfinder here.

(a) Vlewfinder left-to-right position fixing ring Loosen this ring to adjust the left-to-right position of the viewfinder. (See page 32.)

Viewfinder front-to-back position tocking catch Release this catch to adjust the front-to-back position of the viewfinder. (See page 32.)

17

Chapter 1 Overview

Chapter 1 Overview 9

Attach the zoom lens here. D Lens mount When using this connector, do not connect a DXF-41/51 viewfinder to the VF connector on the left side.

DXC-D35P/D35WSP(CE) V1

© REMOTE connector 1 (mini-jack) Connect the RM-LG1 Remote Control Unit to enable remote operation of the ClipLink function.

Outputs both the camera video and the character information in displayed on the viewfinder screen. You can connect an optional LCD color monitor to this ® MONITOR OUT connector (BNC)

This outputs the video signal captured by the camera. **10** VIDEO OUT connector (BNC)

(D REMOTE connector 1 (10-pin)

Connect the optional RM-M7G Remote Control Unit to this connector. Set the CAMERA HEAD SELECT switch on the bottom of RM-M7G to 1.

When using the RM-M7G, note the following points. When operating the camera head from the camera control unit, connect the RM-M7G to the camera

control unit.

• EZ mode cannot be used if the RM-M7G is connected to the camera head.

VCL-918BY Zoom Lens ■ LENS connector (12-pin, for ½-inch lens) Connect the lens connector.

② VF (viewfinder) connector (8-pin) This is the connector for the DXF-41/51 viewfinder.

When using this connector, do not connect a DXF-801/801CE viewfinder to the VF connector on the front of the camera head.

❸ VTR connectors (PRO 76-pin DIGITAL and PRO 50-pin)

) instant automatic irle adjustment button) IRIS selector Zoom remote control connector P.B adjustment ring and F.B fixing screw Lens connector - ZOOM selector **WACRO ring** O M button ® RET butto WYTR butto @ Zoom ring Focus ring O Irls ring Lens hood Connect a dockable VTR. A PRO 76-pin DIGITAL connector is for the DSR-1/1P and a PRO 50-pin connector is for the PVV-3/3P or a camera adaptor.

Chapter 1 Overview

19

18 Chapter 1 Overview

Location and Function of Parts

O TAKE/TALLY indicate

- BATT indicator

B REC/TALLY indicators

- SHUTTER Indicator

- GAIN UP Indicato

Location and Function of Parts

O Iris ring

For manual iris control, set the IRIS selector (1) to the "M" position, and turn this ring,

2 Zoom ring

For direct manual zoom control, set the ZOOM selector (1) to the "MANU." position, and turn this

Turn this ring to focus the lens on the subject. E Focus ring

For close-up work, turn the MACRO ring @ while holding this button down. (See page 91.) M (close-up) button

9 F.B (flange focal length) adjustment ring and F.B fixing knob

F.B adjustment ring: To adjust the flange focal length, loosen the F.B fixing knob, then turn the ring. (See page 89.) F.B fixing knob: Fixes the F.B adjustment ring.

© MACRO (close-up) ring For close-up, turn this ring while holding the M button © down. (See page 91.)

D ZOOM selector

This selects the mode of zoom operation. MANU. (manual): manual zoom SERVO: power zoom

Connect the optional LO-26 lens remote control unit S Zoom remote control connector (8-pin) for remote control of zooming.

⑤ Lens connector (12-pin)

Connect to the LENS connector (⑩ on page 18) of the Camera Head.

D RET (return) button

recording pause mode, press this button to review mounted on the camera head: when the VTR is in This allows you to check the video signal as follows. When operating with a portable VTR connected recording, pressing this button connects the E-E video signall) from the VTR to the viewfinder. When operating with a DSR-1/1P or PVV-3/3P the last few seconds of the recording in the via other equipment: when the VTR is in

Eyaplece focusing knob

Microphone holding screv

Microphone holder.

dicrophone

displays the video signal captured by the camera When this button is not pressed, the viewfinder

When operating with a CCU-M5M5PM7/M7P Camera Control Unit connected; pressing this button connects the return video signal from the camera control unit to the viewfinder. stops recording, and once more to stop.

• Instant automatic iris adjustment button While using manual iris control, press this button to switch temporarily to the automatic iris control setting.

ELIGHT switch and light

Дант.

B IRIS selector

Use this to carry out a power zoom. Pressing the lever Motorized zoom lever

O TAKE/TALLY indicator (orange)

Eyeptece focusing knob
 Turn this to adjust the viewfinder focus to match your

eyesight. (See page 88.)

Stopper

Lift up when detaching the viewfinder (See page 32).

The light lights the lens and the switch controls the

ight as follows. brightness.

D LIGHT switch and light

HIGHLOW: Turn the light on and control the

OFF: Turns the lights off.

When using the ClipLink function while shooting, this indicator lights when the TAKE button (Φ on page 17) has been pressed to set \blacksquare Mark IN point and goes out when a Mark OUT point is set.

This lights when the battery capacity is low. 3 BATT (battery) indicator (red)

flashes when you operate the controls, but this is not a malfunction.

When using a camera control unit, this indicator

Chapter 1 Overview

2

a magnetic signal.

Chapter 1 Overview

2

You can switch the scan size of the DXF-801/801CE in accordance with the aspect ratio selected on the DXF-801/801CE Viewfinder camera or camcorder.

viewfinder (recording review).

When operating with a CCU-MS/MSP/MT/M/P Camera Control Unit connected: pressing this button connects the return video signal from the camera control unit to the viewfinder.

D VTR button

When operating with a VTR: this button starts and

(Starting and stopping recording is controlled on the VTR.)

Eyeplece release catch

DISPLAY switch - TALLY switch

- BRIGHT control

-® CONTRAST contro - PEAKING contro

Eye oup

- Tally lamp

The automatic setting is maintained as long as you hold the button down.

This selects the mode of iris operation. (See page 14.) A (automatic): automatic iris M (manual): manual iris

harder increases the zoom speed.

W end: zoom toward wide angle

T end: zoom toward telephoto

ន

Chapter

Location and Function of Parts

◆ RECTALLY (recording/tally) indicators (red)

• This flashes from the time when you press the VTR
button (♠ on page 17 and ♠ on page 20) on the lens
or cancorder until recording starts, then stays on
continuously during recording.

• When using a camera control unit, this lights when

the video from the carnera is selected.

This is also used to indicate a fault. (See page 97.)

The lower indicator can be disabled by menu setting.

 The lower indicator can be disabled by menu (See page 66.)
 GAIN UP indicator (orange)
 This lights when the gain is 3 dB or more.

Into figure when the gain is 3 das or more.

SHUTTER indicator (red)
This lights when the SHUTTER switch (on page IT) is in the ON position. (If the EVS is selected, the indicator will not listh.)

17) is in the ON position. (If the EVS is selected, the indicator will not light.)

• PEAKING control

This adjusts the outline intensity of the viewfinder

© CONTRAST control
This adjusts the contrast of the viewfinder image. (See page 88.)

image. (See page 88.)

page 66.)

① Tally lamp
When the TALL Y switch ② is in the ON position, this operates in the same way as the REC/TALL Y indicators ③.

★ BRIGHT (brightness) control This adjusts the brightness of the viewfinder image. (See page 88.)

Byepiece release catch

To view the viewfinder screen directly, press this catch, and hinge up the eyepiece.

TALLY switch
Set this switch to the ON position to use the tally lamp

.

Fittin

connected to the MONITOR OUT connector.

However, faints whitch are set to OFF in advanced
mean page 5 and page 6 are not displayed even when
this switch is set to ON.

Set this switch to OFF when you want to remove the character data from the viewfinder and the monitor

DISPLAY switch

Fitting and Connections

Replacing the Lithium Battery

The camera head uses a lithium battery (CR2032) to retain date and time data. When the lithium battery's voltage falls, the clock indication dose not appear. Replace the lithium battery and set the clock (see page 86).

Notes

- Carefully read the instructions for replacing the
infinitum battery. Lithium batteries may explode if
misused.

Instituted.


*Use only CR2032-type lithium batteries. Other types of lithium batteries may come loose when the cancorder is moved. If you have difficulty finding CR2032-type lithium batteries, contact your Sony dealer.


22 Chapter 1 Overview

Replacing the Lithium Battery



For detaching the VTR or camera adaptor, see "Fitting a VTR" next page.

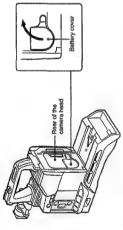

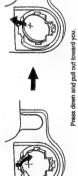

2 Loosen the two screws and remove the shoulder pad.

2 Take out the lithium battery.

3 Reverse step 2 to insert a replacement lithium battery. Make sure that the + symbol on the battery is facing you.

4 Close the battery cover.



When replacing the camera head grip with a camcorder grip, see "Using the Camcorder Grip" (page 27).

This section explains how to attach the DSR-1/IP to the camera head. The method for attaching a PVV-3/3P is similar.

Fitting a VTR

Camera connector (PRO 76-pin DIGITAL)

Chapter 2 Fitting and Connections



3 Align the projection on the bottom of the DSR-1/1P with the slot on the camera head.

24 Chapter 2 Fitting and Connections


DXC-D35/D35WS(UC) DXC-D35P/D35WSP(CE) V1

1-13

Attaching a camcorder grip to the DSR-1/1P

If the viewfinder is attached, adjust the viewfinder to the full-forward position. For details, see "Adjusting the viewfinder position" on page 32.


2 Remove the camera head grip's three screws, then pull up the grip to remove it.

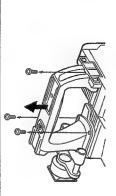

3 Remove the VTR connection



4 Remove the DSR-1/IP's shoulder strap fitting and the camera head connection plate.

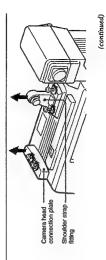

Chapter 2 Fitting and Connections

27

26 Chapter 2 Fitting and Connections

5 Tighten the two screws in the grip connector and the two screws in the shoulder pad section.

6 Attach the shoulder pad.

To remove the VTR Reverse the fitting procedure.


To fit a camera adaptor Follow the same procedure as when fitting a VTR.


Fitting a VTR

4 Slide the DSR-1/1P and the camera head together in the groove as far in possible.

3 Remove the grip's three screws, then pull up the grip to remove it.


6 Screw the connection plate (supplied with the grip for the DVCAM camcorder) which straddles the connection between the camera head and the DSR-I/IP. Also, tighten the two screws in the shoulder pad section. (See step 5 on page 26.)

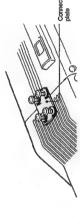


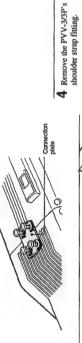



Screw the grip for the DVCAM camcorder.

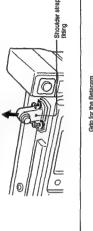

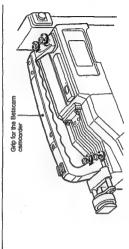

Attaching a camcorder grip to the PVV-3/3P

Perform steps 2 to 4 in "Fitting a VTR".


If the viewfinder is attached, adjust the viewfinder to the full-forward position. For details, see "Adjusting the viewfinder position" un page 32.

28 Chapter 2 Fitting and Connections


DXC-D35/D35WS(UC) DXC-D35P/D35WSP(CE) V1

In the case of the DXC-D35K/D35FK model, the lens is already fitted. In other cases, use the following procedure to fit the lens.



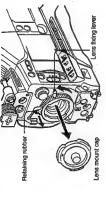

With the lens fixing lever turned fully counterclockwise, push in the lens, aligning the projection on the lens with the cutout on the camera.

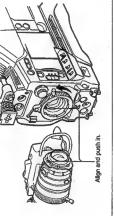

3 Supporting the lens, turn the lens fixing lever fully clockwise. Replace the retaining rubber on the lens mount.




the camera head, until it clicks into place. Fasten the cable with the clamps. 4 Using the triangular mark as a guide, push the lens connector into the LENS connector.



Fitting optional filters

Loosen the lens hood fixing screw to remove the lens hood, then attach the filter.

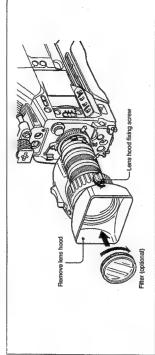

30 Chapter 2 Fitting and Connections

Using Accessories

Using the Viewfinder


Removing the Viewfinder

Remove any microphone from the viewfinder before beginning.

out of the VF connector on the front of the camera head. Pull the viewfinder connector



right position fixing ring, then pulling up the retaining catch, Loosen the viewfinder left-toslide the viewfinder out.

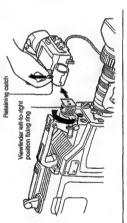

To fit the viewfinder Reverse the removal procedure.

To adjust the viewfinder left-to-right position, loosen the left-to-right fixing ring, and to adjust the front-to-back position loosen the front-to-back position loosen the front-to-back position locking

Adjusting the viewfinder position



Left eye adaptor

You cannot stow the camera attached with a left eye adaptor in the LC-421 Carrying Case.

For details, consult your Sony dealer.


By fitting \blacksquare left eye adaptor, you can use the camera with your left eye to the viewfinder.

Using an Optional Microphone

To use a long microphone such as the optional ECM-670/672, fit an optional CAC-12 Microphone Holder to the camera, then mount the microphone in this

Fitting the optional CAC-12 Microphone

Remove the two retaining screws (M3 \times 8) for the optional microphone holder, then use these screws to attach the CAC-12 Microphone Holder.

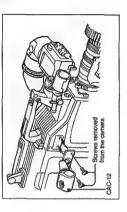


Fitting an optional microphone

Use the following procedure to attach an optional ECM-670 Microphone.

open the holder and replace the Loosen the screw of the CACmicrophone adaptor with the one supplied with the ECM-670 Microphone. 12 Microphone Holder, then



microphone holder, close the holder, and tighten the screw. Connect the microphone cable to the MIC IN +48 V Insert the microphone in the

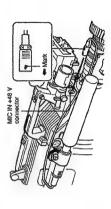

Chapter 2 Fitting and Connections


Chapter 2 Fitting and Connections 32

DXC-D35/D35WS(UC) DXC-D35P/D35WSP(CE) V1

Fitting optional microphones (operable with a 48 V supply) other than the ECM-670 Use the same fitting procedure as for the ECM-670, but note the following differences with respect to the microphone adaptor.

ECM-672: no microphone adaptor required. Sleader microphones (19 mm (94 inch) diameter): use the microphone adaptor supplied with the

Fitting to a Tripod

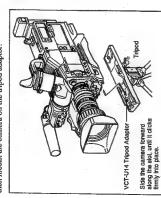

Removal



First fit the VCT-U14 Tripod Adaptor to the tripod, then mount the camera on the tripod adaptor.

When using the camera on your shoulder, attaching the optional CAC-4 Chest Pad reduces the load on your Using the Optional CAC-4 Chest right hand supporting the zoom lens, and makes operation easier.

Using the Carrying Case

Stowing the camera

After removing the camera, if the tripod adaptor pin has not returned to its original position, hold down the the dutton and move the lever in the direction of the arrow to return the pin to its original position. It is not possible to mount a camera with the pin left out.

Align the camera with the base of the case, and slide Checking that the pin at the rear engages correctly, push forward until it locks into place. the camera in forward.


Notes

- slide it fully rearward and to the left, then fix before · Bring the viewfinder into the horizontal position,
- When an optional microphone (BCM-670/672, C-74, etc.) is attached, loosen the microphone fixing screws, move the microphone to the lowest position, and fix before stowing.

Align the camera with the base of the

Example of fully-stowed carrying case

For details see the instructions provided with the CAC-4.

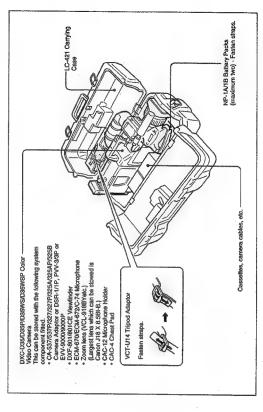

32 Chapter 2 Fitting and Connections

Chapter 2 Fitting and Connections

-20 dB -20 dB

Composite

XC

Audio output signal level -60 dB

Video output signal

lector

VTR selector settings nn the CA-327/327P

on the VO-6800/6800PS to -60

itch on the AG-7400 to Y/C.

Connections

Connecting a Portable VTR

Camera Adaptor and a camera cable, you can connect a portable VTR. Set the VTR selector switch on the Using the optional CA-537/537P or CA-327/327P camera adaptor according to the VTR connected.

l using a VTR from another manufacturer, consult your

Checks before making connections

Check first that the video camera, camera adaptor, VTR, and other devices are all powered off.

When using the camera with a CA-537/537P/327/327P

Setting the VTR selector switch on the camera adaptor

VTR selector switch on the camera adaptor according type of video signal output from the VTR/CCU/CMA to the VTR connected. This switch determines the

connector and the audio output signal level.

Example: When using a CA-537/537P VTR SELECT switch

Camera Adaptor, it is essential to correctly set the

Making connections

Using a camera cable, connect the VTR/CCU/CMA connector on the camera adaptor to the camera input connector of the VTR.

Example: Connecting a BVW-50/50P Portable VTR to a CA-537/ 537P Camera Adaptor			DXC-D35/D35P/ D35WS/D35WSP	able	Not COURT OF THE PROPERTY OF T
Example: Connecting a BVW-537P Camera Adaptor	CA-537/537P Camera Adaptor	26-pin connector	VTR/CCU/CMA	CCZ-A Camera Cable	26-pin connector

Camera cable

The maximum camera cable extent is 10 m (33 ft). · Select a camera cable to fit the camera input connector on the VTR you are using.

For details, consult your Sony dealer.

VTR selector settings on the CA-537/537P

an S-video input connector and connecting it to the S-

video connector of the VTR will allow you to

monitor a clear picture, with no flecking.

• If using an S-VHS VTR, using a video monitor with

Video monitor

• The output video signal from the VIDEO OUT connector of this unit is a composite video signal. Connect the VIDEO OUT connector of this unit to a

composite video signal input connector of the

monitor.

					Ì
Connected VTR	VTR selector switch setting	Video output signal	Audio output signal fevel	Connected VTR	VTR selecto switch setting
Sony broadcast and professional VTRs: BVU-150/150P, VO-6800/6800PS*, BVW-	_	Composite (BVU-150/ 150P and VO- 6800/6800PS)	-60 dB	Sony broadcast and professional VTBs: BVU-150/150P and VO-6800/6800PS**	-
50/50P and BVV-5/ 5PS**		(BVW-50/50P and BVV-5/		Sony professional VTRs: VO-8800/8800P and EVV-9000/9000P	en .
Sony professional	9	Y/C	-60 dB	Panasonic AG-6400 VHS VTR	Q
VTHS: VO-8800/ 8800P and EVV-9000/ 9000P				Panasonic AG-7400 S- 4 VHS VTR [®]	4
Panasonic AG-6400 VHS VTR	2	Composite	20 dB	a) Set the audio input level on the dB.	ret on th
Panasonic AG-7400 S- VHS VTR [®] and JVC BR-S405 S-VHS VTR	en en	Y/C	-20 dB	b) Set the input selector switch of	Switch

a) Set the audio input level on the VO-6800/6800PS to --60

b) When the BVV-5/5PS is used as a portable VTR, a VA-5/5P VTR Composite/Component Adaptor is required.
c) Set the input selector switch on the AG-7400 to Y/C. Connecting a Number of Cameras (Using a Camera Control Unit)

The figure in the next page shows an example studio configuration.

For details, consult your Sony dealer.

be necessary to use a CCU-M5/M5P/M7/M7P Camera cameras, and special effects and other devices to allow

switching, wipcs and so forth. In the studio it may also be convenient to use a DXF-41/51 Viewfinder.

When using a number of cameras in the studio, it may Control Unit to provide video and color sync between When using a camera control unit, put the camera head into the EZ mode off state beforehand (see page 14). (Otherwise, it is impossible to access the

 With the DXC-D35/D35P/D35WSL/D35WSPL, color matrix switching on the CCU-M5/M5P is • When the DL in advanced menu page 2 is set to ON (see page 64) and the OUTPUT/DL/DCC+ switch is set to DL, knee adjustment does not function on the CCU-MT/MTP.

37

Chapter 2 Fitting and Connections

Chapter 2 Fitting and Connections

36


DXC-D35/D35WS(UC) DXC-D35P/D35WSP(CE) V1



When using two or more synchronized cameras whith a camera control unit, connect an external sync signal to the GEN LOCK IN connector on the camera stagator (CA-537/537P etc.), supplying a VBS or BS

signal. The camera will then operate synchronized to this signal.

You can adjust the synchronization using the basic menus. (See page 59.) Example 2: Cameres 1 and 2 synchronized to the signal from a special effects unit or similar CA-537/537P CA-537/537P VIDEO OUT GEN LOCK IN VIDEO OUT BNC cable BNC cable BNC cable Example 1: Camera 2 synchronized to the signal from camera Video input connector Video input connector CA-537/5378

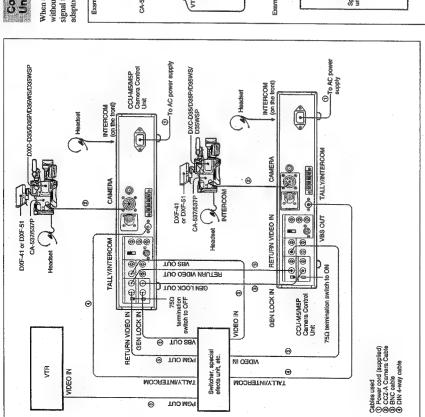

38

Power Supply

This unit operates on either a battery pack or an AC supply (using the optional CMA-8A/8ACE AC

For details of the power supplies which can be used, refer to the documentation supplied with the VTR connected to this unit or the camera adaptor.

Using an Anton Bauer Intelligent Battery System and Ultralight System

Fitting the special battery mount made by Anton Bauer Intelligent Battery System and Ultralight System. Corporation to this unit allows you to use their

Battery pack With camera With DSR-1/ With PVV-3/ adaptor 1P

DXC-D35/D35P

| 110 minutes | 50 minutes | 60 minutes | 85 minutes | 45 minutes | 140 minutes | 140 minutes | 140 minutes |

For details, consult your Anton Bauer products supplier or Sony dealer.

Using Battery Packs

Always fully charge a battery pack before using it.

• Be careful that other metal objects do not come in conlact with the metal parts of the battery pack, as

Do not leave the battery pack in the camera if it is not going to be used for a long time. this could cause a short.

If the battery pack is recharged after use while still hot, it may not be possible to obtain a full charge.

Fitting a battery pack (NP-1B)
Open the lid of the battery case, insert a fully-charged battery pack, and close the lid.


indication appears in the viewfinder. At this time, the

BATT indicator in the viewfinder flashes when

When the voltage of the supply to the camera head

Battery low indications

lowers to or below 11.0 V, the battery voltage

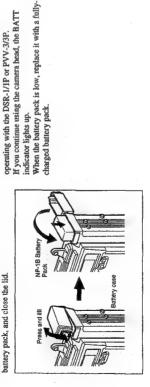

Battery pack	Battery charger	Approximate charging time (normal temperature)
NP-1A	BC-1WD/1WDCE, BC-410/410CE	70 minutes
NP-1B	BC-1WD/1WDCE, BC-410/410CE	se minutes
BP-90A	BC-410/410CE	160 minutes

Camera Adaptor Power Supply

With DSR-1/1P or PVV-3/3P

With camera adaptor

DXC-35WSL/D35WSPL

BP-90A®

NP-1B

50 minutes 35 minutes

The camera adaptor automatically operates on power supplied to the VTR/CCU/CMA connector from the portable VTR, CCU-M7/M7P Camera Control Unit, CMA-8A/8ACE AC Adaptor un other connected

a) Requires the special-purpose DC-500 Battery Case. Cannot be used with a camera adaptor.

105 minutes

70 minutes

NP-1A BP-90A*

NP-1B

when it is necessary to prolong the operating time, use power required by the camera. If it is not able to provide the necessary power, or Before use, check that the device connected to the VTR/CCU/CMA connector is able to provide the the camera with a separate power supply.

Battery pack charging

Before using a battery pack, charge it as shown in the following table.

operating times, when operating the camera and 1.5-inch viewfinder at normal temperatures, with a camera

adaptor and an DSR-1/1P or PVV-3/3P connected.

Approximate operating times with a fully-charged battery pack


The following table shows approximate continuous

Battery pack operating times

For details of battery charger operation, refer to the instructions provided with the battery charger to be used.

Chapter 2 Fitting and Connections 40

Shooting

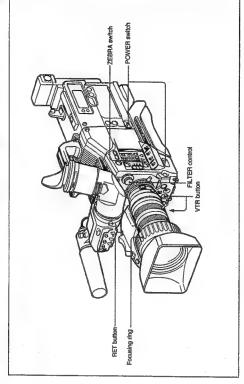

Attach the VTR or camera adaptor to the camera head, then turn each device's power on.

2 Set the FILTER control appropriately for the lighting conditions.

Chapter 3 Shooting 43

Basic Procedure for Shooting

I UTurn the focusing ring so that the subject is	Strappy in rocus. It may be convenient to use the EZ FOCUS button for the "easy focus" function	(see page 14).	Set up the VTR according to your shooting objectives, then start recording.	the VTR button on the camera head or on the	lens. If a camera control unit is connected: Press the VTR's record button to begin recording.	The state of the s
Filter setting Lighting conditions	Studio halogen lighting (Incandescent), sunrise and sunset.	Sunlight, This setting includes a 1/a neutral density	filter (reducing the exposure by the equivalent of three stops). Use it to prevent hunting" or to reduce the depth of field?	Cloudy or rainy outdoor shooting, and fluorescent lighting.	Sunlight, This setting includes a 1/4 neutral density filter (reducing the exposure by the	equivalent of six stops). Use it to prevent hunting ¹⁾ or to reduce the depth of field ²⁾ .
Filter setting	1 (3200K)	2 (5600K + 1/e Sunlight, ND) This setti		3 (5600K)	4 (5600K + 1/⊶ND)	

Check the switch settings on the camera head. (See pages 13 to 18.)

settings, you can use "easy mode" by setting the EZ MODE switch to the ON position. The camera is automatically adjusted to standard settings, and the Iris and the white balance are adjusted If there is not sufficient time to check the camera automatically. (See page 68.)

in the viewfinder light(s), and "REC" appears on the viewfinder screen. • Depending on the setting of the REC TIME

· During recording, the REC/TALLY indicator(s)

For details of VTR setup and operations, see your VTR's operating instructions.

recording time or the length of the camera cut on

switch (See page 15), you can display the total

· When recording on the DSR-1/1P, you can use

the viewfinder screen.

Check the settings in the basic menu (page 58) and advanced menu (page 64).

4

Check the lens settings (pages 30 and 31) and flange focal length adjustment (page 89). IJ

audio level. To do this, you must first set up the DSR-1/1P to enable manual adjustment of the

audio recording level.

camera head to manually adjust the channel 1 the AUDIO LEVEL knob on the front of the

Adjust the eyepiece focus, and the contrast and

brightness of the viewfinder image (page 88). Check the sound system settings. Microphone connections ဖ

safety zone (basic menu page 5 and advanced menu page 4) and zebra pattern (ZEBRA switch) 8 If required, switch on the center marker and/or · Settings on the VTR (refer to the VTR instructions)

9 Adjust the white balance (page 79) and black balance (page 83).

in the viewfinder image.

Reviewing the recording

Depending on how long the button is pressed, the tape Press the VTR button to pause recording, then press It is possible to review the last few seconds of the is automatically rewound over the last two to ten recording on the tape (recording review) the RET button on the lens.

review is possible.

The VTR then returns to the paused state.

seconds from the paused position, and then this part is

played back in the viewfinder. If the RET button is

kept pressing, about ten seconds of the recording

This function may not be provided by some VTRs. Refer to the instructions for the VTR.

Using the DynaLatitude Function

This function detects the bright and dark parts of the subject and automatically adjusts for the appropriate contrast. The DynaLatitude function enables fineluminance level of each pixel. It is effective when shooting scenes with mixed light and dark parts. grained contrast adjustment according to the



12To pause recording, press the VTR button again.

For details of this operation, see the operating instructions for the DSR-1/1P.

DL ON

may change if the subject moves during shooting.

Also, for some subjects, there may be increased noise However, the brightness of the subject on the screen in dark sections of the picture.

For information on turning this function on and off, see page 64. For information on setting effect levels, see page 59.

1) Hunting: This occurs if the automatic iris function is not able IN reach a stable state, and III a result the image brightness keeps changing, alternately lighter and darker.

Depth of field: This is the range over which the subject is sharply in focus.

Chapter 3 Shooting 44

DXC-D35/D35WS(UC) DXC-D35P/D35WSP(CE) V1

1-23

Shooting with the DSR-1/1P

The DXC-D35/D35P/D35WS/D35WSP docks with the DSR-1/1P to configure a DVCAM Camcorder. The following describes how to shoot using a DVCAM camcorder.

Using the ClipLink Function

index pictures (Mark IN point images) that provide a searchable index of recorded scenes, along with other The ClipLink function can be used at all stages from operations more efficient by automatically recording shooting to editing. This function makes editing data such as time code and scene numbers. For concept of the ClipLink function, see the section "What Is ClipLink"(page 102).

Dock the DSR-1/1P to the camera head and turn on the power, then perform steps 2 to 10 from "Basic Procedure for Shooting" (page 43).

Insert a cassette into the DSR-1/IP and set ClipLink mode to ON by menu setting.

N

For details of this operation, see the operating instructions for the DSR-1/1P.

The following display appears on the viewfinder screen.



For details, see "Basic menu page 6" (page 60).

Access basic menu page 6 to specify a name or To record the cassette name/number number for the inserted cassette.

For details, see "Basic menu page 6" (page 60).

3 Press the VTR button on the camera head or the

Meanwhile, the time code at the recording start point (Rec IN) is recorded (HH:MM:SS) in the The DSR-1/1P starts recording, and the REC/ FALLY indicator lights in the viewfinder. DSR-1/1P's internal memory

198).

When a shooting of the scene completes, press the VTR button on the camera head or the lens. 4

This pauses recording.

To continue recording the next scene, repeat steps

and 4. The scene number will be automatically

shooting the next scene, the previous scene will be designated as "NG" (the "NG" display appears in If you press the NG button before you start To set/clear NG (No Good) the viewfinder).

previous scene has been re-designated as "OK"). Each time you press the NG button before starting shooting the next scene, the status of the previous always the last selected status that will take effect shooting the next scene (the "NG" display in the scene toggles between "NG" and "OK". It is pressing the NG button again before you start viewfinder disappears, which means that the Once NG has been set, you can cancel it by and be stored in the cassette memory.

d

To finish recording, press the STOP button on the DSR-1/1P. ιΩ

This stops recording.

you continue shooting after stopping or if you change When using the ClipLink function while shooting, if

To avoid this problem, press the DSR-1/1P's ClipLink ClipLink log data (time codes, scene number, etc.) or the tape's recording position, your subsequent shots may overwrite and erase the previously recorded CONTINUE button before restart of shooting. index pictures.

For details, see the operating instructions for the DSR-1/1P.

where you would like to set a Mark OUT point. Press the TAKE button when you find a shot IJ Setting Mark IN/OUT points as you shoot

Instead of continuing shots from scene to scene, you

can specify Mark IN and Mark OUT points as you shoot and set scene numbers (ranging from 001 to Perform steps 1 and 2 from "Using the ClipLink

Function" (page 46).

2 Access basic menu page 6 and perform the

The TAKE/TALLY indicator (orange) goes out in Mark IN/OUT point for scene 001 is recorded to the viewfinder and the "TAKE" disappears from At this time, the time code (HH:MM:SS) at the the DSR-1/1P's internal memory, and then

recorded to the cassette memory.

If you press the NG button before you set the next Mark IN point, the previous scene will be designated as "NG" (the "NG" display appears in Once NG has been set, you can cancel it by To set/clear NG the viewfinder).

pressing the NG button again before you set the

Set the cassette name or number if necessary.

The ClipLink mode indication "CLIP M"

1) Set MARK/CUE to MARK.

following operations

appears on the viewfinder screen

next Mark IN point (the "NG" display in the

viewfinder disappears).

Repeat steps 4 and 5 as needed to record (to cassette memory) time codes at Mark IN/OUT points, scene numbers, and NG designations to the 9

Press the VTR button on the camera head or the


ന

For details of menu operations, see "Basic Menu Operations" (page 58).

TALLY indicator(s) light(s) in the viewfinder. The DSR-1/1P starts recording, and the REC/

The scene number is automatically incremented each time you specify a Mark OUT point. cassette memory

7 To finish shooting, press the VTR button on the camera head or the lens, then press the DSR-1/1P's STOP button.

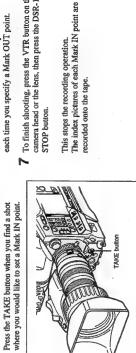

The TAKE/TALLY indicator (orange) lights in the viewfinder and "TAKE" appears on the screen.

Chapter Shooting

47

Chapter 3 Shooting

Shooting with the DSR-1/1P

Setting cue points as you shoot

You can make edit search operations easier by specifying cue points to highlight scenes. Perform steps 1 and 2 in "Using the ClipLink Function" (page 46).

The ClipLink mode indication "CLIP C" Access basic menu page 6 and perform the appears on the viewfinder screen. following operations.

1) Set MARK/CUE to CUE.

 Set the cassette name or number if necessary. For details of menu operations, see "Basic Menu Operations" (page 58).

3 Press the VTR button on the camera head or the

Meanwhile, the recording start point (Rec IN) is The DSR-1/1P starts recording, and the REC/TALLY indicator lights in the viewfinder. recorded in the DSR-1/1P's internal memory.

The "CUE" indication appears (for about I second) on the viewfinder screen. At this point, the time code (HH:MM:SS:frame) at the cue point is Press the TAKE button when you find a shot where you would like to set a cue point.

5 Repeat step 4 to specify more cue points.

recorded into the cassette memory.

6 To finish shooting, press the VTR button on the camera head or the lens, then press the DSR-1/1P's STOP button.

(scene 001) are recorded to the cassette memory and the index picture of the Rec IN point is Time codes (HH:MM:SS) and scene number This stops recording operation. recorded onto the tape.

Using the Edit Search Function While Back Space Editing

find the desired tape location after a recording stop during back space editing or when continuing to record from any other location on the tape. While the DSR-1/IP is in recording pause mode, press and hold the EDIT SEARCH buttons to activate the search playback function for 11st long as you hold down the button. You can use the edit search function to

Press the VTR button on the camera head or the

lens.

ıo

The DSR-1/1P enters recording pause mode.

Dock the DSR-1/1P to the camera head and turn on the power, then insert ${\rm I\!I}$ cassette into the DSR-1/1P.

The freeze mix function superimposes a freeze-frame

Using the Freeze Mix Function

The DSR-1/1P starts recording.

image of a previously recorded shot on the shooting image displayed on the viewfinder screen.

You can use this function to easily frame a subject

within the same framework from a previous shot.

Press and hold either of the EDIT SEARCH buttons (REV or FWD) Shooting" (page 43). က

2 Perform steps 2 to 12 in "Basic Procedure for

mode for as long in you hold down the REV or The tape is moved in reverse or forward search FWD button, and the image is shown in the viewfinder.

Press the REV or FWD button down firmly into the inner position to make the tape move at the faster speed. Press the button down lightly to make the tape move at the slower speed. To change the playback speed

The following indication appears on the screen.

PLAY

Press the MENU/STATUS switch down.

Do not shut off the camera head's power while using the cdit search function. The DSR-1/1P may not be able to find the continue point. Note

EXIT MENU (YES+A)

FREEZE MIX(ON→▲)

5 Press the UP/ON button when you see the image you want to freeze.

Release the REV or FWD button when you find

4

the tape location where you wish to continue

The frozen playback image is displayed, mixed with the shooting image, in monochrome. The indication "FREEZE MIX ON" appears on the

FREEZE MIX ON MIX OFF (YES+A) To release the freeze mix mode, press the UP/ON button again.

This returns to the screen shown in step 3 above, Press the DSR-1/1P's PLAY button. To change the freeze-frame image and color playback mode begins.

Note When the camera head is in EZ mode, the freeze mix function is disabled. Release the EZ mode beforehand.

Use the DSR-1/1P's tape transport buttons to find the desired image and then perform steps 4 and 5

6 Once you have framed your subject, press the UP/ ON button to cancel the freeze function.

Find the recording start point or insert a new cassette for recording, then begin recording.

Play back the tape on which the image to be used

က

for framework alignment has been recorded.

For playback operation, refer to the operating instructions for the DSR-1/1P.

Perform steps 2 to 10 from "Basic Procedure for

N

Shooting" (page 43).

connect a color monitor to the MONITOR OUT

Dock the DSR-1/1P to the carnera head and

(See page 14.)

during back space editing, the back space editing mode will be stopped. When you were using the ClipLink recording you will lose any ClipLink data that was recorded. To avoid this, press the DSR-1/1P's function when shooting, If you simply restart the If you use the DSR-1/1P's tape transport buttons ClipLink CONTINUE button before restarting For details, see the operating instructions for the DSR-1/1P.

49 Chapter 3 Shooting

> Chapter 3 Shooting 8

Viewfinder Screen Indications and Menus

Viewfinder Screen Indications

There are four types of indication screen which appear in the viewfinder, as follows.

in the viewfinder, as follows.

Normal indications

These show the operating state of the camera and connected VR. (See page 54.)

•Status indications

Pressing the MENU/STATUS switch up while the

Pressing the MENU/STATUS switch up while the normal indications are present calls a display of current settings. (See page 57.)

• Basic menu


These provide settings for the lens iris, shutter speed and so forth, and also a titling screen. (See the section "Viewfinder Basic Menu" page 58.)

• Advanced menu
These provide settings for the center marker, zebra pattern, viewfinder screen indications, and so forth.

(See the section "Viewfinder Advanced Menu" page

Changing the Viewfinder Display

Use the buttons and switches shown in the following figure to switch the viewfinder display among the normal indications, basic menu pages and advanced menu pages.

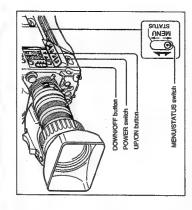

Displaying the normal indications and switching to the basic menu


To display the normal indications, move the POWER switch to the ON position.

To switch to and from the basic menu, use the MENU/ STATUS switch.

Chapter 4 Viewfinder Screen Indications and Menus

23



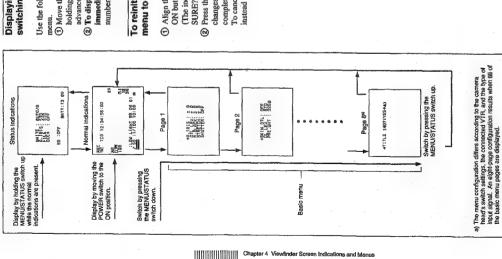

Displaying the advanced menu and switching to the normal indications

(i) Move the POWER switch to the ON position while holding down the UP/ON button to display the Use the following procedure to display the advanced

advanced menu selection screen.


(a) To display advanced menu page 1 immediately, move the cursor to the menu number and then press the DOWN/OFF button.

To reinitialize all settings in the advanced menu to their factory defaults

 Align the cursor to ALL RESET and press the UP/ ON button.
 (The indication changes to "ALL RESET) SURE?".)

© Press the UP/ON button again. (The indication changes to "ALL RESET OK" and reinitialization completes.)


To cancel the reinitialization, move the cursor instead of pressing the UP/ON button.

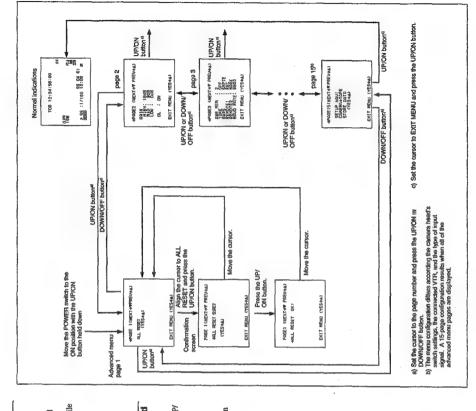

52; Chapter 4 Viewfinder Screen Indications and Menus

Viewfinder Normal Indications

Juring normal operation, the following items can be indicated in the viewfinder.

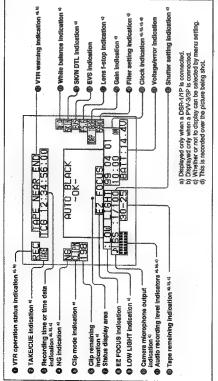

The significance of each of the indications shown in the figure is as follows.

This indicates the VTR's current operation status UVTR operation status indication (REC, PLAY, etc.).

the ClipLink function and recording with the DSR-1/ This displays a TAKE or CUE indicator when using 2 TAKE/CUE indication

TAKE: When recording in Mark mode, this indication appears when a Mark IN point is set and disappears when the next Mark OUT point is

appears for about 1 second when a cue point is set. CUE: When recording in Cue mode, this indication

8 Recording time or time data indication

• When the REC TIME switch on the camera is in the DUR position: The duration of the current recording cut This shows the following values.

• When the REC TIME switch on the camera is in the TTL position: The total recording time

on the camera head is in the OFF position and the inen TC IND in advanced ment page 6 is set to "ON": A time data vable from the VTR depending on the DISPLAY switch settings on the VTR as shown With a VTR connected, when the REC TIME switch in the following table

Setting COUNTER TC U-BIT	ecting COUNTER CM: Tape transport time TC: a time code from the time code generator TCR: a time code from the time code	UNV LIGHT indication This warning appears if the lighting level is inadequate. Camera microphone output indication This appears when there is an input from the cammicrophone.
han neing the DC	bit generator	Note This indication serves as a check on whether the

When using the DSR-1/1P, time data values appear during playback, fast forward, rewind, or recording

camera microphone is operating correctly, but it does not provide confirmation that the VTR is recording sound. Check that the audio recording levels on the

VTR are set correctly.

An "NG" (No Good) indicator appears if you designate a recorded scene as "NG" when using the ClipLink function and recording with the DSR-1/IP. NG indication

0	iese show the recording levels of audio channels 1	2 on the VTR.	
	These show to	and 2 on the	

A "CLIP M" or "CLIP C" indication appears when you use the ClipLink function and record using the

Clip mode indication

CLIP M: Indicates shooting in Mark mode CLIP C: Indicates shooting in Cue mode

		******	ods 1 +3 #B	
Channel 1	Channel 2		PVV-3/3P -20 dB DSR-1/1P - ∞	

displayed when you use the ClipLink function with the

The number of available index pictures remaining is

O Clip remaining indication

Status display area
One of the following values or messages is displayed

to indicate the camera head's current status or its

operation status.

New values when changing camera head's settings

Messages indicating progress or results of

This shows the tape remaining in the VTR as follows. Tape remaining indication

Indication	Tape remaining
F-30	At least 30 minutes
30-25	25 - 30 minutes
25-20	20 - 25 minutes
20-15	15 - 20 minutes
15-10	10 - 15 minutes
10-5	5 - 10 minutes
5-0	2 - 5 minutes
5-0 (flashing)	0 - 2 minutes

The camera head's current settings
 SetupLog data recorded to tape during shooting (see

page 78) Note

This shows warning indications about operation or WTR warning indication status of the connected VTR.

When connecting the DSR-1/1P or PVV-3/3P

This appears when the EZ FOCUS button is pressed,

© EZ FOCUS indication

enabling the "easy focus" function.

The status indication is not shown while the EZ

FOCUS indication @ appears.

Indication	Meaning
NO TAPE	There is no tape loaded.
REC INHIBIT	The tape is in the recording inhibited state.
LOW BATT.	The battery is almost exhausted,
BATT. END	The battery is exhausted.
TAPE NEAR END	The tape is near the end.
TAPE END	The tape is at the end.
(PVV-3/3P only)	A device other than a remote control unit (e.g. headphones) is connected to the REMOTE connector.
SERVO	The servo lock has been lost.
HUMID	There is condensation.
9g	The video heads are clogged, or there is some other fault in the recording system.
SLACK	The tape is not wound properly.
OXIDE TAPE (PVV-3/3P only)	An oxide tape has been toaded. (The tape is automatically ejected.)

Chapter 4 Viewfinder Screen Indications and Menus

22

Chapter 4 Viewfinder Screen Indications and Menus 54

Viewfinder Normal Indications

Only when connecting the DSR-1/1P

Indication	Meaning
50P CONNECT	Connection with the PRO 50-pin connector on the DSR-1/1P. (Freeze mix function is disabled.)
MP TAPE	An incorrect type of cassette has been loaded. (The cassette is automatically ejected and the indication disappears in about two seconds.)
CLIP DATA ERR	Abnormality of the cassette memory data.
AUDIO 48kHz? (4 flashes/s)	At back space editing, audio recording mode has changed from 32 kHz mode (4-channel mode) to 48 kHz mode (2-channel mode).
AUDIO 32kHz? (4 flashes/s)	At back space editing, audio recording mode has changed from 48 kHz mode (2-channel mode) to 32 kHz mode (4-channel mode).
ERROR:91-13F	Failure in loading or saving the cassette memory data. When other error indication appears, refer to the operating instructions for the DSR-1/1P.
CLIP CONT?	Asking whether you will continue shooting in ClipLink mode or not when the cassette contains ClipLink data. (The indication disappears when you press the ClipLink when you press the ClipLink or start the next shooting without if or start the next shooting without it.)
CLIP NEAR END	At back space editing in ClipLink mode, capacity for only 1 to 3 index pictures remains.
CLIP END	Impossible to record any more clip

White balance indication The following indications appear.

HIGHCRION	indication Meaning
EZ	Operating in EZ mode (The ATW function is selected.)
ATW	The ATW function is selected. (The ATW button was pressed and the indicator is lit.)
W:A	White balance memory A is selected.
W:B	White balance memory B is selected.
W:P	Preset white balance is selected.
M:W	Manual adjustment is performed remotely.

© SKIN DTL indication
This appears when the skin detail function is activated (The SKIN DTL switch is set ON.)

Chapter 4 Viewfinder Screen indications and Menus

88

EVS indication

This appears when the EVS (Enhanced Vertical definition System) function is enabled. (See page 84.)

This shows the f-stop of the lens. D Lens f-stop indication

Depending on the lens being used, this indication may differ slightly from the actual f-stop on the lens.

(page 62).

This shows the gain value, and the settings of the HYPER GAIN switch and the DPR (Dual Pixel Readout) function (see page 64) as shown in the following table. B Gain indication

percentage		g is 18 dB. @ Shutter setting indication	The DPR function is enabled. When the SHUTTER switch has been set to ON, the in this case the DPR function	approximately doubles the gain (an increase of 6 dB) over the current menu page 1 is displayed here.	gain setting (in this case 18 dB). The HYPER GAIN switch is in the	ON position. In this case the hyper gain function	increases the gain by a tactor of about 60 or 120 with respect to 0	dB regardless of the current gain seating (that is, increased to 36 or
	Meaning	Gain setting is 18 dB.	The DPR fi	approximal increase of	gain setting	ON position.	increases t about 60 or	dB regardle
	Example Indication	18dB	DPR 18dB		нурея			

(a) Filter setting indication
This shows the setting of the FILTER control.

Indication	Filter setting
3200	1 (3200K)
SeND	2 (5600K + 1/8ND)
5600	3 (5600K)
SGND	4 (5600K + 1/64ND)

The clock indication is shown in one of the following ways (according to the CLOCK IND setting of CAM, BARS, or OFF in advanced menu page 8). CAM: Always displayed.
BARS: Displayed whenever color bars are Clock indication

displayed.

OFF: Not displayed. If the clock indication is displayed during recording, it is recorded onto the image.

Status Indications

while a menu is being displayed, the camera head's current setting status will be shown in this display If you set the MENU/STATUS switch to STATUS

> any time by pressing and holding the MENU/STATUS switch in the upward position (the display is shown for as fong as you hold the switch upward).
>
> An error message is displayed when an abnormality has been detected by the auto disprostic function

However, you can also display the current voltage at

Wollage/error indication
The current voltage is displayed whenever the camera
head's power supply voltage dips below 11.0 V DC.

		atitude
A 3200K STD STD OFF#	OFF BATT: 13.00	he DCC+ and Dynal
WHITE ALIRISE FILE DCC+	SS	a) When both
		J ~

If an error message appears, contact your Sony dealer. II using a VTR and an Anton Bauer Intelligent The remaining battery capacity is shown as a

Battery System

	atitude
BATT: 13.00	When both the DCC+ and DynaLatitude . functions are set to OFF
	(a)

Display	Description
WHITE	While balance adjustment method selection (PRE/A/B) and color temperature during auto white balance adjustment
A.IRIS	Iris adjustment method selection (STD/SPOT L/BACK L)
PILE	STD (when not using the setup files), or a selected file name (when using the setup files) (see page 71).
DOC+ or DL	For DCC4 indication: ON with the OUTPUTDLDCC4- switch set to CAMDCC4 (DCC4ON), and OFF with the switch set to CAMDC and DL in advanced menu page 2 (page 84) set to OFF (both DCC4 and DynaLatitude OFF). For DL indication: When setting the OUTPUTDLDCC4- switch to DL and DL in advanced menu page 2 to OFF (DynaLattude OFF). LOW, STD or HIGHI is displayed according to DL.

Chapter 4 Viewfinder Screen Indications and Menus

Viewfinder Basic Menu

basic menu configuration can include up to eight pages (the configuration depends on the switch settings and To display the basic menu pages, press the MENU/ STATUS switch downward while the normal indications are being shown in the viewfinder. The the type of connected VTR)

Basic Menu Operations

The common operations on all basic menu pages are described below.

To change the page or item

MENU/STATUS switch to go to the next page. When the last page is being displayed, pressing down the MENU/STATUS switch returns the display to the The cursor is moved downward each time you press the MENU/STATUS switch down. Once the cursor has reached the last item on a page, press down the normal indications.

The cursor is moved upward each time you press up the MENU/STATUS switch. Once the cursor has reached the first item on a page, pressing up the MENU/STATUS switch returns the display to the

To change settings

To reset any item to its shipped settings, press the UP/ ON button and the DOWN/OFF button at the same time. cursor to the item on which you will change the setting, press either the UP/ON button or the DOWN/OFF button to select the desired value. After using the MENU/STATUS switch to move the

Contents and Settings of Each

Basic menu page 2

Each page's contents and settings are described below

ASKIN OTL: 0.0 DL LEV STO PRE.WHT : 3200

MODE is set to 2 in advanced menu page 9, a page for aspect ratio settings (16:9/4:3) is added before basic On the DXC-D35WSL/D35WSPL, when the MENU menu page 1.

Basic menu page 1



_			(STD), OF IOW RIVER.
		PRE.WHT Sets the color temperature of the	When the FILTER control is set to 1 (3200K): 2200 to 3200 (normal value) to 4300
Rem	Settings	preset white	When the FILTER control is set to
A. IRIS Sets a base value	-1.0, -0.5, ±0 (normal value), +0.5, +1.0	palance.	(5600K + ½ ND); 3 (5600N) of 4 (5600K + ½ ND); 4600 to 5600 (normal value) to 12000
for auto adjustment of lens iris.	Negative adjustment values set a narrower lens ins and positive values set a wider lens iris.		
DTL LEV Sets the detail (edge) emphasis.	-99 to ±0 (normal value) to +99 Negative adjustment values soften the image's edges and positive values sharpen them.	Basic menu page 3 This is displayed when the	Basic menu page 3 This is displayed when the SET UP switch has been set to FILP.
M. BLACK Sets the master pedestal level.	-89 to at (normal value) to +99 Negative addissions values make dark areas of the picture darker and increase the contrast. Positive adjustment values dark areas of the picture lighter and reduce the contrast.	. L.	FILE: 4FL MISSIET FILE MISSIES FILE CHG FILE
STRETCH Sets black stretch/ compress value.	—16 to ≥0 (formal whlue) to +15 This function adjusts the intensity of dark areas of the screen. Negaliwe walkes make these acrees darker (black compress) and positive values may make these areas brighter (black stretch).	For details of this ope	For details of this operation, see "Setup Files" (page 71).
SHUTTER Sels shuter speed or CLS/EVS setting (see page 84).	DXC-D36/D35/WSL: 1/100 (hormal value), 1/250, 1/300, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1/1000, 1		
	clear scan function.		

Basic menu page 4

This menu is displayed only when an external sync signal is input to the camera adaptor or VTR connected to the camera head.

135	
SC PHASE: H PHASE:	

0.0 (normal value) to 1.0 Smaller values set a softer skin detail.

SKIN DTL 0
Sets the amount of skin detail

DL LEV Sets the DynaLatitude level.

correction.

		Item	Settings
	LOW, STD (normal value), HIGH	SC PHASE	000 (normal value) to 999
	Set the amount of DynaLatitude	Sub carrier phase	
*	ef. effects as high level, standard level	adjustment for	
	(STD), or low level.	when camera is	
ľ	When the FII TFR control is set to 1	geniocked.~	
	(3200IC): 2200 to 3200 (normal valua)	H PHASE	000 to 135 (normal value) to 199
9	to 4300	Horizontal phase	
	When the FILTER control is set to 2	adjustment for	
	(5600K + 1/4 ND), 3 (5600K) or 4	when camera is	
-	(5600K + 1/4 ND): 4600 to 5600	genlocked.*	
	(normal value) to 12000	a) This applies wh	a) This applies when using an external sync signal to

a) This applies when using an external sync signal to synchronize operation of several cameras (see page 39).

Basic menu page 5

8 MARKER : (DUR TIME: MM: SS DO: 00

89

Viewfinder Basic Menu

Nem	Settings	Basic me
MARKER Sets MARKER display ON/OFF.	ON (normal value), OFF MARKER is displayed	
	when this setting is ON and is not displayed	the follows
	when it is OFF.	
	go to Advanced Menu 4	
	ro select trie type of marker (see page 65).	
DUR TIME	00:00 to 59:59 (minute	
Sets the recording time	to second)	
Setting the recording time	See "Setting the	
making scenes of equal	recording time in	
duration.		
When shooting with displaying the recording time of the current		
cut in the viewfinder (with the		Rem
REC TIME switch set to DUR),		MARKICUE
the recording time indication		Selects MAH
llashes to remind you that the		mode of CO
recording time has passed.		CHG REEL P

HARK/CUE: MARK CHG REEL NO: (YES→▲)

Setting the recording time in seconds
Move the cursor to DUR TIME, then press the UP/ON
button or DOWN/OFF button.

A value of seconds is displayed under "SS"

S MARKER : DI MAISS MM:SS 00:25

Settings
MARK (normal value), CUE
See "Using the ClipLink Function" See "To set the cassette name/ number" below, MARK/CUE Selects MARK mode or CUE mode CHG REEL NO Sets the cassette name/number

To set the cassette name/number (when using DSR-1/1P)

Connect the DSR-1/1P and load a cassette.

2 Press the MENU/STATUS switch to move the cursor to CHG REEL NO, then press the UP/ON button.

MARK/CUE: MARK +CHS REEL NO: (YES+A)

The cursor (\rightarrow) changes to the text entry arrow (\downarrow) and the current cassette name/number is displayed. ("NO TAPE" is displayed if you neglected to load Il cassette.)

Current cassette name/number MARK/CUE: MARK CHG REEL NO:

Press the MENU/STATUS switch to move the text

entry arrow.

The following display is shown when the DSR-1/1P is

Basic menu page 6

Press the MENU/STATUS switch upward to move the cursor to the right or downward to move it to the left,

The character cycles through the following

-- ABCOEFIGHT JACHWORDST TUMMY27;x/0123456789;<>>.. 🗅 -

4 Press the UP/ON button or DOWN/OFF button to (Space) enter the desired characters.

The displayed character changes each time the UP/ ON button is pressed. It changes in reverse order each time the DOWN/OFF button is pressed.

Return to step 2 and repeat the text entry procedure. S

6 After completing text entry, move the text entry cursor to the parenthesis position.

The display changes as follows. MARK/CUE: MARK CHG REEL NO: OMRITE? (YESOA) 7 Check your cassette name/number setting, and press the UP/ON button if no more changes are required. (To make changes or to about the required. procedure for this setting, return to step 2.) This writes the new cassette name/number to the cassette memory, after which the display changes ns follows.

MARK/CUE: MARK ACHG REEL ND: DONE (DEF)

Basic menu pages 7 and 8

You can occate a title of up to four lines, each of twelve alphanumeric or punctuation characters, and then save it. It is then possible to record the title over the picture while shooting.


Entering the title (page 7)

Press the MENU/STATUS switch as necessary to display basic menu page 7 (title setting display) in the viewfinder.



If a title is already present, it appears on this screen. To delete the displayed title, press the UP/ ON and DOWN/OFF buttons simultaneously.

2 Press the UP/ON button.
This brings up the cursor on the screen (flashing), and switches to title editing mode.

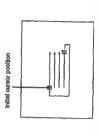

3 Press the DOWN/OFF button to move the cursor to the position where you wish to insert a character.

To move the cursor back
With the DOWN/OFF button held down, press the
UP/ON button.

(continued)

6

Chapter 4 Mewfinder Screen Indications and Menus

Chapter 4 Viewfinder Screen Indications and Menus 00

8

Viewfinder Basic Menu

Each time you press the UP/ON button, the character cycles through the following sequence. Press the UP/ON button to select the required

--- PBCDEFGH1_JKLMNOPQRSTIJJAVYZ2; x/0123456789;<>-.. 🗆 --

To reverse the character sequence With the UP/ON button held down, press the DOWN/OFF button.

The cursor advances to the next character position. Press the DOWN/OFF button to confirm the To change a character after confirming it character selection.

Repeat steps 4 and 5 until the title is complete. 9

Return to step 3, and input the character again.

À-000-040

STATUS switch as necessary to return to the normal viewfinder indications.

The title created is retained, even when you power When the title is complete, press the MENU/

Press the MENU/STATUS switch as necessary to To record a title (page 8)

access basic menu page 8 (title display). TITLE IND?(YES#A)

2 Press the UP/ON button once.

The title is superimposed to the picture displayed on the viewfinder screen.

3 Start shooting.

4 To stop the title recording, press the MENU/

When the CCU-M5/M5P has a function switch setting STATUS switch to clear the title display. Note on using the CCU-M5/M5P Camera Contr

of "TITLE ON", the title display takes precedence, and

the status display (see page 57) do not appear in the

normal incidations. However, when you press the MENU/STATUS switch up, for an long as you hold it up the status indications appear in place of the title.

Example: If an abnormality is detected in the DSP circuit,

DIAG ERROR DIGENOSIS DSP : ERROR NEMORY: OK

The error message "DIAG ERROR" appears when the normal indications are displayed. If this message appears, contact your Sony dealer.

When "CHECK DIAG" is displayed

display area whenever the camcorder's automatic self diagnostic function detects an abnormality. Access this page and perform error checking. (This page is The "CHECK DIAG" indication appears in the status "CHECK DIAG" will also be displayed if there is a problem on the sync signal input to the GEN LOCK IN connector. Input a proper sync signal and then displayed as basic menu page 1.) perform error checking.

→CHECK DIAB (YES→A)

To perform error checking Press the UP/ON button.

The error checking performs on the digital signal processing (DSP) and memory circuits and the results are displayed.

When no error is detected, "OK" appears.

> Chapter 4 Viewfinder Screen Indications and Menus 85

button up (see page 52). There are up to 15 advanced menu pages (the number displayed depends on the switch settings and the type of connected VTR). Bring up the advanced menu pages by setting the POWER switch to ON while pressing the UP/ON

When the camera is in EZ mode, the advanced menu does not appear. Release the EZ mode beforehand. (See page 14.)

Advanced Menu Operations

To change the page

Move the cursor to the menu number, then press the JP/ON button or the DOWN/OFF button. Pressing the UP/ON button displays the previous page and pressing the DOWN/OFF button displays the next page. Pressing the DOWN/OFF button when the last page is being displayed returns the display to the first page.

To select items in a page
Press the MENU/STATUS switch to move the cursor among the menu items.

To change settings

cor a description of basic menu operations, see page 58. This operation is the same as for the basic menus

To return to the normal indications

Move the cursor to EXIT MENU, then press the UP/ ON button.

Contents and Settings of Each

Each page's contents and settings are described below

Chapter 4 Viewfinder Screen Indica

64

Advanced menu page 1

Use this page to return all advanced menu settings to their factory preset values.

PAGE 3 (NEXT + PREU +A)

Advanced menu page 3

AMB MEM : 2 TONE : OFF BARE : SMPTE* REMOTE: REC REMOTE: MARK BALIO RATE : 38400

For details of this operation, see "Displaying the advanced menu and switching to the normal indications" (page 52).

→PABE 1 (NEXT→▼ PREU→▲)	GLL RESET (YES+A)	EXIT MENU (YES+A)

Advanced menu page 2

PPOBE Z(NEXT-) PREU-AA) BAIN LOW LOW NICH GAB HIGH 1898 HIGH 1898 HYPER: 3648 OL : ON EXIT MENU (VES-AA)

Name Settings Se			THE PART OF THE PA
te gain values for the prositions of the GAIN switch. (GH MID, and LOW values must be set so that LOW values must be set so that LOW values are so that LOW values, and the control of th	Item	Settings	bars.
(GH, MID, and LOW values must be set so that LOW c HiGH, MID, and LOW values must be set so that LOW c HiGH, MID, and LOW values must be set so that LOW c HiGH, and LOW values must be set so that LOW c HiGH, and be good to the company of the comp	GAIN		
he L position3 ds. o dB (normal and by 2 db, 12 dB, 18 db + DPR, 24 dB, 36 dB (normal value), 18 dB + DPR, 24 dB, 36 dB (normal value), 0FF dB, 18 dB + DPR, 24 dB, 36 dB (normal value), 0FF dB, 18 dB + DPR, 24 dB, 36 dB (normal value), 0FF dB, 18 dB + DPR, 24 dB, 36 dB (normal value), 0FF dB, 18 dB + DPR, 24 dB, 36 dB, 18 dB	This sets gain values for the p The HIGH, MID, and LOW val < MID < HIGH.	positions of the GAIN switch.	
he L position. value), 3 (86, 6 48, 9 dB, 12	LOW	-3 dB, 0 dB (normal	
0 dB, 3 dB, 6 dB, 9 dB (B, 18 dB + DFR, 24 dB, 24 dB + DFR dB (normal value), 18 dB + HYPER GAIN Se dB (normal value), 42 dB (normal value), 43 dB (normal value), 44 dB (normal value), 45 dB (norm	Sets the L position.	value), 3 dB, 6 dB, 9 dB, 12 dB, 18 dB, 18 dB + DPR, 24 dB	
dB + DPR, 24 db, 24 dB (normal value), 18 dB + DPR, 24 dB, 24 dB, 24 dB + DPR, 44 dB, 24 dB (normal value), 42 dB (normal value), 42 dB (normal value), 0FF dB (normal value	QIM	0 dB, 3 dB, 6 dB, 9 dB	
2 dB, cdB, qdB, 12 dB, 18 dB, (cornal videu), 18 dB + DPH, 24 cB, 28 dB + DPH, HYPER GAIN 36 dB (normal value), 42 dB ON (normal value), OFF ON principle of the serious of Dynalatidos effects is set in basic meru page 3 (see page 59).	Sets the M position.	(normal value), 12 dB, 18 dB, 18 dB + DPR, 24 dB, 24 dB + DPR	REMOTE: Sets a function for position 1
HAPPER GABIN HYPER GABIN HYPER GABIN HYPER GABIN G GB (normal value), 42 GN (normal value), 95 ON (normal value), OFF ON (normal value), OFF On presidence effects is set in basic moru page 3 (see page 59).	HIGH	3 dB, 6 dB, 9 dB, 12 dB, 18	REMOTE1 connector.
HYPER GAIN 36 dB (normal value), 42 dB CN (normal value), OFF CN (normal value), OFF CN (normal value), OFF CN (normal value), OFF con from control (normal value), of Dynal alithole effects is set in basic meru page 3 (see page 59).	Sels the H position.	DPR, 24 dB, 28 dB + DPR,	
36 dB (normal value), 42 ON (normal value), OFF ON (phral salue) on the amount of bynal salude effects is set in basic meru page 3 (see page 59).		HYPER GAIN	REMOTE2
ON (normal value), OFF ON (normal value), OFF	HYPER	36 dB (normal value), 42	Sets a function for position 2
ON (normal value), OFF When set to ON, the amount of DynaLatitude effects is set in bestic meru page 3 (see page 59).	Sets gain value when the HYPER GAIN is selected.	9	of a switch connected to the REMOTE1 connector.
When set to ON, the amount of DynaLatitude effects is set in basic menu page 3 (see page 59).	70	ON (normal value), OFF	
set in basic menu page 3 (see page 59).	Sets DynaLatitude function	When set to ON, the amount of Dynal aritide effects is	
(see page 59).	This setting is valid only	set in basic menu page 3	BAUD RATE
	when the OUTPUT/DU	(see page 59).	Sets a baud rate for II
DL REMOTE connecto	DCC+ switch has been set to DL.		computer connected to the REMOTE connector 2 (to be

Advanced menu page 4

					١.
PPGE4 (NEXT+W PREU+A)	MARKER : CENT/98%	ZEBRA1 701RE"	·····	EXIT MENU (YES+▲)	a) For DXC-D35P/D35WSPL: 70%

MARKER Selects ON/OFF sesting for Displays center marker and center marker size setting steely zone marker and center marker, size setting steely zone marker at 90% size. ON/OFF setting. CENTROS.: Displays center at 90% size. 90%: Displays only safety zone marker at 90% size. 90%: Displays only safety zone marker at 90% size. 60%: Displays only safety zone marker at 90% size. 60%: Displays only safety zone marker at 90% size. 60%: Displays only safety zone marker at 90% size. 60%: Displays only safety zone marker at 90% size. 60%: Displays only safety zone marker at 90% size. 60%: Displays only safety zone marker at 90% size.	Item	Settings
L WOLLONG	MARKER	CENT/90% (normal value):
W WO L L W NO NO	Selects ON/OFF setting for	Displays center marker and
WOLLONG NO	center marker, size setting	safety zone marker at 90%
OL LUNUNO	(percentage of viewfinder	size.
LEGRANA	screen area), and display	CENT/80%: Displays center
marker at 80% size. 90%: Displaye only safety zone marker at 80% size. 80%: Displaye only safety zone marker at 80% size. CENT: Displaye only safety	ON/OFF setting.	marker and safety zone
90%: Displaye only eaflety Zone marker at 90% size, 80%: Displaye only safety Zone marker at 80% size, CENT: Displaye only catelot		marker at 80% size.
Zone marker at 90% size, 80%. Displays only safety Zone marker at 18% size, CENT: Displays only centler		90%; Displays only safety
80%: Displays only safety zone marker at 80% size. CENT: Displays only center		zone marker at 90% size.
zone marker at 80% size. CENT: Displays only center		80%: Displays only safety
CENT: Displays only center		zone marker at 90% size.
		CENT: Displays only center

settings. Only two

Selects whether or not to make the FILTER knob settings (1 to 4) correspond a to septings (1 to 4) correspond a dissiment values stored in memory.

EXIT MENU (YES+A)
For DXC-D36P/D35WSPL: EBU75

4:0, 10:0, 14:0, 10:0		SMPTE (normal value for
Scan size.	Selects the safety zone size when the scan size is 16.9.	
value):FDepends on the	LIMITS (For DXC-D35WSL OFF (normal D35WSPL) value):FDepe	signat.
marker.		audio signal.
CENT: Displays only cent		ON (normal value): Output
zone marker at 90% size.		a total of eight settings.
80%: Displays only safet		and B adjustment values, for
zone marker at 90% size.		settings can be used to set A
90%: Displays only safet		Each of the four knob
marker at 80% size.	,	with FILTER knob settings.
marker and safety zone	ON/OFF setting.	2 × 4FL: Correspondence
CENT/80%; Displays cen	screen area), and display	are stored in memory.
size.	(percentage of viewfinder	adjustment values (A and B)
saiety conditioned at ou	College High Sold and a security	mich semiss. City mo

Selects whether or not to educate a 1-kHz audio signal with the color bars when the sourpuryoLDCC+ has been set to BARS.

4:3, 13:9, 14:8, 16:9	1 (normal value): Displays the zebra pattern over parts having a video level. between 70 and 90 (RE (or 70 and 90%). Use the next item (ZEBRA1)
4:3, 13:9, 14:8, 15:9	ZEBRA I (normal value): Displays Selects type of zebra pattern (he zebra pattern over parts display. Indiving a video level. Defineen 70 and 90 IRE (or 70 and 90 VR (or 70 and 90 VR) Use the next item (ZEBRA1)

Normat width
EBU75 (normal value for
DXC-D35P/D35WSPL): EBU

Selects normal width or narrower width for color

75%
EBU100 (for DXC-D35P/ D35WSPL); EBU 100%
SPLIT (for DXC-D35P/ D35WSPL); Not for normal

	and 2)
ZEBRA1	70 IRE (normal value) to 90
Sets base level for zebra	IRE or 70% (normal value)
pattern 1.	to 90%
_	Can be set for each IRE
	step or 1% step.
VF S DTL.	99 to ±0 (normal value) to
Sets the detail level of	66+
images on the viewfinder	Negative values set softer
screen (displayed only when	edges and positive values

REC (normal value): Specifies recording star/stop MARK: Specifies a Mark IN/

CUE: Specifies a cue point NG: Specifies NG/OK.

REC: Specifies recording start/stop.

MARK (normal value):
Specifies a Mark IN/OUT

operation SNG: Narrower than normal SNG: Narrower than normal (used for satellite communications, etc.)

	step or 1% step.
VF S DTL.	-99 to ±0 (normal va
Sets the detail level of	66+
images on the viewfinder	Negative values set so
screen (displayed only when	edges and positive va
a viewfinder other than the	set sharper edges.
DXF-701/701CE/701WS/	
701WSCE/801/801CE is	
affached).	

CUE: Specifies a cue point NG: Specifies NG/OK.

S

Item	Settings	Hem
VF TALLY	x1: Uses only the upper	GAININ
Selects whether a not to use REC/TALLY indicator.	REC/TALLY indicator.	Selects
more than one REC/TALLY	x2 (normal value): Uses	always
indicators in the viewfinder	two REC/TALLY indicators.	setting in
(displayed only when the		normal
DXF-701/701CE/701WS/		FILTER
701WSCE/801/801CE		Selects
viewfinder is attached).		always
VF PLAY	Y (normal value): Y signal	knob set
Selects the video signal	VDC: Composite video	the norm
displayed in the viewfinder	violation of the violat	The FIL
during playback of the DSR-	io io	indicator
1/1P (displayed only when		when in
the DSR-1/1P is connected)		WHITE
LENS SEL	1 (normal value), 2, 3, 4	Selects
Selects the types of the lens. For details, see "Designating	For details, see "Designating	show the
	the lens" on page 90.	palance

	2	
	page	
	menn	
	dvanced	
į	⋖	

S(NEXT+W PREU+A)	S NO OO
¥ PR	38888888
Ä	22222222
	SZHZZ ZHZZ Z
∌PABE	STEER BEEN

→PAGE S(NEXT+V PREU+A)

Item	Settings
SS IND*	3SEC: Displays shutter
Selects the mode for	setting for three seconds only
showing the shutter setting	when the setting has been
when displaying the normal indications.	changed. ALWAYS (normal value):
	Displays the shutter setting at all times.
LL IND.	ON (normal value):
Selects whether or not to	Displays.
show the LOW LIGHT	OFF: Not display.
Indication on the normal	
indications when inadequate	
lighting is detected.	
MIC (ND*)	ON (normal value):
Selects whether or not to	Displays.
show the camera	OFF: Not display.
microphone output	
indication on the normal	
indications.	
RIS IND*	ON (normal value):
Selects whether or not to	Displays.
show the lens's F-stop value	OFF: Not display.
(iris indication) on the	
normal indications. The F.	
stop value is always	
displayed when in EZ mode.	

	Settions	florm	Coffinge
	Security		Scurings
LVD.	ON (normal value): Always	TC IND®	OM (normal value)-
s whether or not to	displays.	Selects whether or not to	Displaye
s show the gain	OFF: displays for two	show the time data indication	-
indication on the	seconds only when the	on the normal indications	
Indications.	setting has been changed.	(valid only when the DSR-1/	
R IND*	ON (normal value): Aways	1P or PVV-3/3P is	
s whether or not to	displays.	connected).	
show the FILTER	OFF: Displays for two	CINI CI	OM Inormal value)
etting indication on	seconds only when the	subather or not to	Dientam vancy
rmal indications.	setting has been changed.	displace the common ID ruhes	OFF. Not display
LTER knob setting		dienlasion color ham	Ore: Not display.
or is always displayed		displaying whot bails.	
n EZ mode.		ID SET	See "To set the camera ID"
ND.	ON (normal value): Displays	Sets the camera ID (up to	below.
s whether or not to	OFF: Not display.	eigni characters, including	
he setting of the white		apprantments, symbols,	
e switch.		and spaces).	
ND*)	ON (normal value): Displays.	 a) When the viewfinder's DISPLAY switch is set to OFF, 	PLAY switch is set to OFF,
s whether or not to	OFF: Not display.	indications related to these it	indications related to these items are not displayed even
he setting for skin		when menu settings are set to ON.	io ON.
orrection.		;	
n the viewfinder's DIS	n the viewfinder's DISPLAY switch is set to OFF	To set the camera ID	

Press the MENU/STATUS switch to move the cursor to ID SET. a) When the viewfinder's DISPLAY switch is set to OFF, indications related to these items are not displayed even when menu settings are set to ON.

Advanced menu page 6

Г	2		-
	→PABE B(NEXT→▼ PREU→A)	AUDIO IND: ON TC IND: DN ID IND: OFF ID SET: + >	EXIT MENU (YES+A)

AUDIO IND* Selects whether or not to Displays. Indication on the normal indication or the normal indications (walk only when the DSR-1/1P or PVV-3/2P is commeticity. ATAPE IND* Selects whether or not to Displays.	remai value):
	g)
	lot display.
	rmal value):
	'n
	ot display.
indications. (valid only when	
the Dep-1/10 or DIA/ 2/20	
HE DOLL IVIL OF LAV-SAGE	
is connected).	

When the viewfinder's DISPLAY switch is set to OFF, indications related to these items are not displayed even when menu settings are set to ON.

The displayed character changes each time the UP/ ON button is pressed. It changes in reverse order each time the DOWN/OFF button is pressed.

4 Return to step 2 and repeat the text entry

5 When you have finished entering the text, move the cursor to the parenthesis position. This clears the displayed menu and returns to the normal indications.

Advanced menu page 7

PPGGE 7 (NEXT→▼ PREU→A)	EZ MODE : CUSTON" A. IRIS-ABC: P2.8 A. IRIS-AE : P5.6 ABC LIMIT : 1848	EXIT MENU (YES+A)

a) At shipping, the EZ MODE is set to STD.

7		· · · · · · · · · · · · · · · · · · ·	Samo
	Press the MENU/STATUS switch to move the	EZ MODE	STD (normal value):
	missor to ID GET	When the EZ MODE button	Changes settings to
	curson to its deat.	has been set to EZ mode	standard settings.
		ON, this selects whether or	CUSTOM: Changes only
•	The cursor (→) changes to the text entry arrow (↓).	not to change the settings of	some settings to standard
-		other switches and menus to settings.	settings.
	DOOD BONDOTAN DESIGNAT	the standard settings. (The	For details of the settings
_	THE CHART ALL DEVISE	EZ mode function cannot be	when STD or CUSTOM is
_	IND: ON	used during remote	specified, see "EZ mode
_	TAPE IND: ON Current camera ID	operation.)	settings" on next page.
	ID IND: OFF	A.IRIS-AGC	F1.8, F 2.0 (normal value),
-	ID SET	Selects auto iris adjustment	F4, F5.6
_		which sets an F-stop value	
		that can be switched to AGC	
	EXIT MENU (YES+4)	(displayed only when the EZ	
		MODE is set to CUSTOM).	
N	Z Press the MENU/STATUS switch to move the text	A.IRIS-AE	F5.6 , F8, F11, F16 (normal
. •	entry armw	Selects auto iris adjustment	value)
	and alone.	which sets an F-stop value	
		that can be switched to AE	
Heler	Press the MENU/STATUS switch upward to move	(displayed only when the EZ	
-	the cursor to the right or downward to move it to	MODE is set to CUSTOM).	
=	the left	AGC LIMIT	0 dB, 3 dB, 6 dB, 9 dB, 12
		Sets an upper limit value for	dB (normal value)
C.	Press the HB/OM huston on DOMNIOGE huston to	AGC adjustment (displayed	
)	Less the Original should be bowning.	only when the EZ MODE is	
u	CHICA LIFE OCSITIED CITATACICES.	Sel to cost OM).	

Chapter 4 Viewfinder Screen Indications and Menus

1-34

DXC-D35/D35WS(UC) DXC-D35P/D35WSP(CE) V1

66 Chapter 4 Viewfinder Screen Indications and Menus

EZ mode settings
The following settings

			ARIOSIDA
item	Setting		normal
	STD	CUSTOM	
Setup file	STD	Selectable	Sep
Detail level	-0∓	Selectable	3
Master black	0#	Selectable	
Black stretch	- 0∓	Selectable	Action
Skin detail	OFF	OFF	ACAG
Shutter	OFF (AE mode)	OFF (AE mode)	
Freeze mix	바이	OFF	
Gain	AGC mode	AGC mode	
Hyper gain	OFF	OFF	
his control method	Automatic	Automatic	
Auto iris control mode	STD	STD	
Iris override	OH	Sefectable	
Color bar output	Not output	Not output	
AGC upper limit	12dB	Sefectable	Nem
AGC's F stop value	F2.8	Selectable	16:9/4::
AE's F stop value	F16	Selectable	Selects
WLA	NO.	NO	mode o
DynaLatitude	OFF	OFF	WIDE
+cog	NO	ON	Selects
F-stop value Indication	NO	NO	signal to
Filter indication	No	NO	VF SCA
Clock indication	OFF	OFF	Selects
			the view

Advanced menu page 8

CLOCK IND: OFF CLOCK SET: (START+A) PAGE B (NEXT → PREU → A) EXIT MENU (YES+A) 77 MM DO 00 01 01 01 01 01

Advanced menu pages 10 to 13		For details of this operation, see "Setup Files" (page 71).
Setting	OFF (normal value): Not display. CAM: Displays. BARS: Displays only when color bars are displayed.	See "Setting the Clock and Timestamping Recordings" (page 86).
Item	CLOCK IND Selects whether or not to display the date/time on the normal indications.	CLOCK SET Sets date/time.

These pages are displayed only when a DSR-1/1P has been connected and the SET UP switch is set to FILE.

Advanced menu pages 14 and 15

For details of this operation, see "Using SetupNavi and SetupLog with the DSR-1/1P" (page 76).

KIND	OFF (normal value): Not
whether or not to the date/time on the indications.	uspłay. CAN: Displays. BARS: Displays only when color bars are displayed.
K SET ate/time.	See "Setting the Clock and Timestamping Recordings" (page 86).
nced menu page 9	6
PPGES (NEXT+V PREU+A) 16.9/413 16:9 WIDE SCAN UP SCAN MENU WOOE: 1	T+V PREU+A)
EX17 MENII (YESAA)	(VES-4)

Kem	Settings
16:9/4:3	16:9 (normal value)
Selects whether to put	4534
the camera in 16:9	
mode or 4:3 mode.	
WIDE ID	ON (normal value): Adds.
Selects whether or not	OFF: Does not add.
to add a wide aspect ID	
signal to video output signals in 16:9 mode.	
VFSCAN	AUTO (normal value):
Selects 16:9 or 4:3 as	Automatically switch to 16:9 size
the viewfinder scan size	when the camera is in 16:9
when using the supplied	mode, and automatically switch
DXF-801/801CE	to 4:3 size when the camera is in
Viewfinder.	4:3 mode.*
	FULL: Regardless of camera's
	mode (16:9% or 4:3), the
	viewfinder picture completely fills
	the display area.
MENU MODE	1 (normal value): Selects the
Selects whether or not	16:9 or 4:3 mode only with the
switch the mode (16:9/	advanced menu.
4:3) on the basic menu.	2: Selects the 16:9 or 4:3 mode
	with both the basic and advanced
	menus.

a) Compared to 16-9 mode, the 4:3 mode video appears as if a zoom lears has been adjusted slightly toward the telephoto end lease flow or moge 70.


b) When the camera is in 16-9 mode, the viewfinder picture appears stretched vertically (see figure on page 70).

89

Video Output and Viewfinder Picture (For DXC-D35WSL/D35WSPL)

The video output and viewfinder picture of this camera vary as shown below according to the settings of the 16:9/4:3 item and the VF SCAN item of the advanced



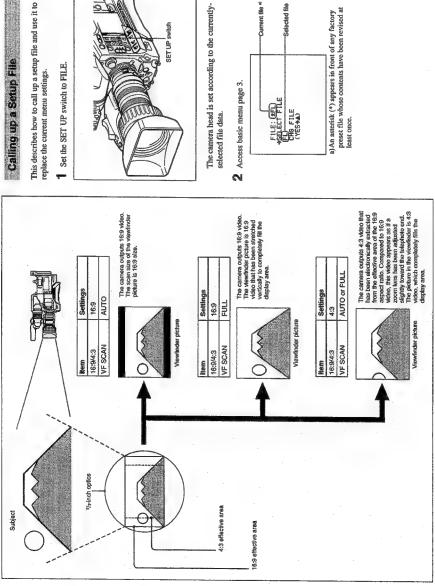

You can use setup files to reproduce a particular configuration of settings. You can also revise the contents of setup files.

Setup Files

There are eight types of setup files, of which five are factory preset setup files and the other three are user files.

3 Move the cursor to SELECT FILE and use the UP/ ON button or the DOWN/OFF button to select the

Press the UP/ON button or DOWN/OFF button repeatedly until the desired file name is displayed.



Set the SET UP switch to FILE.

File	Description
STD	Settings for shooting under standard conditions
HISAT	Settings for making pictures vivid
14.	Settings for shooting under fluorescent lighting
FILMLIKE	Settings for making pictures like ones shot by film camera
SVHS/VHS	Settings to optimize carnera image for recording and playback characteristics of S-VHS, VHS, or HI-8 tape
USER1 to USER3	User setup files (set to STD at shipping)

4 Move the cursor to CHG FILE and press the UP/ ON button.

The camera head is set according to the currently-selected file data.

The display changes am shown below and the selected file is called up.

Current file 4) Selected file

FILE: (F)



a) An asterisk (*) appears in front of any factory preset file whose contents have been revised at least once.

You can also call up these files via a similar operation in advanced menu page 10. In this page, a file recorded onto a tape can also be called up (when using the DSR-1/1P).

For details, see "To call up files recorded onto a tape (when using the DSR-1/1P)" (page 72).

K Chapter 4 Viewfinder Screen Indications and Menus

Chapter 4 Viewfinder Screen Indications and Menus 2

Setup Files

To call up files recorded onto a tape (when using the DSR-1/1P)

First, connect the DSR-1/1P to the camera head and load the cassette that contains the recorded files

Set the SET UP switch to FILE.

Access advanced menu page 10.

PPABE 10 (NEXT → PREU → A.) FILE RECOLL
FILE: *FL
SELECT FILE
FL
CH0 FILE
(YES+A)

3 Move the cursor to SELECT FILE and use the UP/ ON button or the DOWN/OFF button to select TAPE. EXIT MENU (YES+A)

PAGE 10 (NEXT -Y PREU-A) EXIT MENU (YES+A) FILE:*FL FILE:*FL +SELECT FILE TAPE CHG FILE (YES+▲)

4 Move the cursor to CHG FILE and press the UP/ ON button.

The screen appears in shown below

PAGE 10 (NEXT + PREU + A) EXIT MENU (YES+A FILE RECALL FILE:#FL *SELECT FILE TAPE READY TAPE? (YES*A)

Press the UP/ON button to call up the file. To abort the call up operation, press the DOWN/OFF button (the display returns to the one shown in step ß

During the call up operation, the following display appears.

(In basic menu page 1, a part of items are changeable.) called up, after which the original settings are restored If you save the changes, store the modified file us one of the user files or record it in a cassette. (See the

The changes are accepted only until another file is

change the settings about picture quality in setup files

When using advanced menu page 11 or 12, you can

PAGE 10 (NEXT → ▼ PREU → ▲) EXIT MENU (YES-A) FILE RECALL FILE: #FL SELECT FILE TOPE SETUP FILE

Perform the steps described in "To call up files recorded onto a tape (when using the DSR-1/IP)" above to call up the selected file.

Access advanced menu page 11 or 12.

a

PREELI (NEXT-V PREU-A)

FILE 6011 M. BLGCC ± 0 STRETCH ± 0 STRETCH ± 0 DT. LEU ± 0 DT. LEU ± 0 DT. LEU ± 0 DT. FEEO = M EXIT MENU (YES→

following section "Saving File Settings".)

When the call up operation ends, the display changes as shown below.

		recorded onto	
PAGE 10 (NEXT → V PREU → A)	FILE RECOLL	SELECT FILE TOPE -CHG FILE DONE	EXIT MENU (YES+▲)

The settings of the camera head are now replaced by the settings in the called file.

Page 12

Changing File Settings

ltem	Settings
SAT Adjusts the saturation of the	-99 to ±0 (normal value) to +99
image.	Negative adjustment values decrease the saturation and positive adjustment values increase the saturation.
HUE Adjusts the hue of the image.	-99 to ±0 (normal value) to +99
SKIN SAT Adjusts the saturation in the specified area of the image.	-99 to ±0 (normal value) to +99 Negative adjustment values decrease the saturation and positive adjustment values increase the saturation.
SKIN HUE Adjusts the hue in the specified area of the image.	-99 to ±0 (normal value) to +99

Saving File Settings

shooting conditions can be saved in a user file or onto a tape (when using the DSR-1/1P). Files whose settings have been changed for certain


For details, see "To save setup files to a tape (when using the DSR-1/1P)" (page 74).

Set the SET UP switch to FILE.

Currently si

FILE (KFILMLIKE)— 4501 :33 4501 :33 HUE :22 SKIN SAT:12 SKIN HUE:15

PAGE 12 (NEXT →▼ PREU→▲)

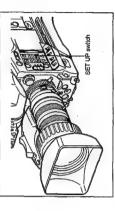

EXIT MENU (YES+A)

a) An asterisk (*) appears in front of any factory preset file whose contents have been revised at least once.

3 Make the desired changes.

Page 11

Call up a setup file whose settings approximate the desired shooting conditions and then change some of the settings.

> -99 to ±0 (normal value) to +99 -99 to ±0 (normal value) to 199

See "Basic menu page 1" (page 58).

Item M.BLACK, STRETCH and DTL LEV M.GAWIMA Adjusts the gamma curve. V DTL LEV Adjusts the vertical detail. DTL FREQ Adjusts the central frequency of the detail.

LL, L, M (normal value), H,

For details of this operation, see "Calling up a Setup File" (togo T.), "Changung File Setumg" (in the left column on this page," Basic Metu Operations" (page 58), and "Advanced Metu Operations" (page 64).

Chapter 4 Viewlinder Screen Indications and Men 72

22

Setup Files

3 Access advanced menu page 13.



a) An asterisk (*) appears in front of any factory preset file whose contents have been revised EXIT MENU (YES+A)

4 Move the cursor to DESTINATION FILE and repeatedly press the UP/ON button or the DOWN/ OFF button to select USER1, USER2, or USER3.

Press the UP/ON button to move the cursor to STORE FILE?.

The display changes as shown below.

PAGE13 (NEXT+▼ PREU+▲) FILE STORE FILE:*FILMLIKE DESTINGTION FILE 1SER2 +STORE FILE? (YES+A) EXIT MENU (YES+A)

6 Press the UP/ON button to store the file. To abort the save operation, press the DOWN/OFF button (the display returns to the one shown at step 4).

When the save operation is finished, the display changes as shown below.

3 Press the UP/ON button to store the file. To about (the screen returns to the screen shown in step 2). the save operation, press the DOWN/OFF button

The tape automatically rewinds and recording

The display changes as shown below, which includes color bars. ("CAN NOT WRITE" appears on the screen if no tape is loaded or if the loaded tape is write-protected.)

PAGE 13 (NEXT+▼ PREU+A) FILE STORE FILE: *FILMLIKE *DESTINATION FILE TAPE After the settings are stored, the following display

EXIT MENU (YES+4)

PREETS (NEXT + V PREU+A) FILE STORE FILE: *FILMLIKE DESTINGTION FILE TOPE *STORE FILE?

EXIT MENU (YES→A)

PAGE13 (NEXT → V PREU → A.) FILE STORE.
FILE: #FILMLIKE
DESTINGTION FILE
USER2
ASTORE FILE?
DONE To save setup files to a tape (when using the DSR-1/1P)

EXIT MENU (YES-A)

Connect the DSR-1/1P to the camera head and load the tape onto which the file will be recorded.

Perform steps 1 to 4 of "Saving File Settings" and select TAPE as the file saving destination.

PAGE 13 (NEXT+V PREU+A) FILE STORE
FILE:#FILMLIKE
+OUSTINGTION FILE
TOPE
STORE FILE?
(YES+A) **2** Press the UP/ON button to move the cursor to STORE FILE?.

EXIT MENU (YES+A)

The display changes as shown below.

PABETS (NEXT+T PREU+A)

EXIT MENU (YES-A)

74 Chapter 4 Viewlinder Screen Indications and Menus

Recording the Menu Settings

Connect the DSR-1/1P and load the tape onto which the settings are to be recorded. Turn the camera power on.

2 Make your basic menu settings.

For details of this operation, see "Basic Menu Operations" (page 58).

3 Again, set the POWER switch to ON while holding down the UP/ON button.

4 Make your advanced menu settings.

For details of this operation, see "Advanced Menu Operations" (page 64).

5 Access advanced menu page 15.

→PABE15 (NEXT→▼ PREU→▲) SETUP NAU! CAMERA-TAPE STORE DATA (YES-A) "NO TAPE" appears if you neglected to load

EXIT MENU (YES+4)

6 Press the UP/ON button.

The following display appears.

PRBE15 (NEXT+▼ PREU+A) EXIT MENU (YES+A) SETUP NAVI COMERA-YTAPE -SSURE TO STURE? (YES-A) NAME SET : (YES-A)

ON button to record the menu setting onto the tape. 7 Set the cursor to "NAME SET" and press the UP/ (Press the MENU/STATUS switch to cancel.)

The cursor (\rightarrow) changes to the text entry cursor (\downarrow) .

PREU-AN PREU-AN EXÎT MENU (YES+A) SETUP NAUI CAMERA+TAPE SURE TO STORE? (YES+A)

Enter a name for the data.

00

Selecting the character: Press the UP/ON or DOWN/OFF button repeatedly until the desired Moving the text entry cursor: Press the MENU/ STATUS switch up to move the cursor to the right, and press the MENU/STATUS switch down to move the cursor to the left. character appears.

9 After completing text entry, move the cursor to the parenthesis position.

The display changes as follows.

PAGE 15 (NEXT+W PREU+A) MY FILE EXIT MENU (YES+▲) SETUP NRU1 CAMERA+TAPE SURE TO STORE? (YES+A)

10 Move the cursor to "SURE TO STORE?" and press the UP/ON button to record the menu settings onto the tape (press the MENU/STATUS switch to cancel).

The display changes as follows and the data recording begins

Name of data being recorded PAGE 15 (NEXT - PREU - A) SETUP NAUI CAMERA-TAPE *CANCEL TO STORE? (YES-AA) SETUP NOU!
(MY FILE)
EXIT MENU (YES→▲) 77 Chapter 4 Viewfinder Screen Indications and Menus

setup files onto a tape, so that the same settings can be

The SetupNavi function records the setup menu and

Using SetupNavi and SetupLog with the DSR-1/1P

က The SetupLog function records a camera settings every few seconds at shooting and displays the recorded data called up and used again or copied to another camera.

Name of data being called up PAGE 14 (NEXT - PREU-A) SETUP NAUI TOPE-COMERA -CONCEL TO RECOLL? (YES-Y) EXIT MENU (YES+A) SETUP NOVI

To make it possible to use the function, power OFF the camera head after disconnecting the RM-M7G, then power ON the camera head again.

When an RM-M7G is connected to the camera head,

in the viewfinder during playback.

you cannot use the SetupNavi function.

To abort the call up operation while in progress Press the DOWN/OFF button.

The following display appears.

Connect the DSR-1/1P and insert the cassette onto which the data was recorded. Set the SETUP switch to FILE, then set the POWER switch to ON

while holding down the UP/ON button.

Advanced menu page I appears.

The procedure to replace camera's menu settings with

Setting up the Camera Using

Data Recorded on Tape

settings recorded onto video tape is described here.

PABE 14 (NEXT→W PREU→A) SETUP NAUI TAPE-ACAMERA +SURE TO RECALL? (YES+A)

EXIT MENU (YES+A)

PAGE 14 (NEXT -> PREU-A) EXIT MENU (YES+A) SETUP NOUI TOPE-CAMERA -DONE

data recorded on the tape.

S

"NO TAPE" is displayed if you neglected to load a

recorded on the tape. (Press the DOWN/OFF Press the UP/ON button to call up the data button to cancel). The display changes as follows and the call up operation begins.

Press the UP/ON button.

4

PPGE 1 (NEXT→V PREU→A)

ALL RESET (YES+A)

After the data has been read, the following display

Repeatedly press down on the MENU/STATUS

N

EXIT MENU (YES+4)

switch until advanced menu 14 appears.

For details of menu operation, see "Advanced Menu Operations" (page 64).

PPREE 14 (NEXT→▼ PREU→A)

SETUP NAVI TAPE+CANERA RECALL DATA (YES+A)

The previous menu settings are overwritten by the

Change the menu settings if necessary

Chapter 4 Viewfinder Screen Indications and Menus 9/

EXIT MENU (YES+A)

Using SetupNavi and SetupLog with the DSR-1/1P

To abort the data recording while in progress Press the DOWN/OFF button. After the data has been recorded, the following display



Viewing SetupLog Data


contains the recording to be viewed. Turn the Connect the DSR-1/1P and load the tape that camera power on.

2 Play back the tape.

For details of playback operation, see the operating instructions for the DSR-1/1P.

3 Press the MENU/STATUS switch up to the STATUS side.

The display changes to page 1 of the status display.

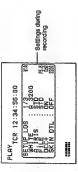

Bach time you press upward the MENU/STATUS switch, the status display cycles through the status pages and playback display in the order: page 2, page 3, the playback display (containing the current settings), and page 1.

Status display (page 2)

Chapter •

Adjustments and

Settings

9 288 PLAY TCR 12:34:56:00 SETUP 1.06 2/3 A. IRIS ± 0 M. BL CEV ± 0 STRETCH ± 0 SS : 1/100

Status display (page 3)



- play back a tape containing SetupNavi data or a setup file, the data displayed in the setup display is not the SetupLog data of the playback picture.) Notes
 SetupLog data is not recorded while SetupNavi data or a setup file is being recorded onto a tape. (If you
 - SetupLog data is overwritten at intervals of a few changed frequently for certain items, it may not seconds during recording. If the settings are recorded may appear as blank settings. always be recorded in time.

If the recording time is very short, recording may

be ended before all of the data has been

overwritten.

3

- Make the following settings on the camera.

 POWER switch: ON SAVE

 OUTPUT/DL/DCC+ switch: one of the CAM
 - Lens iris selector: A (automatic) positions
- 2 Set the FILTER control according to the lighting conditions. (See page 43.) ATW button: off
- 3 Set the W. BAL switch to A or B.

79 Chapter 5 Adjustments and Settings

(continued)

White Balance Adjustment

to another, and as the lighting changes the apparent color of an illuminated subject changes. It is therefore necessary to adjust the white balance each time the principal lighting source changes. The color of light emitted varies from one light source conditions change white objects remain white in the Adjusting the white balance ensures that as lighting image and tones remain natural.

Saving an Appropriate White Balance Value in Memory

the adjustment by moving the W. BAL switch to the A memories, A and B. Unless changed, the saved values or B position. This makes shooting under alternating Once a value is saved, you can automatically restore are retained for approximately ten years, even when You can save two white balance values in separate the camera is powered off. lighting conditions easy.

Separate white balance values for each FILTER control setting


In the default case, as described above, the same two A and B white balance values apply to all four settings of the FILTER control. It is possible, however, to change the AWB MEM menu setting is advanced menu page 3 (see page 65) so that there are eight possibly different values for the A and B positions and for the four FILTER control settings.

> Chapter 4 Viewfinder Screen Indications and Menus 78

White Balance Adjustment

Arrange a white subject (paper, cloth, etc.) under the same lighting conditions as for shooting, and zoom in on it no that as far as possible the whole

The minimum white area requirements for the adjustment are shown in the following figure. screen is white.

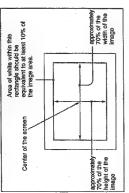

The white balance adjustment is carried out.

During the adjustment the legend "AUTO WHITE -OP-" appears in the viewfinder. Push the WHT/BLK switch in the WHT direction

and the legend in the viewfinder changes to "AUTO WHITE -OK-" plus a color temperature, After a few seconds the adjustment is complete, as shown in the following figure.



The adjustment value is automatically saved in memory A or B as selected above.

(3) The color temperature may be outside the range of the camera. Fit an appropriate color temperature conversion filter, then retry the

The color temperature is too high. the following, in this order of

AUTO WHITE -NG-C.TEMP.HI CHG.FILTER THY AGAIN

(2) Check that the subject is completely white, then retry the adjustment.

lighting conditions, repeat steps 2 to 4 above. You can save two different values for the white balance, in To save the white balance adjustment for different memories A and B.

When using a camera control unit or remote control unit, if the W/B BALANCE switch of the control unit is set to PRESET or MANUAL, it is not possible to carry out white balance adjustment on the camera.

Chapter 5 Adjustments and Settings

8

To recall a white balance value from memory Before beginning shooting, set the W. BAL switch to camera to the white balance adjustment saved in the the A or B position. This automatically sets the corresponding memory. If white balance adjustment cannot be completed automatically. The warning message "AUTO WHITE -NG-" appears in the viewfinder.

signal.

Move the OUTPUT/DL/DCC+ switch to one of the CAM positions.

The camera is outputting a color bar

BARS

Meaning and corrections to be made

The W. BAL switch is in the PRESE

WHITEPRESET

Message

Move the W. BAL switch to the A or B

Make the necessary corrections, then carry out the process again.

g messages for white balance a	Meaning and correction
Warnir	essage

AUTO WHITE
-NG:LOW LIGHT
TRY AGAIN

Set the W. BAL switch to PRESET.

Use a white subject.
Lower the illumination level, stop down the iris, or use the GAIN switch to

AUTO WHITE -NG--NG-: ?? TRY AGAIN

decrease the video signal level.

Check the setting of the FILTER

· After these checks, retry the

2 Set the FILTER control.

The white balance is automatically adjusted for the preset white balance selected in basic menu page 2(see page 59).

Light Sources and Color Temperature

(1) If the FILTER control is in position 2,

C.TEMP.LOW CHG.FILTER TRY AGAIN

AUTO WHITE

The color temperature is too low. Try the following, in this order of precedence.

3 or 4, change it to position 1, then retry the adjustment.

temperature in kelvins (K). It is higher for bluish light, and lower for reddish light. When the camera is shipped it is adjusted for use with video lights (halogen lamps with a color temperature of 3200 K). For use source is essential to ensure correct color rendering. Adjustment of the white balance to match the light The color of a light source is indicated as a color with other light sources, therefore, adjustment is

The following table shows typical color temperature values for different light sources. First use the FILTER control to set the approximate color temperature, then carry out white balance

(1) If the FILTER control is in position 1, change it in position 2, 3 or 4, then retry the adjustment.
(2) Check that the subject is completely white, then retry the adjustment.

(3) The color temperature may be outside the range of the camera. Fit an appropriate color temperature conversion filter, then retry the

Light	Light source Color temperal	Color temperature (K)	ure (K)
Natural	Artificial		
Clear sky		-	10,000
Light cloud			8,000
Cloudy or rainy		Blue light	7,000
skies		-	6,000
-	Fluorescent light (daylight white)		5,000
Direct sunlight,	Mercury lighting	→	
пооп	Fluorescent light (white)	White light	
One hour after			
before sunset	Fluorescent light (warm white)		3,500
	Studio lighting		3,200
	Hatogen tamps and video lights	Yellow light	3,000
Thirty minutes after sunnise or	Incandescent fighting		
before sunset	Sodium street- lighting		
Sunrise or	Candlelight	Red light	2,000
-			

at white balance settings,

Using the Preset White Balance Settings

hen the FILTER control

and 12000 K when the

ve better results than the

Using the ATW (Auto Tracing White Balance) Function

The ATW function continuously adjusts the white balance automatically to adapt to changes in lighting conditions.

adjustment may not necessarily give optimum results. For the best possible results, use the W. BAL switch. Depending on the shooting conditions, automatic

indication appears in the viewfinder.

To disable the ATW function, press the ATW button again, turning the indicator off. This activates the ATW function, and the ATW Press the ATW button turning the indicator on. To use the ATW function

Chapter 5 Adjustments and Settings

8

Black Balance Adjustment

after a significant period out of use, and also when there has been ■ sudden change in temperature. The adjustment value is saved in memory, and for optimum operation of n video camera. It is change.

Meaning and corrections to be made (if the FILTER control is in position 2, 3 or 4, change it to position 1, then retry the ATV operation.

If the FILTER control is in position 1, change it to position 2, 3 or 4, then retry that ATV operation.

C.TEMP.HIGH

Message :C.TEMP.LOW

If the ATW function does not operate correctly A warning massage appears in the viewfinder
shown in the table below.



The lens lits did not close fully.

Chock viwhelter the lens cable is connected properly, and whether there is a fault, in the lens. If a second attempt to carry out the adjustment fails, consult your Sony dealer.

NOT CLOSED TRY AGAIN

Meaning and corrections to be mad

AUTO BLACK

FIS G Message

Warning messages for black balance adjustment

Move the POWER switch to the ON SAVE position, and check that the OUTPUT/DL/DCC+

During the adjustment the legend "AUTO BLACK -OP-" appears in the viewfinder. The lens iris closes, and black balance adjustment 2 Push the WHT/BLK switch in the BLK direction switch is in one of the CAM positions. is carried out.



After a few seconds the adjustment is complete, and the legend in the viewfinder changes to "AUTO BLACK -OK."

Note:
When using a camera control unit or remote control
unit, if the W/B BALANCE switch of the control unit
is set to MANUAL, it is not possible to carry out black The warning message "AUTO BLACK -NG-" appears If black balance adjustment cannot be completed automatically balance adjustment on the camera. readjustment is not normally necessary after powering the camera off or simply when lighting conditions necessary when using the caracra for the first time or Correct adjustment of the black balance is important



Make the necessary corrections, then carry out the

in the viewfinder.

process again.

The camera is outputting a color bar signal.

Move the OUTPUT/DL/DCC+ switch to one of the CAM positions.

The iris opened during adjustment or there is a hardware error. Close the iris and try again. If this fails, consult your Sony dealer.

-NG-: ?? TRY AGAIN AUTO BLACK

BARS

82 Chapter 5 Adjustments and Settings

White Balance Adjustment

Shutter Settings

frequency and EVS setting remains set until changed, This section covers the settings for electronic shutter The new value for the shutter speed or clear scan speed, CLS (clear scan) and EVS function. even when the camera is powered off.

Shutter speeds

There are five shutter speeds, from $^{1/100}$ s (DXC-D35/D35WSL) or $^{1/60}$ s (DXC-D35F/D35WSPL) to $^{1/200}$ s. Increasing the shutter speed reduces blurring when shooting a fast-moving subject. It is also possible to reduce flicker when shooting under fluorescent lighting by changing the shutter speed.

CLS (Clear Scan) function

computer-generated image is different from the vertical scan frequency of the video system. The clear Whun shooting a computer screen or projected image, horizontal bands may appear in the camera image. This is because the vertical scan frequency of the scan function allows you to select a vertical scan requency to reduce this interference.


EVS (Enhanced Vertical Scan)
This function enhances the vertical scan resolution from 400 to 450 lines (or 450 to 530 lines) to reduce licker. However, this increases the aliasing.

Setting the shutter speed, CLS and EVS function

· The faster you make the shutter speed, the darker the viewfinder, and if necessary increase the lighting image becomes. Check the brightness in the

When the shutter speed is very fast, shooting a high intensity subject may cause long vertical tails to appear on the highlights (smear). level or adjust the iris.

vertical scan frequency may change depending on the software being run. The vertical scan frequencies of computer screens vary, and it may not be possible to eliminate the interference patterns entirely. Note also that the

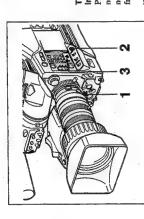

Set the SHUTTER switch to the ON position.

speed or clear scan frequency setting and to set the EVS function. (If the EVS is already selected, the The SHUTTER indicator in the viewfinder comes on, and it is now possible to change the shutter SHUTTER indicator will not light.)

Operate the MENU/STATUS switch to align the cursor with the item "SHUTTER" in basic menu page 1. N



3 Press the UP/ON button or DOWN/OFF button to select the required shutter speed, scan frequency or Each time you press the UP/ON button or DOWN/ EVS.

OFF botton, the shutter speed or clear scan frequency setting changes in the following order:

-- 1/250 --- 1/500 --- 1/1000 --- 1/2000 --- EVS -201.41/z ... 50.31/z DXC-D35P/D35WSPL 200.3Hz . . . 60.4Hz DXC-D35/D35WSL DXC-D35P/D35WSPL 1/100 DXC-D35/D35/WSL (Value when shipped)

82

When using the clear scan function Watching the monitor screen, adjust the frequency

reduce the frequency, and if there is a white band, If there is a black band in the monitor image, to give minimum interference. increase the frequency.

To return from the basic menu to the normal

Press the MENU/STATUS switch an many times as necessary until the normal indications appear. The frequency appears in the normal screen display. new setting of the shutter speed or clear scan

When shooting is finished Set the SHUTTER switch to the OFF position. The SHUTTER indicator in the viewfinder goes off.

Chapter 5 Adjustments and Settings

84

Setting the Clock and Timestamping Recordings

Use advanced menu page 8 to set the camera head's internal clock and record the date and time.

If the following date/time setting procedure for the internal clock does not cause the date/time information to be displayed in advanced menu page 8, it may be due to a worn-out lithium battery in the camera head. See page 23 and replace the lithium battery.

How to set the date and time

Access advanced menu page 8.

For details of menu operations, see "Advanced Menu Operations" (page 64).

B (NEXT→▼ PREU→▲)	K IND:OFF K SET: (START→A)	
→PAGE	2000 CC 0000	

2 Move the cursor to CLOCK SET, then press the EXIT MENU (YES+A)

The following display appears, in which the year indication is flashing. UP/ON button.

	i	
CLOCK SET: (START→▲)	99 10 27 8:49 PM	EXIT MENU (YES→▲)

3 Press the MENU/STATUS switch and the UP/ON button to set the desired date and time.

1) Press the MENU/STA/TUS switch up or down until the tiem to be changed starts flashing.

2) Press the UPON button to change the number.

Repeat 1) and 2) until you have completed your date and time settings.

86 Chapter 5 Adjustments and Settings

	Flashing	
PAGE 8 (NEXT-)V PREU-)A) CLOCK IND: OFF CLOCK SET: (STRRT-)A)	99 18 28 6:55) PW	- 1

4 Select whether to display a 12-hour clock (showing AM and PM hours) or a 24-hour clock.

1) Press the MENU/STATUS switch up or down to select the desired setting (12-hour clock

Example of 12-hour clock display: 6:49 PM ("6" and "PM" are flashing) display or 24-hour clock display).

Example of 24-hour clock display: 18:49 ("18" is flashing)
2) Press the UP/ON button.

5 Press the UP/ON button to select the date display

Each press of the UP/ON button cycles through the following options.

• Year-month-day: YY MM DD YY MM DD 99 10 27 MM DD YY 10 27 99 DD MM YY 27 10 99 · Day-month-year: Month-day-year:

6 Press the MENU/STATUS switch down.

The cursor is shown at the CLOCK SET position. PABE B (NEXT→▼ PREU→▲) CLOCK IND:OFF EXIT MENU (YES-A) YY MM DD 99 10 28 6:55 PM

7 Press the UP/ON button (to a time signal).

display can be viewed if CLOCK IND has been set to ON. The clock starts from 00 seconds. The clock


Timestamping recordings

You can timestamp recordings by superimposing the current date and time. Before shooting, set the CLOCK IND to CAM in advanced menu page 8. The date and time appear in the viewfinder, and are superimposed on the video signal output from the

To stop superimposing the date and time, set the CLOCK IND to OFF.

Viewfinder Screen Adjustments

The following adjustments are provided to improve the Although these adjustment may make the viewfinder image clearer, they have no effect on the output video signal from the camera. visibility of the viewfinder screen.

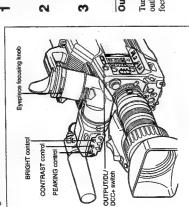

Contrast and brightness adjustment

Carry out these adjustments with the color bars displayed. Set the OUTPUT/DL/DCC+ switch to the BARS The color bars appear in the viewfinder. Watching the color bars, turn the CONTRAST and BRIGHT controls to adjust the contrast and brightness.

Return the OUTPUT/DL/DCC+ switch to its original position. က

Outline emphasis adjustment

Turning the PEAKING control changes the degree of outline emphasis in the viewfinder image, to make focusing easier.


Flange Focal Length Adjustment

Adjusting the Lens

It is necessary to adjust the flange focal length (the distance from the lens flange to the plane of the image along the optical axis) in the following cases.

• When a lens is fitted for the first time • After changing lenses

When during zoom operations the focus does not match properly from telephoto to wide angle

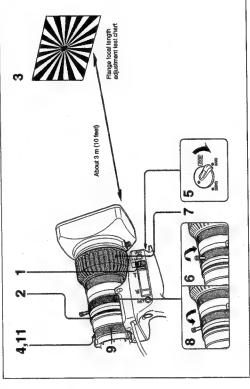

Set the iris selector to the M position.

3 Place the supplied flange focal length adjustment rest chart at a range of about 3 meters (10 feet), and adjust the lighting so that an appropriate video output level is obtained with the iris at ff1.8. 2 Turn the iris ring to f/1.8 (fully open).

4 Loosen the F.B fixing screw.

5 Set the ZOOM selector to the MANU. position.

6 Move the manual zoom control to the telephoto position.

7 Turn the focusing ring so that the test chart is in focus. 8 Move the manual zoom control to the wide angle

9 Turn the F.B adjustment ring so that the test chart is in focus. Do not move the focusing ring.

10Repeat steps 6 to 9 until the image stays in focus from telephoto to wide angle.

11 After adjustment, tighten the F.B fixing screw.

Diopter: A unit to indicate the degree of convergence or divergence of a bundle of rays.

Chapter 5 Adjustments and Settings

88

position of the viewfinder image varies. Adjust the eyepiece focus to get the clearest viewfinder image for Using an optional part allows you to modify the adjustment range to -2 to +1 diopters or -0.5 to +3 your eyesight. First focus the image with the lens, then adjust the eyepiece focusing knob. The adjustment range is from -3 to 0 diopters13 (default when shipped is 0 diopters).


For details, consult your Sony dealer.

whether longsighted or shortsighted --- the optimal

Depending on the eyesight of the camera operator

Adjusting the eyepiece focus

iris Adjustments

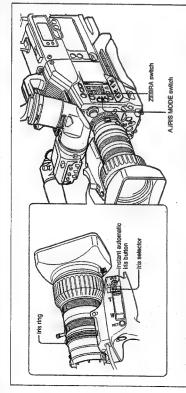

If you use the lens that is not mentioned above, set the

lens number as follows:

Set up the data with Sony dealer.

There are three ways of adjusting the iris: automatically, manually, and with the instant automatic iris adjustment function.

Iris adjustment	and the second
	Operation
Automatic adjustment mode The iris is adjusted automatically to adapt to changes in the brightness of the subject. This is the mode for normal shooting.	Set the iris selector to the A position.
Manual adjustment mode Use this mode in the following cases: For special effects • When fliming a person with a very bright sieby beskground withen shooting a subject with extreme contrast The zeberts pattent can be used as a	Set the irls selector to the M position and turn the iris ring as required.
Instant automatic adjustment function function While in menual adjustment mode, this function makes a temporary automatic adjustment.	With the iris selector in the M position, hold down the instant automatic iris button for as long as necessary.

To make the Image lighter when shooting against the light

In the automatic iris adjustment mode, set the A.IRIS MODE switch to BACK L, turning the indicator on.

Chapter 5 Adjustments and Setting

To make the image clearer when shooting a subject lit by a spotiight

Adjusting the Iris Sensitivity

lenses are equipped with iris scnsitivity adjustment

happens, adjust the iris sensitivity using the iris

sensitivity trimmer.

Iris sensitivity trimmer (S or IRIS GAIN is indicated.)

In auto iris mode, if hunting or response delay

You can also ask a Sony dealer more precise settings When using a lens with an extender, set it to 2.
 When using a lens with a ratio converter, set it to 2. · When using a lens without an extender, set it to 1.

according to your lens. In this case, set it to 4.

In the automatic iris adjustment mode, set the A.IRIS MODE switch to SPOT L, turning the indicator on.

Using the zebra pattern in manual adjustment mode

Select the zebra pattern to be displayed in advenced adjustment in manual adjustment mode, set the ZEBRA switch to the ON position. To use the zebra pattern as a guideline for iris menu page 4 (see page 65).

Adjust the iris manually so that the zebra pattern When the subject is a person

appears on the most important parts of the subject. Adjust the iris manually so that the zebra pattern appears on the highlights of the subject's face. For other subjects

#§@

Designating the lens

may appear on the upper and lower of the screen when If the number is not designated properly, other colors You have to designate the lens number according to Set the number in advanced menu page 4 (page 65) according to the following table. shooting a white subject. the types of your lens.

you turn it counterclockwise, the sensitivity decreases. It is recommended that you confirm the iris sensitivity after replacing the lens.


removing the gum cap on the front of the lens driving unit. Use a mini-screwdriver to turn the trimmer. If you turn it clockwise, the sensitivity increases, and if

You can see the iris sensitivity trimmer when

For more information, refer to the operating instructions for the lens (or consult the lens maker). Lens number Fujinor: A10X4.8 BEVM/BEHD, A15X8 BERM/BEHD, A16X9 BERM, A20X8 BEVM/BERD, A19X8.7 BERM, A19X8.7 BRM Fujinon: VCL-916BYA, A16X9 BRIM, Canon: VCL-918BY, YJ18X9B KRS

A12X6.8 BRM Canon: VCL-918BY, YJ18X9B KRS		
Fujinon: A10X4.8 BEVW/BERD, A15X8 BERM/BERD, A16X9 BERM, A20X8	2	Macrophotography
BRIM Canon: J9aX5.2B (RS/AS. J15aX8B JRS/		Use the macro function when the si
IAS	67	front of the lens. It is possible to sl
IRS		to a range of 10 mm (wide angle, f

subject is less than -918BY) from the shoot close-ups down to a range of 10 mm (wide angle, f = 9 mm).

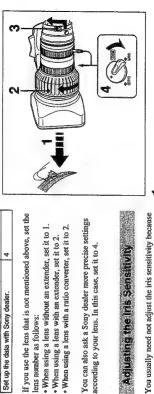

Bring the lens up to the subject so that the image is the required size.

3 Slide the M button toward the rear of the camera, and turn the MACRO ring fully in the direction 2 Move the focusing ring to the closest focus position.

4 Move the ZOOM selector to the MANU, position, and turn the manual zoom control to focus the

shown by the arrow.

Ending close-up shooting

Return the MACRO ring to its original position (turn fully in the opposite direction to the arrow in the

Reducing the size of the image

After completing steps 1 to 4 above, if you wish to reduce the size of the image, turn the MACRO ring back slightly, then use the manual zoom control again to focus the image.

Chapter 5 Adjustments and Settings

6

Chapter 5 Adjustments and Settings


6

Settings for Special Cases

This prevents white burn-out in highlights of faces and clothes, This eliminates the blue-green cast, and estores natural hues. Prevents white breakup and color faults in bright areas. This provides automatic adjustment to a set of standard values, to allow immediate shooting. This increases the saturation of primary This opens the irts, to make it easier to focus before beginning shooting. This enhances the vertical resolution. The "filmlike" effect is added to the picture. Adjusts the skin detail or tone to a designated active area. This lightens the foreground. Effect Set the A.IRIS MODE switch to SPOT L, turning the indicator on. Set the A.IRIS MODE switch to BACK L, Use the FL file. (Access advanced menu age 10 with the SET UP switch set to Press the EZ FOCUS button, turning the "easy focus" tunction on. Use the HI SAT file. (Access advanced menu page 10 with the SET UP switch set to FILE.) Enable the EVS (Enhanced Vertical definition System) function. (See page Set DL to ON in the advanced menu page 2 and, then set the OUTPUT/DL/ DCC+ switch to CAM DL. See "Skin Detail Correction" or "Adjusting Color in the Specified Area" (page 93). Enabling the EVS function tends to increase the occurrence of aliasing problems (moiré patterns). Therefore, normally leave the function disabled. Use the FILMLIKE file. (Access advanced menu page 10 with the SET UP switch set to FILE.) Set the EZ MODE switch to the ON position. Settings for special cases The subject is completely still (e.g. when shooting documents, drawings, etc.). When you wish to give pictures a natural sate created by film camera. When shooling bright areas mixed with dark areas (Example: A person Indoors looking through a window at a bright landscape outdoors) When you wish to give III lush effect, as when shooting a wedding or similar The background is very bright, and the subject is too dark. When adjusting for skin detail or tone (Example: When shooting to hide skin details) To begin shooting immediately when here is no time to make adjustments. Shooting under fluorescent lighting. To make focusing before shooting The subject is under a spotlight.

Skin Detail Correction

The DXC-D35/D35P/D35 WSL/D35 WSPL, provides an easy push-button function that designates an active skin tone area.

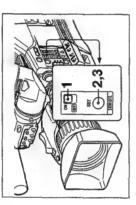

Set the SKIN DTL switch to ON.

The indication "SKIN AREA: ±0" appears in the viewfinder.

2 Press the SKIN DTL SET button.

This causes the area detect cursor to be shown in the viewfinder (for 10 seconds).

3 Place the area detect cursor on the target, then press the SKIN DTL SET button.

This designates the correction area, which is indicated by a zebra partern, and the indication "SKIN AREA: ±0" appears again. If the area detect cursor disappears before designating the area, press the SKIN DTL SET button again to display the cursor. (Reatm to step 2.)

Press the UP/ON or DOW/N/OFF button to change the SKIN AREA value (-.99 to +99)so that the zebra pattern may be displayed in the target area. Use basic menu page 2 to set the correction level. (see page 59).

You can also change color in the designated area (see the following section).

Adjusting Color in the Specified area

You can adjust the specified color using setup files. Perform the same procedure with the skin detail correction to designate the target area.

Turn the POWER switch on with holding down the

UP/ON button.

2 Perform steps 1 and 2 in "Changing File Settings" (page 73) and display advanced menu page 12 in the most suitable file for shonding.

PILE ADD 2
FILE ADD 2
SAL
SAL
SAL
SAL
SAL
SKIN BET 12
SKIN HUE:15
SKIN HUE:16

 Perform the procedure for the skin detail correction to designate the area to which you apply color adjustment. is not displayed.

When advanced menu page 12 appears, change the value of the SKIN SAT or SKIN HUE to adjust color in the area designated in step 3.

While this procedure is being performed, the menu

Note: Set the SKIN DTL to 1.0 in basic menu page 2 if the skin detail correction is unnecessary.

92 Chapter 5 Adjustments and Settings

Appendix

Important Notes on Operation

Fitting the zoom lens

It is important to III the lens correctly, as otherwise damage may result. Be sure to refer to the section "Fitting the Lens" (See page 30).

Do not cover the unit while operating
Putting a cloth, for example, over the unit can cause
excessive internal heat build-up.

Operation and storage

Avoid storing or operating the unit in the following

- temperature inside a car with the windows closed can • In excessive heat ur cold (operating temperature range: -10 °C to +45 °C (14 °F to 113 °F)) Remember that in summer in warm climates the easily exceed 50 °C (122 °F).
 - · Locations where the unit may be exposed to rain · In damp or dusty locations
- Locations subject to violent vibration
 Close to radio or TV transmitters producing strong electromagnetic fields.

Viewfinder

The eyepiece lens can concentrate the sun's rays and melt the interior of the vicwfinder. Do not leave the camera with the eyepiece pointing directly at the sun.

Do not use the viewfinder close to strong magnetic fields. This can cause picture distortion.

shipping.

Fearding the camera by truck, ship, air or other transportation service, first store it in the eartying ease, then pack the carrying case in the supplied carton (or Shipping
Use the optional LC-421 Carrying Case for optimal an equivalent).

Care of the unit

Remove dust and dirt from the surfaces of the lenses or optical filters using a blower.

If the body of the camera is dirty, clean it with a soft, dry cloth. In extreme cases, use a cloth steeped in a little neutral detergent, then wipe dry. Do not use organic solvents such as alcohol or thinners, an these may cause discoloration or other damage to the finish of the unit.

In the event of operating problems

If you should experience problems with the unit,
contact your supplier or Sony service representative.


Important Notes on Operation

Characteristics of CCD Sensors

The following effects may appear in the image. They are characteristic of cameras using CCDs (charge-coupled devices), and do not indicate a malfunction.

Vertical smear

When shooting a very bright object, such as a light, the highlight tends to produce vertical tails. This effect is much reduced in this camera.

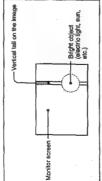

White flecks

If the camera is operated at a high temperature, white flecks may appear in the image.

WARNING indicator on the VTR also lights or flashes, and warring indications appear in the display window. There is also a warning tone in the earphone.

If a fault occurs during operation, a warning is given by the RECTALLY and BATT indicators in the vewfinder and the tally lamp lighting or flashing, and also by warning indications on the viewfinder screen. When you are using a DSR-I/IP or PVV-3/3P, the

Warning Indications

Warning indications

					,			
Camera			AE.			Fault	VTR action	What to do
REC/ TALLY Indicator and tally lamp	BATT	Viewfinder screen indication	WASNING	Display	Warning tone			
*	ı	1	¥	RF (during recording only)	e) ell ell ell (During recording only)	The video heads are clogged, or there is some other fault in the recording system.	The VTR emits a waming tone when it detects head clogging.	Carry out head cleaning, redefining to the instruction manual for the VTR, if the problem persists after cleaning the heads, disconnect the power and consult your Sony dealer.
豪	1	<u>I</u>	*	SERVO	\$ CH CH CH	The servo lock has been lost.	Recording continues, but the recording may not be satisfactory.	Disconnect the power and consult your Sony dealer. (The SERVO indication may flash momentarily when the tape transport starts, but this does not indicate a problem.)
*		1	*	HUMID	(During recording) (During (During (During (During (During (During (During (During (During (During) (Couring)	oondensallon.	Recording continues, but if the tape sticks to the drum, recording stopes. Playback, rewind, or fast forward stops.	Stop the tape transport. Walt until the HUMID Inclusion until the HUMID Inclusion does not appear when you power the unit on.
*	Į.		¥	SLACK		The tape is not wound properly.	The operation stops. (Refer to the service manual or maintenance manual.)	Press the EJECT button to defect the cassetta. Close the cassette compartment and check that the top panel has descended before powering off. Then consult your Sony dealer. (Do not attempt to hisert any cassette.)
*	1	ı	(During recording only)	TAPE (flashing, during recording only)		The tape is near the end.	Operation continues.	Change the cassette if necessary.
膏	l	L	*	TAPE (flashing)		The tape is at the end.	Recording, playback, and fast forward all stop.	Change the cassette.
*	*	11.0V	*	BATT (Rashing)	(During recording)	The battery is almost exhausted.	Operation continues.	Change the battery when possible.
	*	BATT 10.5V	*	BATT (flashing)		The battery is exhausted.	Operation confinues.	Change the battery.
A Comingion		L Elochino	Lucian and and and and	1	der Docking for			

Appendix

Continuous . Flashing once per second . Flashing four times per second

as a see Four beeps per second arming One beep per second arminements. Continuous For the warnings appearing in the viewfinder when a VTR is connected, see the section "Viewfinder Normal Indications" (page 54).

DXC-D35/D35P/D35WS/D35WSP Camera

Horizontal resolution (center) Imaging clement

DXC-D35P: 752 (horizontal) x 582 Three-chip interline transfer CCD DXC-D35: 768 (horizontal) x 494 Pixel resolution

DXC-D35WSP: 980 (horizontal) × 582 (vertical) mm DXC-D35/D35P: 8.8 × 6.6 mm (²/₃inch, 4:3 optical system) DXC-D35WS/D35WSP: 9.6 × 5.4 Imaging area

(vertical)

mm (2/3-inch, 16:9 optical system) Built-in filter settings

BIA standard signal (NTSC color 4: 5600K + 1/4ND 2: 5600K + 1/8ND Sayonet mount 3: 5600K : 3200K Signal standards Lens mount

CCIR standard signal (PAL color system) (DXC-D35P/D35WSP) 525 lines, 2:1 interlace (DXC-D35/ system) (DXC-D35/D35WS) Scanning system

625 lines, 2:1 interlace (DXC-D35P/D35WSP)

15.625 kHz (DXC-D35P/ 15.734 kHz (DXC-D35/D35WS) Scanning frequencies

(VBS or BS) to the GEN LOCK the GEN LOCK connector of a camera adaptor or input from External sync, using signal input /ertical: 59.94 Hz (DXC-D35/ IN connector of nn optional D35WS) 50.00 Hz (DXC-D35P/ D35WSP) Internal sync Synchronization

DPR, 24 dB, 24 dB + DPR, hyper gain (30 dB + DPR or 36 dB + 0.4 lux (at f/1.8, +42 dB) 2000 lux (f/11.0 standard, 3200 K) Selectable -3 dB, 0 dB, 3 dB, 6 dB, 1.0 Vp-p, sync negative, 75 \Omega, unbalanced DXC-D35/D35P: 880 TV lines DXC-D35WS/D35WSP: 850 TV lines (4:3 mode), 800 TV lines C: burst level 0.286 Vp-p, no 0.05% for all zones, without lens 75 Ω , unbalanced LENS connector: 12-pin, for $^{7/2}$ -9 dB, 12 dB, 18 dB, 18 dB + Y/C separate signals
Y: 1.0 Vp-p, sync negative, unbalanced VIDEO OUT connector: BNC, 61 dB (typical) (DXC-D35P/ D35WSP) 63 dB (typical) (DXC-D35/ 0.25 lux (at f/1.4, +42 dB) Composite signal (16:9 mode) D35WS) Input/output connectors Minimum illumination Video S/N ratio Video output Gain levels Registration Sensitivity DXC-D35WS: 980 (horizontal) × 494

Subject area (at 0.9 m (3 feet)) Focusing range Iris

Sony 1/2-inch bayonet mount 82 mm dia., 0.75 mm pitch 1.3 kg approx. (2 lb 13 oz) (excluding lens hood) Infinity to 0.9 m Filter attachment threads Mounting Mass VF connector (left side): 8-pin REMOTE connector 1: Stereo VF connector (front): 20-pin

inch lens

122 × 120 × 219.7 mm (47/8 × 43/4 ×834 inches) (with lens hood, without lens grip) External dimensions

MONITOR OUT connector: BNC,

75 Q, unbalanced

12 V DC

Power consumption

Power supply

REMOTE connector 2: 10-pin

DXF-801/801CE Viewfinder

External dimensions in millimeters (inches)

242(95/6)

RECTALLY (x2), BATT, SHUTTER, GAIN UP 600 TV lines 1.5-inch monochrome Picture tube Resolution Indicators

620 g approx. (1 lb 5 oz) 12 V DC 2.1 W Power consumption Power supply

75(18%)4)

0

Switchable between 4:3 and 16:9 241 (W) × 91 (H) × 203 (D) mm $(9^{1}/_{2} \times 3^{5}/_{8} \times 8 \text{ inches})$ Maximum external dimensions

Scan size

Supplied accessories

Manual or power, selectable; zoom ratio: x18

9.0 to 162 mm

Focal length

Zoom

VCL-918BY Zoom Lens

Manual or automatic, selectable; f/

1:1.8

Maximum aperture

I.4 to f/16 and C (closed)

Wide angle: 789 × 592 mm

(311/8 × 233/8 inches) Telephoto: 45 × 34 mm (113/16 × 13/8 inches)

RM-LG1 Remote Control Unit 20 (1) DXF-801/801CE Viewfinder21 (1) VCL-918BY Zoom Lens" (1)

Plange focal length adjustment test chart (1) VCT-U14 Tripod Adaptor2 (1) Cens mount cap (1) Wind screen2) (1) Microphone²⁾ (1)

Design and specifications are subject to change without notice.

Operating Instructions (1)

Related Products

There is a range of Sony products available to meet every conceivable video shooting requirement. For letails, consult your Sony sales representative or VCL-915BYA/916BY/916BYA/918BY Zoom Lens

CA-325A/325AP/327/327P/511/5123/512P3/513/537/ RM-M7G Camera Remote Control Unit Camera adaptor products CMA-8A/8ACE AC Adaptor 537P Camera Adaptor

When connecting a CA-512/512P, remove the blank panel on the CA-512/512P.

1) DXC-D35K/D35PK 2) DXC-D35K/D35L/D35WSL/D35PK/D35PL/D35WSPL

DXC-D35WS/D35WSP: 2.5 kg

Mass

approx. (5 lb 8 oz)

-10 °C to +45 °C (14 °F to 113 °F) -20 °C to +60 °C (-4 °F to 140 °F) DXC-D35/D35P. 2.4 kg approx.

Operating temperature Storage temperature

camera control unit to the VTR/

CCU/CMA connector of an

optional camera adaptor.

DXC-D35WS/WSP: 14.9 W (15.3 W when the DSR-1/1P is

DXC-D35/D35P: 12 W (12.7 W

when the DSR1/1P is

6 Appendix

Appendix 86

Specifications

Chart of Optional Components and Accessories

VO-8800/8800P Portable Videocassette Recorder EVV-9000/9000P Videocassette Recorder PVV-1/1P/1A/1AP/3/3P Portable Videocassette DSR-1/1P Digital Videocassette Recorder

BVU-150/150P Portable Videocassette Recorder

BVV-5/5PS Videocassette Recorder BVW-50/50P Portable Videocassette Recorder

/A-5/5P/90/90P VTR Adaptor

Battery products

BC-1WD/1WDCE/1WB/1WBCE/410/410CE Battery NP-1B/1A Battery Pack BP-90A Battery Pack

Charger

Microphone products ECM-670/672 Electret Condenser Microphone C-74 Condenser Microphone EC-0.5C2 Microphone Cable CAC-12 Microphone Holder

Studio equipment

EC-0.3C2 Micorphone Cable

CCU-M5/M5P/M5A/M5AP/M7/M7P Camera Control DXF-51 5-inch Viewfinder (monochrome) DXF-41 4-inch Viewfinder (monochrome)

The suffix number on a cable part number indicates the length in meters: e.g. a CCZ-A2 is 2 meters long. (Approximate equivalents in feet: 2 m = 6 ft, 5 m = 16 ft, 10 m = 33 ft, 25 m = 82 ft, 50 m = 164 ft, 100 m = Cables and miscellaneous DR-100 Intercom Headset

328 ft)

Camera cables with Z-type 26-pin connectors CCZ-A2/A5/A10/A25/A50/A100 Camera cables with Q-type 14-pin connectors CCZQ-A2/A5/A10/A2AM CCZZ-1B/1E Cable Extension Connector


Camera cables with Crype 14-pin connectors CCQ-2BRS/5BRS/0BRS/CCQ-10AMJC0AM CCCZ-2. Camera Cable with Z-type 26-pin connector and J-type 10-pin connector LC-421 Carrying Case

8

Appendix

LC-DS300SFT Soft Case

LCR-1 Rain Cover CAC-4 Chest Pad

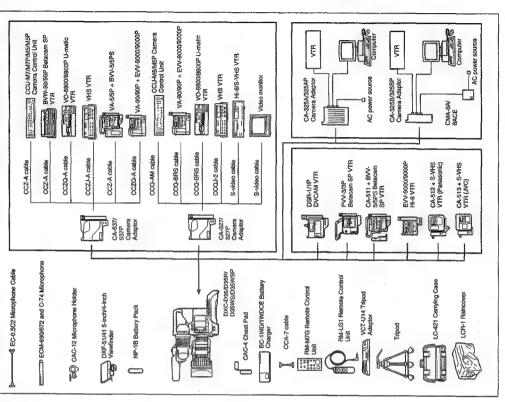

DXC-D35/D35WS(UC) DXC-D35P/D35WSP(CE) V1

What Is ClipLink?

efficiency of the video production process ms a whole by proorbing various editing-related data on tape when shooting. As such, CipiLink is a revolutionary function that transcends the conventional separation of The ClipLinkTM function greatly improves the hooting and editing.

When an external equipment, such m VCR, is connected to the DV OUT connector, the ChipLink unction will not work.

How ClipLink Changes Video Production Techniques

The following describes various ways in which ClipLink¹⁾ video production differs from conventional rideo production.

Recording of ClipLink log data lightens the shooting workload

automatically recorded into the cassette memory. This and pencil. You can also designate unwanted scenes as When you start shooting a scene, ClipLink log data compiled by someone using a stopwatch, clipboard such as the scene number and time code data are 'NG" (no good) and automatically skip all "NG" eliminates the need for a conventional "shot list" scenes when editing.

Recorded Index Pictures drastically cut editing time

start of each scene, which is recorded onto the tape as the EditStation's hard disk. You can also transfer OK Index Picture is a compressed image taken from the only the Index Pictures and the ClipLink log data to Pictures a time-saving tool for rough editing. Each a still picture. When editing, begin by transferring The ClipLink function also features Index scenes only ("NG" scenes are skipped).

Pictures on the EditStation's GUI display and rearranging them as you wish. This climinates the difficult work of matching up a handwritten shot list with recorded scenes. After you have completed this rough editing, you can then transfer only the recordings needed for your video program. Next, begin rough editing by viewing the Index

recorded on the disk drive to the DSR-85/85P, or in the carried out in one fourth of the real time duration. It is opposite direction when loading data backed up on the is much shorter than with conventional equipment (for which, for example, transferring a 40-minute segment of video takes 40 minutes). It is also possible to transfer the editing material itself of course possible to carry out a transfer at four times normal speed when backing up video and audio data DSR-85/85P to the disk drive. Thus the time required normal speed. In other words, the transfer can be between the DSR-85/85P and ES-7 at four times High-speed transfer of recordings


to transfer digital (video/audio/time code) signals at four times normal speed from the DSR-85/85P Digital When using a tape recorded by a DVCAM camcorder seconds of color bar signals at the beginning of the seconds of recording on the tape before the IN point. Videocassette Recorder to the ES-7 EditStation for editing purposes, there must be about at least 40 recommended that you pre-record at least 40 To perform editing without problems, it is

ClipLink Operation Flow

The following is a detailed description of how to use the ClipLink function during the video production

Example System Configuration

containing existing analog equipment. However, note that a part of functions are disabled. The following illustration shows the optimum system ClipLink operation is possible even with a system configuration for using the ClipLink function.

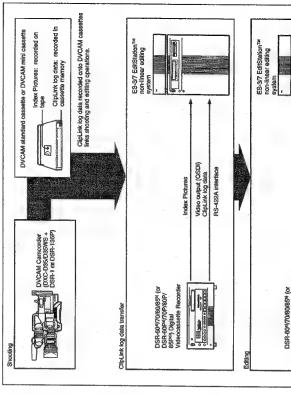

a) The DSR-60/60P is a videocasselte player. b) Between the DSR-85/85P and ES-7, quadruple transfer is possible through the OSDI.

QSDI input/output

Actual AV data

103

Appendix

1) The ClipLink system is a video production system which uses the cassette memory function.

8

ClipLink Operation Flow


Data Generated When Shooting

The following describes the kinds of data that is generated when using the ClipLink function.

ndex Pictures

IN point at the start of each scene is recorded as a still picture into the DSR-1/1P's internal memory. These intages are called "Inface Flotuces". When you limish shooting, the Index Pictures from all scenes are recorded onto the tape after the last scene. When shooting, ■ single-frame image from the Mark

Index Picture

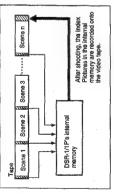

Up to 32 Index Pictures can be recorded onto the tape space normally occupied by one frame, as shown

Seven frame spaces are reserved at the end of the last scene as a recording area for Index Pictures. (A cassette with 16 Kbits of cassette memory can record up to 198 Index Pictures, and a cassette with 4 Kbits of cassette memory can record up to 45 Index Pictures.)

ClipLink log data can be recorded automatically or manually into the cassette memory for use as a ClipLink log data

convenient alternative to the conventional "shot list". ClipLink log data includes the following items.

ClipLink log data	Description
Reel number (cassette number)	Data (maximum length: 8 digits) consisting of alphanument characters and/or symbols (This is left blank at shipping.)
Scene number	A three-digit number from 001 to 198 (starts at 001 and is automatically incremented with each scene).
Take number	This cannot be changed (set to "1" at shipping).
OK/NG	Indicates the OK/NG status of a particular scene. (In the OK case, nothing is recorded.)
Mark IN/OUT point time codes	These are the time codes that indicate the Mark IN and Mark OUT points for each serve (H-RIMRS). These time codes are recorded when the camcorder has been set to Mark mode.
	The frame digit is incremented at each Mark IN point and is decremented at each Mark OUT point. (For details, see Time codes recorded for Mark INOUT points' on page 109)
Cue point time code	This is the time code that indicates the cue points (walkd up to the frame digit). This time code is recorded when the cancorder has been set to Cue mode. When in this mode, the time codes at the start and end of a recording the Rec IN and Rec OUT fine codes are automatically recorded as Mark IN/OUT pounts.

How to record ClipLink log data

The following describes how to record the various ClipLink log data items.

OK/NG status

All scenes that do not receive an "NG" designation are To designate a scene as "NG", press the NG button on the camcorder while shooting the scene or in any time before you begin shooting the next scene. (When you exit the VCR recording mode, changing recorded as "OK" scenes.

Mark IN/OUT points time codes


the OK/NG status is no longer possible.)

480 lines (NTSC) or 576 lines (PAL)

8 24 20 15 12 8 8

(77) 60 (73) (144) 120 9 (216) 130 (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (173) (

This data is especially useful when shooting a video program for which a scenario has been created. shooting. While shooting, each time you press the camcorder's TAKE button, Mark IN and Mark OUT Set the camcorder to Mark mode before you start time codes are recorded atternately.

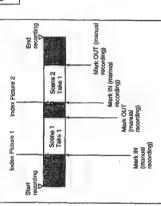

Cue point time codes

when shooting for sports coverage or documentaries. This type of data is especially useful when shooting scenes that may contain unexpected events, such as Set the camcorder to Cue mode before you start to record. While recording, each time you press the camera's TAKE button, the current time code is recorded as a cue point time code.


End recording		Rec OUT (automatic recording)
		Cue point time code (manual recording)
icture 1	Scene 1 Take 1	Oue point time code (manual recording)
Index Picture 1		Oue point time code (manual recording)
Start recording		Rec IN (automatic recording)

Appendix

ClipLink Operation Flow

Time codes recorded for Mark IN/OUT points

There is a gap between actual time codes and Mark IN/OUT time codes recorded in the cassette memory, me shown in the figure below. The frame digit is incremented at each Mark IN point and is decremented at each Mark OUT point.

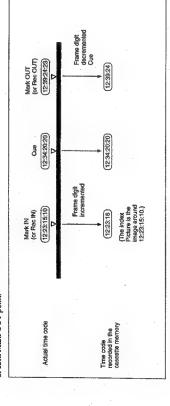

Recording capacity for Mark IN/OUT time codes and Cue point time codes


When in Mark mode, up to 198 pairs of Mark IN and Mark OUT points can be recorded (if using a cassette with 16 Rbits of cassette memory).

When in Cue mode, up to 396 time codes points (including all cue point time codes and all Mark (Rec) IN and Mark (Rec) OUT time codes) can be recorded (if using a cassette with 16 Kbits of cassette memory).

Арре

Section 2 Service Overview

2-1. Board Layout

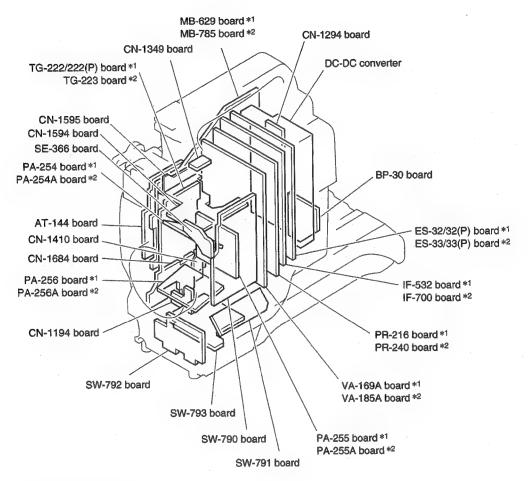


*1: DXC-D35/D35P *2: DXC-D35WS/D35WSP

2-2. Removal/Attachment of Cabinet


2-2-1. Removal of Side Plate

Slacken the eight screws as shown in the figure and remove the right and left side plates.

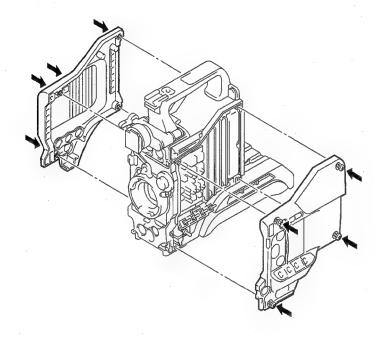


2-2-2. Removal/Attachment of Top Chassis

- 1. Remove the right and left side plates. (Refer to Section 2-2-1.)
- 2. Remove the two screws of the rear plate to remove the DC/DC converter.
- 3. Remove the VA, PR, IF and ES boards.

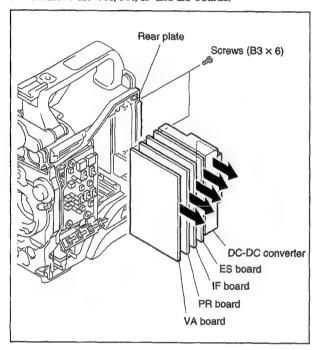

4. Remove the three screws and take off the SW board in the horizontal direction.

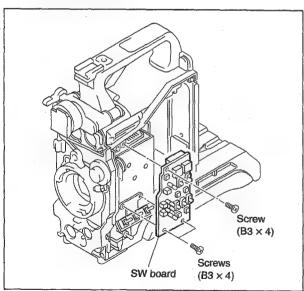


- 5. Remove the two screws and take off the AT board in the horizontal direction.
- Disconnect the four flexible card wires from the three connectors (CN805, CN806 and CN807) on the CN board and from the connector (CN103) on the MB board.


Note

When disconnecting flexible card wires, refer to Section 2-11.

- Disconnect the eleven harness connectors from the connectors on the MB board (CN2, CN105, CN106, CN107, CN117, CN118, CN119, CN120, CN121, CN122 and CN123).
- Remove the two screws and two supports on the MB board and take off the MB board in the horizontal direction.

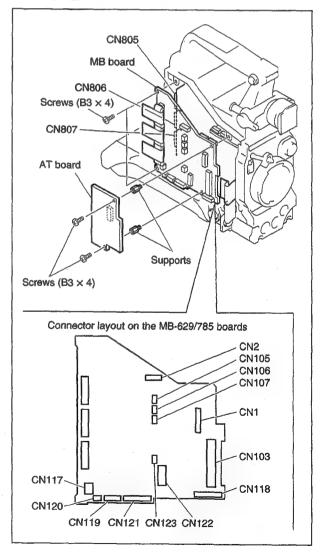


9. Remove the two screws of the front unit assembly shown in the figure and the two screws of the rear plate, and then remove the top chassis.

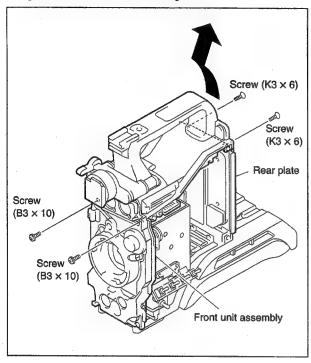

10. To reattach, perform in the reverse order of steps 1 to 9.

Notes

- Be sure to route the harnesses as shown in the figure when reattaching the MB board.
- When reinstalling the VA, PR, IF and ES boards, use care to insert securely the connectors on each board to the connectors of the MB board as far as they will go.
- When reconnecting the flexible card wires, refer to Section 2-11.

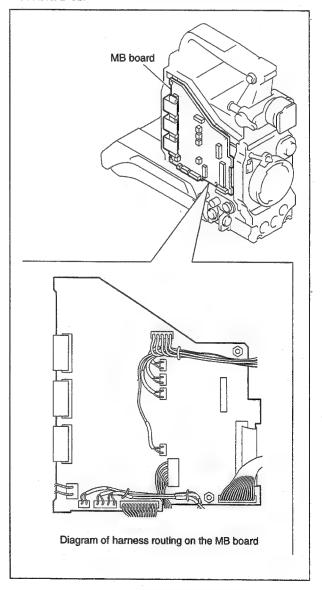

2-3. Replacement of CCD Unit

Description on CCD Block Number

Every CCD unit has its own ID number called CCD block number. It shown the CCD block type and serial number for the CCD block.

The CCD block number label is put in the CCD unit.

GUA XXXXX : DXC-D35 (NTSC)
GVA XXXXX : DXC-D35P (PAL)
HDA XXXXX : DXC-D35WS (NTSC)
HEA XXXXX : DXC-D35WSP (PAL)

Serial number for the CCD unit

- CCD block type

 Remove the lens and viewfinder. (Refer to the instruction manual.)


Note

To protect the prism block, be sure to cover the lens mount portion with the mount cap.


- 2. Remove the left side plate. (Refer to Section 2-2-1.)
- 3. Remove the AT board. (Refer to Section 2-2-2.)
- Disconnect the harness connectors from the four connectors (CN2, CN105, CN106 and CN107) and the flexible card wire from the connector (CN103) on the MB board.

Note

When disconnecting the flexible card wire, refer to Section 2-11.

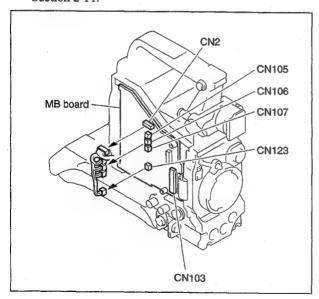


5. Remove the four screws to remove the front unit assembly.

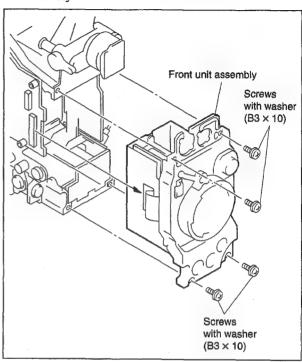


- 6. Remove the setscrew shown in the figure and take off the filter knob.
- 7. Remove the four screws and four washers of the front panel to remove the CCD unit.

Note

Use great care to avoid any pressure on the PA board when handling the CCD unit.

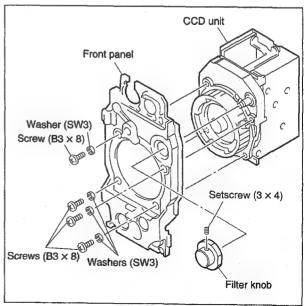

8. Take a new CCD unit out of a transport holder and install it to the unit in the reverse order of steps 1 to 7.

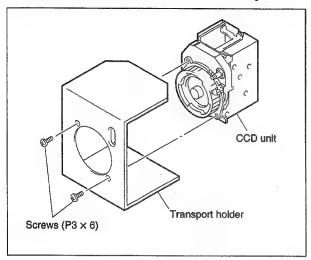

9. Perform the pedestal alignment (in Section 3-3-12), the shading alignment (in Section 3-3-13) and the flare alignment (in Section 3-3-14).

Notes

- Before performing alignment, be sure to read each item in Section 3-1-4 "Note on Alignment".
- Reuse the transport holder to transport the CCD unit removed from the unit.

2-4. Connectores and Cables

2-4-1. Connector Input/Output Signals

The main connector input/output signals are as follows:

MONITOR OUT (BNC) ; $1.0 \text{ V p-p} \pm 0.1 \text{ V}$, sync negative 75 Ω

VIDEO OUT (BNC); $1.0 \text{ V p-p} \pm 0.1 \text{ V}$, sync negative 75 Ω

CAMERA/CA (50P, MALE)

(EXTERNAL VIEW)


D : R/G/B
p
Zo≦2kΩ
GATIVE
p Zo ≦ 100 Ω
≦1 kΩ
±10 %
10 %

No. Signal	1/0	Specifications
A15 Y (G)	-	1.0 V p-p, SYNC NEGATIVE
B15 Y (X)	OUT	Zo ≦ 75 Ω ±5 %
A16 COMP (CA) GND	_	R/G/B
B16 R/R-Y (CA)	OUT	1.4 V p-p, POSITIVE
A17 G/Y (CA)	OUT	Zo ≤ 75 Ω ±5 %
B17 B/B-Y (CA)	OUT	COMPONENT OUT*1
A18 BATT ALARM/S. DAT	ГА	
B18 REC REVIEW CONT	OUT	GND ; REC REVIEW
A19 (SPARE)		
B19 (SPARE)		
A20 +8.5 V	OUT	8.3 V to 9.1 V
B20 +5 V	OUT	5 V ±0.1 V
A21 -5 V	OUT	−5 V ±0.1 V
B21 AGND	-	REG, GND
A22 POWER EXT DC	IN	10.6 V to 17.0 V dc
B22 POWER EXT DC	IN	
A23 POWER EXT DC GND	-	GND for EXT DC
B23 POWER EXT DC GND	-	
A24 (SPARE)		
B24 (SPARE)		
A25 GND (CHASSIS)	_	CHASSIS GND
B25 GND (CHASSIS)	_	
. 1		

*1

UC	CE
0.714 V p-p	0.700 V p-p
0.756 V p-p	0.525 V p-p
0.756 V p-p	0.525 V p-p
	0.714 V p-p 0.756 V p-p

CAMERA/CA (76P, MALE)

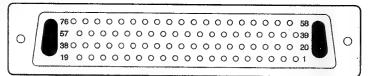

(EXTERNAL VIEW)

No.	Signal	I/O	Specifications
1	REC TALLY	IN	Zi ≥ 600 Ω
2	S.D. (V/C)	IN	H:5V L:0±0.5V
3	SCL VTR	IN	$Zi \ge 47 kΩ$ $Zo \le 1 kΩ$
4	GENLOCK (G)	_	GND for GENLOCK (X)
5	SYNC (G)	-	GND for SYNC (X)
6	PB (G)	_	GND for PB (VBS) (X)
7	PB (Y) (X)	IN	1.0 V p-p, NEGATIVE, Zi ≧ 1 kΩ
8	VBS (CA) (G)	_	GND for VBS (CA) (X)
- 9	VTR/CCU	OUT	VTR : 0 ± 0.25 V, $Z_0 \le 1 \text{ k}\Omega$ CCU : 5.0 ± 0.5 V
10	C (X)	OUT	NTSC : 0.286 V p-p ± 10 % PAL : 0.300 V p-p ± 10 % Zo ≤ 75 Ω ± 5 %
11	Y (X)	OUT	1.0 V p-p, SYNC NEGATIVE Zo \leq 75 Ω ±5 %
12	R/R-Y (CA)	OUT	R/G/B 1.4 V p-p, POSITIVE
.13	B/B-Y (CA)	OUT	Zo \leq 75 Ω ±5 % COMPONENT OUT*1
14	SKIN GATE	OUT	Gate area (H : 4 to 5.5 V dc) Non gate area (L : 0 ±0.2 V dc)
15	+5.0V	OUT	5 V ±0.1 V
16	AGND	_	REG, GND
17	EXT DC	1N	10.6 V to 17.0 V dc
18	EXT DC GND	_	GND for EXT DC
19	DCLK (X)	OUT	
20	VTR TRIG	OUT	
21	S.D. (C/V)	OUT	H:5V L:0±0.5V
22	CS VTR	IN	$Zi \ge 47 \text{ k}\Omega$ $Zo \le 1 \text{ k}\Omega$
23	GENLOCK (X)	IN	VBS : 1.0 V p-p Zi ≧ 1 kΩ
24	SYNC (X	IN	H: 4.0 to 5.5 V p-p : NEGATIVE L: 0 ±0.4 V dc Zo ≤ 2 kΩ
25	PB (VBS) (X)	IN	1.0 V p-p, SYNC NEGATIVE Zo \leq 75 Ω ±5 %
26	CF/V RESET	1/0	H : 4.0 to 5.5 V p-p, Zo \leq 2 kΩ L : 0 ±0.4 V dc

No.	Signal	1/0	Specifications
27	VBS (CA) (X)	OUT	1.0 V p-p, SYNC NEGATIVE $Zo = 75 \Omega \pm 5 \%$
28	C (G)	_	GND for C (X)
29	Y (G)	-	GND for Y (X)
30	COMP GND	_	GND for G/Y (CA)
31	G/Y (CA)	OUT	R/G/B 1.4 V p-p, POSITIVE Zo \leq 75 Ω ±5 % COMPONENT OUT *1
32	BATT S.DATA	1N	
33	+9.0 V	OUT	8.3 V to 9.1 V
34	-5.0 V	OUT	-5 V ±0.1 V
35	EXT DC	IN	10.6 V to 17.0 V dc
36	EXT DC GND	-	GND for EXT DC
37	DCF	OUT	
38	DCLK GND	_	
39	MODE ID	IN	OPEN: COMP, GND: R/G/B
40	MIC1 (G)	****	·
41	AUDIO LEV	OUT	H: 4 to 5.5 V dc L: 0 ±0.2 V dc, 1 kΩ
42	(SPARE)		
43	DIGI/ANA	IN	H : Analog L : Digital
44	(SPARE)		
45	(SPARE)		
46	(SPARE)		
47	(SPARE)		1.
48	(SPARE)		
49	(SPARE)		
50	(SPARE)		
51	(SPARE)		
52	DCLK GND	_	GND for DCLK (X)
53	BYRY (0)	OUT	H:3±0.2 V dc
54	BYRY (2)	OUT	L:0±0.2 V dc
55	BYRY (4)	OUT	
56	BYRY (6)	OUT	
57	BYRY (8)	OUT	
58	MIC1 (X)	OUT	-20 dBm, Zo ≦ 100 Ω
59	MIC1 (Y)	OUT	

REMOTE (10P, FEMALE)



(EXTERNAL VIEW)

Mari	O'mark.	110	A
NO.	Signal	1/0	Specifications
1	(SPARE)		
2	VBS (RM)	OUT	1.0 V p-p, SYNC NEGATIVE
3	VBS (RM)	OUT	
4	RS232C (C/RM)	IN	
5	VTR START/STOP	IN	Zi ≥ 10 kΩ OPEN (4.5 ±0.5 V) 0 ±0.5 V
6	S. DATA (X)		0 to 5 V Zi ≧ 10 kΩ
7	RS232C (RM/C)	OUT	GND for S. DATA
8	REC TALLY IND	OUT	Zo ≧ 600 Ω
9	POWER EXT DC GND	_	GND for EXT DC
10	POWER EXT DC	OUT	10.6 V to 17.0 V dc

VF (8P, FEMALE)



(WIRING SIDE)

No.	Signal	1/0	Specifications
1	POWER EXT DC GND	_	GND for EXT DC
2	REC TALLY IND	OUT	Zo ≦ 1.1 kΩ
	SHUTTER IND	OUT	Zo ≦ 1.1 kΩ
4	VF VIDEO (G)	OUT	GND for VF VIDEO
	BATT IND	OUT	Zo ≦ 1.1 kΩ
	VF VIDEO (X)	OUT	V = 1 V p-p
	POWER EXT DC	OUT	10.6 V to 17.0 V dc
1	GAIN UP IND	OUT	Zo ≦ 1.1 kΩ

No.	Signal	1/0	Specifications	
60	(SPARE)			
61	(SPARE)			
62	76P ID			
63	(SPARE)			
64	(SPARE)			
65	(SPARE)			
66	(SPARE)			
67	(SPARE)			
68	(SPARE)			
69	(SPARE)			-
70	(SPARE)			
71	(SPARE)			
72	BYRY (1)	OUT	H: 3 ±0.2 V dc	
73	BYRY (3)	OUT	L:0 ±0.2 V dc	
74	BYRY (5)	OUT	-	
75	BYRY (7)	OUT	-	
76	BYRY (9)	OUT	.	

*1

	UC	CE
Y	0.714 V p-p	0.700 V p-p
R-Y	0.756 V p-p	0.525 V p-p
B-Y	0.756 V p-p	0.525 V p-p

LENS (12P, FEMALE)



(EXTERNAL VIEW)

No.	Signal	1/0	Specifications
1	RET SW	IN	ON: 0 ±0.5 V dc
2	VTR START/STOP	IN	TRIG: 0 ±0.5 V
3	POWER EXT DC GND	_	GND for EXT DC
4	COMPULSORY AUTO IRIS CONT	OUT	AUTO: 4.5 ±0.5 V MANU: 0 +0.5 V or OPEN
5	IRIS CONT	OUT	F16: 3.4 V dc F2.8: 6.2 V dc
6	POWER EXT DC	OUT	10.6 V to 17.0 V dc
7	IRIS POSI	IN	F16: 3.4 ±0.1 V dc F2.8: 6.2 ±0.1 V dc
8	REMOTE/LOCAL	OUT	REMOTE: 5 V LOCAL: 0 V
9	EXTND ON/OFF	IN -	
10	ZOOM POSI	IN	
11	(SPARE)		
12	(SPARE)		


MIC (3P, FEMALE)



(EXTERNAL VIEW)

No	. Signal	VO	Specifications
1	MIC (G)	IN	GND for MIC
2	MIC (X)	IN	-60 dB
3	MIC (Y)	IN	BALANCED (0 dB = 0.775 V)

VF (20P, FEMALE)

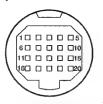

(EXTERNAL VIEW)

No.	Signal	1/0	Specifications
1	PEAKING CONT	IN	Zi ≧ 5 kΩ
2	POWER EXT DC	OUT	10.5 V to 17.0 V dc, 2 A
3	REC TALLY IND	OUT	Zo ≦ 500 Ω
4	BATT IND	OUT	Zo ≦ 1.1 kΩ
5	ZEBRA SW	IN	ON: 0 ±0.5 V
6	VF VIDEO (X)	OUT	V = 1.0 V p-p
7	POWER EXT DC	OUT	10.5 V to 17.0 V dc, 2 A
В	(SPARE)		
9	(SPARE)		
10	SDA (VF)	OUT	Zo ≦ 500 Ω, 5 V p-p
11	VF VIDEO (G)	OUT	GND for VF VIDEO
12	EXT DC GND	-	GND for EXIT DC
13	(SPARE)		
14	DISPLAY SW	IN	ON: 4.5 ±0.5 or OPEN OFF: 0 +0.5 V
15	SCL (VF)	OUT	Zo ≦ 500 Ω, 5 V p-p
16	R-Y (VF)	OUT	V = 830 mV
17	EXT DC GND	_	GND for EXIT DC
18	B-Y (VF)	OUT	V = 830 mV
19	SYNC (VF)	OUT	V = 5 V p-p
20	LD (VF)	OUT	Zo ≤ 500 Ω, 5 V p-p


2-4-2. Connection Connector

Connections made with the connector panels during installation or service, should be made with the connectors or complete cable assemblies specified in the following list, or equivalent parts.

Connector Name	Parts No. and name of connector with cable 1-506-522-11 CONNECTOR, ROUND 10P, MALE HIROSE HR 10A-10P-10P equality or CCA-7-20 Cable assembly (optional)	
REMOTE (10P, FEMALE)		
VIDEO OUT (BNC)	1-560-661-11 PLUG, BNC	
MONITOR OUT (BNC)	1-560-661-11 PLUG, BNC	
VF (8P, FEMALE)	9-994-797-01 CABLE, VF	
LENS (12P, FEMALE)	1-564-360-11 CONNECTOR, 12P, MALE HIROSE HR 10-10PA-12P equality	
MIC (3P, FEMALE)	1-508-084-31 CONNECTOR, 3P, MALE CANNON XLA-3-12C equality	
VF (20P, FEMALE)	1-778-661-11 CONNECTOR, 20P, MALE HIROSE HR 12-14PA-20PC equality	

2-5. How to Attach of the Extension Board EX-591

When using the extension board EX-591, attach as follows.

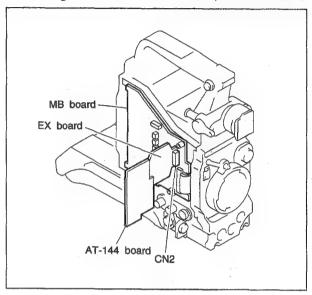


2-6. Replacement Way of ROM (IC102)

Note

Perform "RESET" of PAGE 1 in the SERVICE menu after replacing a ROM.

- 1. Slide the IC socket cover in the arrow A direction until it clicks and remove the IC socket cover.
- 2. Replace a new ROM (IC102).
- 3. Place the IC socket cover with a clearance at the arrow A side. (Refer to Fig.1)
- For attachment, press the IC socket cover in the reverse direction of arrow A until it clicks while holding the ROM.

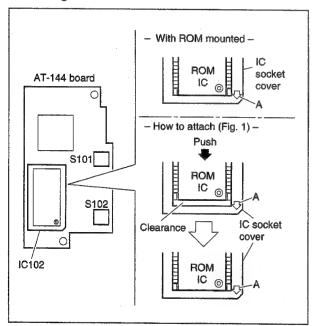

2-7. Switch Settings on Boards

Note


Do avoid changing settings of switches designated as "For factory adjustment".

AT-114 board

S101: Camera mode setting ON or OFF


	ON	OFF	
S101-1	NTSC	PAL	
S101-2	DXC-D35WS	DXC-D35	

S102: For factory adjustment Use always with the setting OFF

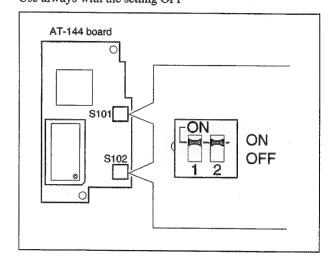

2-8. DC-DC Converter Voltage

Voltage values can be check as following ① to ② points on MB board and MIC connector.

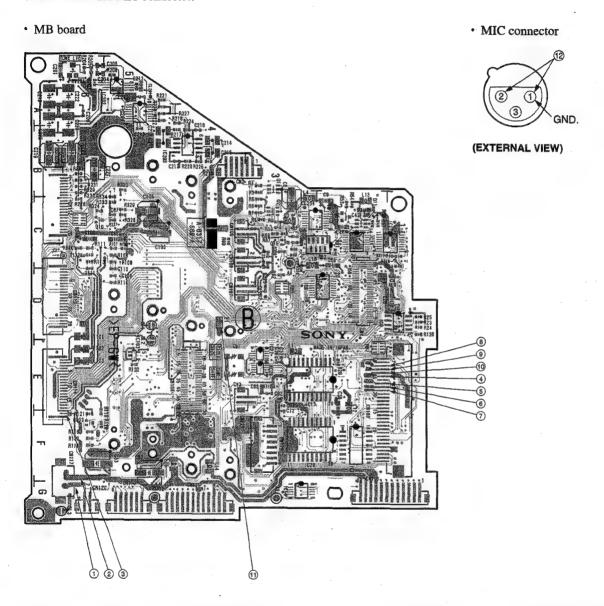

No.	CHECK POINT	VOLTAGE VALUE
①	CN117-2 pin	EXT. DC OUT
2	CN117-1 pin	EXT. DC GND
3	CN114-20 pin	+3.1 V
4	CN103-25 pin	+5.3 V
5	CN103-23 pin	−5 V
6	CN103-22 pin	+9 V


No.	CHECK POINT	VOLTAGE VALUE
7	CN103-21 pin	-10 V
8	CN103-28 pin	+6.5 V
9	CN103-27 pin	+16 V
10	CN103-26 pin	+32 V
11)	E1 (GND)	
12	MIC 2 pin/1 pin(GND)	+48 V

2-9. Recommended Replacement Parts

Parts listed below are recommended replacement parts. Optical filter unit may be turned cloudy with the lapse of time. If using a cloudy filter, the performance of the camera will not be delivered. Replace it according to necessary.

Parts made of rubber used in the unit are subject to cracks with the lapse of time. Visually check them sometimes and replace them according to necessary.

Fig No.	Description	Sony P/N	Remarks
1	PAD ASSY	A-8278-807-C	rubber
2	FILTER UNIT, OPTICAL	1-547-985-11	for DXC-D35
	FILTER UNIT, OPTICAL	1-547-985-21	for DXC-D35P
	FILTER UNIT, OPTICAL	1-758-131-11	for DXC-D35WS/D35WSP
3	RACKING, CONTROL	3-672-221-02	rubber

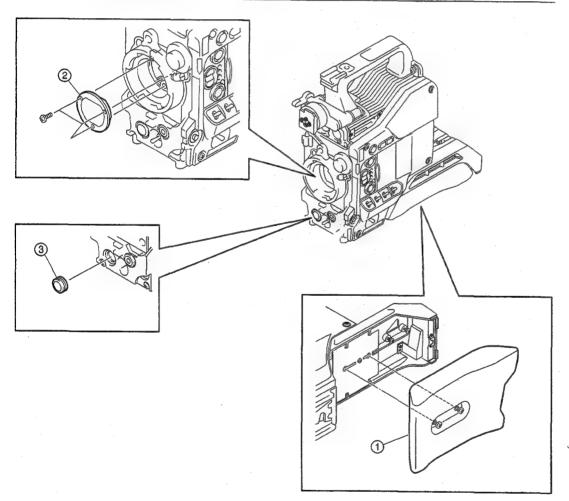

2-10. Attaching the 4-type or 5-type Viewfinder

An optional 4-type viewfinder (DXF-40 series) or 5-type viewfinder (DXF-50 series) can be attached in accordance with the following procedures:


Parts Required (sold separately)

Name	Sony Part No.	_
· Accessory shoe kit	A-8274-968-B	
Shoe	3-664-218-0X	
Plate spring	3-664-228-0X	
Stop screw	3-664-213-0X	
Screw K3 × 6 (4 pcs)	7-682-247-0X	
Screw K3 x 12 (4pcs) *1	7-682-250-0X	


*1: These screws are not used.

Attaching Procedure

- 1. Remove a screw and remove the blind pate.
- 2. Tighten the shoe with four screws (K3 \times 6).
- 3. Fix the plate spring in the shoe in the arrow direction and tighten it with the stop screw.

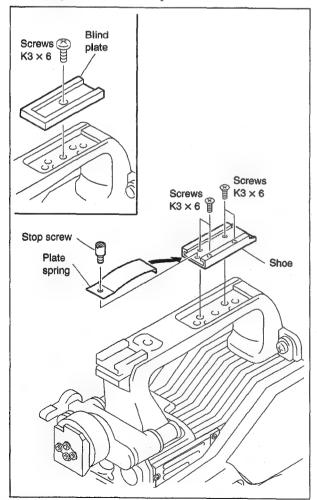

- 4. Fit the guide plate in the shoe and tighten the fixing ring.
- 5. Connect the VF connection cable.

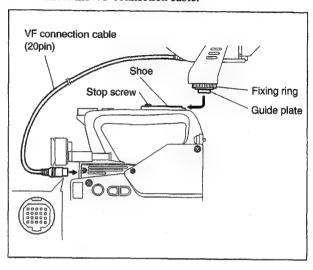

2-11. Disconnecting/Connecting the Flexible Card Wire

The flexible card wires are used among the CN-1294 board and the MB board, the MB board and the TG board. Be careful not to bend these wires. This shortens the wire life.

Disconnecting

1. Turn off the power of the camera.

Type A


(between the MB board and CN-1294 board.)

2. Disconnect the flexible card wire.

Type B

(between the MB board and TG board)

2. Slide portion A in the direction of the arrow and disconnect the flexible card wire.

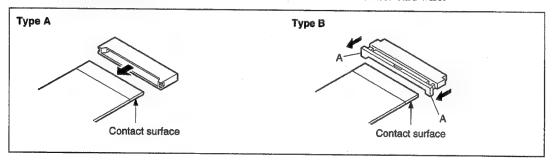

Connecting

Notes

- · Be careful not to insert the flexible card wires obliquely.
- · Check that the contact surface of the flexible card wire is not soiled with dust.

Type A

1. Insert the flexible card wire as far as it will go into connector with the contact surface of the wire faced to the board.

Type B

- 1. Slide portion A in the direction of the arrow and insert the flexible card wire as far as it will go into connector with the contact surface of the wire put down.
- 2. Slide portion A in the opposite direction of the arrow and lock.

2-12. Service Mode Operation

This unit has the BASIC menu, ADVANCE menu, SERVICE menu to be operated in the service mode, and FILE menu.

SERVICE mode

To enter the service mode, set the S105 (OPE \leftrightarrow ADJ) on the SW-791 board to ADJ.

· Menu select screen

When the S105 on the SW-791 board is set to ADJ, the menu select screen is displayed.

→ OPEN MENU (YES→▲) SERVICE

Operating method

Move the cursor to the menu items by the MENU/STATUS switch, select the menu by UP/ON button or DOWN/OFF button. (The menu changes in turn SERVICE \leftrightarrow BASIC \leftrightarrow ADVANCE \leftrightarrow FILE \leftrightarrow SERVICE.) Under displaying the menu item to be operated, move the cursor to "OPEN MENU" and press the UP/ON button to go to the selected menu page.

When the page of the selected menu is displayed, the normal operation for the menu is available. When exiting from the menu, the screen returns to the menu select screen.

Reference

The menu screen can be seen on the viewfinder or MONITOR OUT of this camera unit.

2-12-1. Service Menu

Reset items and standard values to be set.

Page		Item	Standar UC	d set value PAL
4		M.PKNEE1	65	65 70 *
		M.PKNEE2	120	120
		M.PKNEE3	160	160
		M.PKNEE4	215	215
		R PKNEE	128	128
		B PKNEE	128	128
9 1	NTSC	SETUP	ON	_
		READ OUT	FD	-
		V BLKG	20H	-
F	PAL	COMP LEV	_	525
		READ OUT	_	FD
10		TEST	OFF	OFF
		R-Y	ON	ON
		B-Y	ON	ON
13		GAMMA	ON	ON
		MATRIX	ON	ON
		DETAIL	ON	ON
		APERTURE	ON	ON
		FLARE	ON	ON
14		RTITLE	75	75
		G TITLE	75	75
		B TITLE	75	75
		R EDGE	0	0
		G EDGE	0	0
		B EDGE	0	0
15		M.GAMMA	132	132
		R GAMMA	±0	±0
		B GAMMA	±0	±0
		M.BLACK	2070	2075
16		WHT CLIP	255	255
		HI L.SAT	152	152
		IRIS GAIN	128	128
		IRIS MODE	100	100
		IRIS SET	144	144
		LOW LIGHT	144	160

Page	Item	Standard	set value PAL
18	FILTER1	3200k	3200k
	FILTER2	5600k + 1/8ND	5600k + 1/8ND
	FILTER3	5600k	5600k
	FILTER4	5600k + 1/64ND	5600k + 1/64ND
19	DIAG ERROR RESET	_	_
	MEMORY BACKUP	_	_
20	Self-diagnosis result display1	1	1
21	Self-diagnosis result display2	1	1
22	Self-diagnosis result display3	1	1
26	OPTION1	OFF	OFF
	OPTION2	OFF	OFF

^{*:} for DXC-D35WSP

Page 1 RESET (For DXC-D35/D35WS)

→PAGE1 (NEXT→▼ PREV→▲)

RESET
(YES→▲)

DEST: UC

ROM VER: ***

Adjusting values such as the electronic volume control of each board except the values differ in every unit can be restored to their standard setting values.

Move the cursor to "DEST" position, select "UC," and move the cursor to "RESET," then press UP/ON button twice.

(For DXC-D35P/D35WSP)

→PAGE1 (NEXT→▼ PREV→▲)

RESET
(YES→▲)

ROM VER: ***

Page 2 Shading Correction

→PAGE2 (NEXT→▼ PREV→▲)

EXTENDER OFF
AUTO SHAD

(YES→▲)

R W. SHAD : 128

G W. SHAD : 128

B W. SHAD : 128

EXIT MENU (YES→▲)

EXTENDER Current LENS EXTENDER status display
AUTO SHAD Performing of AUTO SHADING correction
R W.SHAD/G W.SHAD/B W.SHAD

White shading correction of V Standard (correct.on 0) = 128

· Page 3 Flare Adjustment

→PAGE3 (NEXT→▼ PREV→▲)

R FLARE : 0
G FLARE : 0
B FLARE : 0

EXIT MENU (YES→▲)

R FLARE Rch flare correction (0 = no correction) amount adjust-

G FLARE Gch flare correction (0 = no correction) amount adjustment

B FLARE Bch flare correction (0 = no correction) amount adjust-

ment

· Page 4 Pre Knee Setting

→PAGE4 (NEXT→▼ PREV→▲)

M.PKNEE1 : 65
M.PKNEE2 : 120
M.PKNEE3 : 160
M.PKNEE4 : 215
R.PKNEE : 128
B.PKNEE : 128

EXIT MENU (YES→▲)

M.PKNEE1 Usual master pre-knee point adjustment
 M.PKNEE2 Master pre-knee point in GAIN -3 dB adjustment
 M.PKNEE3 Master pre-knee point in flame read out mode adjustment
 M.PKNEE4 Master pre-knee point in GAIN -3dB & flame read out mode adjustment
 P.PKNEE Fine adjustment for the R channel's pre-knee point
 B.PKNEE Fine adjustment for the B channel's pre-knee point

Page 5 Camera COMPONENT Level Adjustment

→PAGE5 (NEXT→▼ PREV→▲)

W Y LEV : 120

W R-Y LEV : 100

W B-Y LEV : 100

Y LEV : 120

R-Y LEV : 111

B-Y LEV : 100

SYNC LEV : 80

SETUP LEV : 135

EXIT MENU (YES→▲)

WY LEV 16:9 Y level adjustment*
W R-Y LEV 16:9 R-Y level adjustment*
W B-Y LEV 16:9 B-Y level adjustment*
Y LEV 4:3 Y level adjustment
R-Y LEV 4:3 R-Y level adjustment
B-Y LEV 4:3 B-Y level adjustment
SYNC LEV SYNC level adjustment
SETUP LEV SETUP level adjustment

(NTSC model only adjustable when setup is on.)

*: Adjustable only for DXC-D35WS/D35WSP

Page 6 Camera CLAMP Level Adjustment

→PAGE6 (NEXT→▼ PREV→▲)

Y CLP : 128
R-Y CLP : 120
B-Y CLP : 120

EXIT MENU (YES→▲)

Y CLP Y clamp level adjustment
R-Y CLP R-Y clamp level adjustment
B-Y CLP B-Y clamp level adjustment

Page 7 Chroma/VF Adjustment

→PAGE7 (NEXT→▼ PREV→▲)

R-Y C/B : 110
R-Y BST : 0
B-Y C/B : 110
B-Y BST : 75
VF SYNC : 170
VF BLKG : 135

EXIT MENU (YES→▲)

R-Y C/B R-Y carrier balance adjustment
R-Y BST R-Y burst level adjustment
B-Y C/B B-Y carrier balance adjustment
B-Y BST B-Y burst level adjustment
VF SYNC Viewfinder video sync level adjustment
VF BLKG Viewfinder video blanking level adjustment

Page 8 Chroma SC Adjustment

→PAGE8 (NEXT→▼ PREV→▲)

SC FREQ : SC-H : 2550 450

EXIT MENU (YES→▲)

SC FREQ

SC frequency adjustment

SC-H

SC-H phase adjustment

Page 9 Various Setting 1 (For DXC-D35/D35WS)

→PAGE9 (NEXT→▼ PREV→▲)

SETUP : READ OUT : V BLKG :

EXIT MENU (YES → ▲)

SETUP

ON/OFF control of setup

READ OUT FD (Field): CCD switches to Field read mode

FM (Frame): CCD switches to Frame read mode

V BLKG

V blanking width setting (19/20/21H)

Reference

In frame read out, higher vertical resolution can be obtained, however, in such a case image lag is increasing.

If shutter function is on in frame read out, sensitivity drops in half against the normal.

(For DXC-D35P/D35WSP)

→PAGE9 (NEXT→▼ PREV→▲)

SETUP : OFF FD V BLKG

EXIT MENU (YES→▲)

COMP LEV 525/700 selection of color difference output (pin 26)

READ OUT FD (Field): CCD switches to Field read mode FM (Frame): CCD switches to Frame read mode

Page 10 TEST MODE

→PAGE10 (NEXT→▼ PREV→▲)

EXIT MENU (YES→▲)

TEST TEST OFF: TEST SAW

> TEST: 1 Displays 100 % TEST SAW.

> TEST: 2 Displays 226 % TEST SAW.

> TEST: 3 Displays 226 % TEST SAW

in the lower side of screen.

R-Y ON/OFF control of R-Y output

B-Y ON/OFF control of B-Y output

Page 11 CCD BLOCK No. Information

→PAGE11 (NEXT→▼ PREV→▲)

HEAD 1 : G
HEAD 2 : V
HEAD 3 : 0
HEAD 4 : 0
HEAD 5 : 0
HEAD 6 : 1
HEAD 7 : 6

EXIT MENU (YES→▲)

HEAD1 to 7 CCD block number

Note

Be sure to input the CCD block number which is shown on the side of CCD unit after the replacement of TG board or the EEPROM (IC1) on the TG board.

Page 12 Sub-Voltage Information

→PAGE12	(NEXT→▼ PREV→▲)	
R RG G RG B RG R SUB G SUB B SUB TPC	90 90 90 128 128 128 128	
EXIT MEI	NU (YES→▲)	

R RG	R RG-voltage setting
G RG	G RG-voltage setting
B RG	B RG-voltage setting
R SUB	R channel sub-voltage setting
G SUB	G channel sub-voltage setting
B SUB	B channel sub-voltage setting
TPC	NR temperature compensation constant setting

Note

Values shown on the screen depend on each CCD unit. Never change the value.

Page 13 Various Setting 2

→PAGE13 (NEXT→▼ PREV→▲)	
GAMMA : ON MATRIX : ON DETAIL : ON APERTURE: ON FLARE : ON	
EXIT MENU (YES→▲)	

GAMMA ON/OFF control of GAMMA
MATRIX ON/OFF control of MATRIX
DETAIL ON/OFF control of DETAIL
APERTURE ON/OFF control of APERTURE
FLARE ON/OFF control of FLARE correction

Page 14 TITLE Color Setting

→PAGE14 (NEXT→▼ PREV→▲)

R TITLE : 75
G TITLE : 75
B TITLE : 75
R EDGE : 0
G EDGE : 0
B EDGE : 0
ABC123

EXIT MENU (YES→▲)

When displaying the title in the video signal, title color can be set manually. Besides, edge color of title character can be set manually.

R TITLE	Title's R level (0/25/50/75)
G TITLE	Title's G level (0/25/50/75)
B TITLE	Title's B level (0/25/50/75)
R EDGE	Title edge's R level (0/25/50/75)
G EDGE	Title edge's G level (0/25/50/75)
B EDGE	Title edge's B level (0/25/50/75)
ABC123	Indication for checking actual title color

· Page 15 Various Setting 3

→PAGE15 (NEXT→▼ PREV→▲)

M.GAMMA : 132
R.GAMMA : ± 0
B.GAMMA : ± 0
M.BLACK : 2083

M.GAMMA Standard value setting of master GAMMA R.GAMMA R channel's GAMMA offset setting B.GAMMA B.CAMMA Standard value setting of master BLACK

Page 16 CLIP/IRIS Related Setting

→PAGE16 (NEXT→▼ PREV→▲)

WHT CLIP : 255
HI L.SAT : 152
IRIS GAIN : 128
IRIS MODE : 100
IRIS SET : 144
LOW LIGHT : 152

EXIT MENU (YES→▲)

WHT CLIP
HI L.SAT
Setting of saturation in the high-light portion
IRIS GAIN
IRIS MODE
Setting of auto iris following speed
Setting of auto iris's peak and average values.
IRIS SET
Setting of the target value of auto iris
LOW LIGHT
Setting of LOW LIGHT warning indication level
* For DXC-D35/D35WS: 152
For DXC-D35P/D35WSP: 160

• Page 17 Color Temperature Calculation Reference Setting

→PAGE17 (NEXT→▼ PREV→▲)

COLOR TEMP CAL.

(YES→PUSH)

R: 128

B: 128

MIC ADJ: 130

EXIT MENU (YES→▲)

COLOR TEMP CAL. Captures the reference value of color temperature indication

R R channel's color temperature indication;

Reference value setting

· Result of capturing the reference value

B B channel's color temperature indication;

Reference value setting

· Result of capturing the reference value

Notes

In COLOR TEMP CAL., it captures the color temperature calculation reference value during operating of White Balance auto adjustment. Normally, it is not necessary to perform this adjustment.

If the color temperature value, which is indicated on the screen, differs from an actual value, perform CCD OUT level adjustment and etc. and to capture the reference value as follows:

- 1. Shoot the pattern (color temperature = 3200 K).
- 2. Set the WHT BAL switch to A or B, and perform Auto White adjustment.
- 3. Move the cursor on the COLOR TEMP CAL. position and push the UP /ON button.

MIC ADJ Setting of musical note mark indication level

· Page 18 FILTER Display Setting

→PAGE18 (NEXT→▼ PREV→▲)

FILTER1 FILTER2 FILTER3 FILTER4

: 3200 : 5600+1/8ND : 5600 : 5600+1/64ND

EXIT MENU (YES→▲)

FILTER 1 to 4

Make this setting in accordance with a kind of filter attached.

Note

When changing the filter, be sure to make a set.

· Page 19 Self Diagnosis 1

→PAGE19 (NEXT→▼ PREV→▲)

DIAG ERROR RESET (YES→▲)

MEMORY BACKUP (YES→▲)

EXIT MENU (YES→▲)

DIAG ERROR RESET

This item is used for erasing an error check results and a history of error items.

MEMORY BACKUP

This item is used when back up the EEPROMs data on the TG, IF, and ES boards to EEPROM on the MB board.

Note

Backup is needed when the TG, IF, or ES board has been replaced.

Reference

If there is a communication error between the TG, IF, or ES board's EEPROM and microcomputer when the power is turned on, the backed up data in EEPROM on the MB board is used.

The "DIAG ERROR RESET" and "MEMORY BACKUP" will be also carried out when the RESET in Service Menu Page 1 is executed.

· Page 20 Selfdiagnosis 2

PAGE20 (NEXT→▼ PREV→▲)

ERROR DISP 1/3

→DISP SELECT : 1

PP-PMPD : 000H

PR-PMPD1: 000H

PR-PMPD2: 000H

PR-G2 : 000H

PR-R2 : 000H

EXIT MENU (YES→▲)

DISP SELECT

The contents of the defective item display are switched.

- 1: The result of latest error check is displayed.
- 2: This selfdiagnosis is automatically carried out, and the defective items diagnosed in the past are displayed.

PP-PMPD

The details of check result for the synchronization signal input and the internal RAM in PP LSI are displayed.

800H: The internal RAM of PP LSI is abnormal.

002H: The input HD signal (PR board IC405, pin 102) to the PP LSI is abnormal.

001H: The input VD signal (PR board IC405, pin 101) to the PP LSI is abnormal.

PR-PMPD1

The details of check result for the synchronization signal input in RP LSI are displayed.

002H: The input HD signal (PR board IC411, pin74) to the PR LSI is abnormal.

001H: The input VD signal (PR board IC411, pin73) to the PR LSI is abnormal.

PR-PMPD2

The details of check result for the internal RAM in PR LSI are displayed.

800H: The internal RAM of PR LSI is abnormal.

PR-G2

This display item is not used.

PR-R2

This display item is not used.

Reference

When the plurality of abnormality is occurs, the hexadecimal numbers of three digits are displayed for indiacating the total value of each error codes.

Example: When both HD and VD signals input to the PP LSI are abnormal, the PP-PMPD displays is 003H.

• Page 21 Selfdiagnosis 3

PAGE21 (NEXT→▼ PREV→▲)

ERROR DISP 2/3

→DISP SELECT : 1

PR-G1 : 000H

PR-R1 : 000H

PR-G0 : 000H

PR-R0 : 000H

PR-B1 : 000H

EXIT MENU (YES→▲)

PR-G1

This display item is not used.

PR-R1

This display item is not used.

PR-G0

This display item is not used.

PR-R

This display item is not used.

PR-B1

This display item is not used.

· Page 22 Selfdiagnosis 4

PAGE22 (NEXT→▼ PREV→▲)

ERROR DISP 3/3

→DISP SELECT: 1

RC- PMPD: 000H

RC- CY : 000H

RC- CCR : 000H

RC- CCB : 000H

DSP COM.: 000H

MEMORY : 000H

EXIT MENU (YES→▲)

RC-PMPD

The details of check result for synchronization signal input and the internal RAM in RC LSI are displayed.

800H: The internal RAM of RC LSI is abnormal.

004H: The input CF signal (IF board IC520, pin63) to the RC LSI is abnormal.

002H: The input HD signal (IF board IC520, pin64) to the RC LSI is abnormal.

001H: The input VD signal (IF board IC520, pin65) to the RC LSI is abnormal.

RC-CY

The details of check result for the connection regarding the Y signal between PR LSI and RC LSI are displayed.

400H: The connection between PR board IC411 pin94 and IF board IC520 pin97 is abnormal. (The No.10 of Y signal)

200H: The connection between PR board IC411 pin93 and IF board IC520 pin98 is abnormal. (The No.9 of Y signal)

100H: The connection between PR board IC411 pin92 and IF board IC520 pin99 is abnormal. (The No.8 of Y signal)

080H: The connection between PR board IC411 pin91 and IF board IC520 pin100 is abnormal. (The No.7 of Y signal)

040H: The connection between PR board IC411 pin90 and IF board IC520 pin101 is abnormal. (The No.6 of Y signal)

020H: The connection between PR board IC411 pin89 and IF board IC520 pin103 is abnormal. (The No.5 of Y signal)

010H: The connection between PR board IC411 pin88 and IF board IC520 pin104 is abnormal. (The No.4 of Y signal)

008H: The connection between PR board IC411 pin86 and IF board IC520 pin105 is abnormal. (The No.3 of Y signal)

004H: The connection between PR board IC411 pin85 and IF board IC520 pin106 is abnormal. (The No.2 of Y signal)

002H: The connection between PR board IC411 pin84 and IF board IC520 pin107 is abnormal. (The No.1 of Y signal)

001H*: The connection between PR board IC411 pin83 and IF board IC520 pin108 is abnormal. (The No.0 of Y signal)

*: DXC-D35WS/D35WSP do not have this function.

- RC-CCR (DXC-D35WS/D35WSP do not have this function.)
 - The details of check result for the connection regarding the CR signal between PR LSI and RC LSI are displayed.
 - 400H: The connection between PR board IC411 pin108 and IF board IC520 pin84 is abnormal. (The No.10 of CR signal)
 - 200H: The connection between PR board IC411 pin107 and IF board IC520 pin85 is abnormal. (The No.9 of CR signal)
 - 100H: The connection between PR board IC411 pin106 and IF board IC520 pin86 is abnormal. (The No.8 of CR signal)
 - 080H: The connection between PR board IC411 pin104 and IF board IC520 pin87 is abnormal. (The No.7 of CR signal)
 - 040H: The connection between PR board IC411 pin103 and IF board IC520 pin88 is abnormal. (The No.6 of CR signal)
 - 020H: The connection between PR board IC411 pin102 and IF board IC520 pin89 is abnormal. (The No.5 of CR signal)
 - 010H: The connection between PR board IC411 pin101 and IF board IC520 pin92 is abnormal. (The No.4 of CR signal)
 - 008H: The connection between PR board IC411 pin100 and IF board IC520 pin93 is abnormal. (The No.3 of CR signal)
 - 004H: The connection between PR board IC411 pin99 and IF board IC520 pin94 is abnormal. (The No.2 of CR signal)
 - 002H: The connection between PR board IC411 pin98 and IF board IC520 pin95 is abnormal. (The No.1 of CR signal)
 - 001H: The connection between PR board IC411 pin95 and IF board IC520 pin96 is abnormal. (The No.0 of CR signal)

RC-CCB (DXC-D35WS/D35WSP do not have this function.)

- The details of check result for the connection regarding the CB signal between PR LSI and RC LSI are displayed.
- 400H: The connection between PR board IC411 pin121 and IF board IC520 pin70 is abnormal. (The No.10 of CB signal)
- 200H: The connection between PR board IC411 pin120 and IF board IC520 pin71 is abnormal. (The No.9 of CB signal)
- 100H: The connection between PR board IC411 pin119 and IF board IC520 pin72 is abnormal. (The No.8 of CB signal)
- 080H: The connection between PR board IC411 pin118 and IF board IC520 pin75 is abnormal. (The No.7 of CB signal)
- 040H: The connection between PR board IC411 pin117 and IF board IC520 pin76 is abnormal. (The No.6 of CB signal)
- 020H: The connection between PR board IC411 pin116 and IF board IC520 pin77 is abnormal. (The No.5 of CB signal)
- 010H: The connection between PR board IC411 pin115 and IF board IC520 pin78 is abnormal. (The No.4 of CB signal)
- 008H: The connection between PR board IC411 pin112 and IF board IC520 pin79 is abnormal. (The No.3 of CB signal)
- 004H: The connection between PR board IC411 pin111 and IF board IC520 pin80 is abnormal. (The No.2 of CB signal)
- 002H: The connection between PR board IC411 pin110 and IF board IC520 pin82 is abnormal. (The No.1 of CB signal)
- 001H: The connection between PR board IC411 pin109 and IF board IC520 pin83 is abnormal. (The No.0 of CB signal)

Reference

If the input of synchronization signal to the PR LSI or RC LSI is abnormal, the connection check between PR LSI and RC LSI also detects the abnormality.

RC LSI relation check is carried out only when the digital output of DXC-D35/D35P is used for connecting DSR-1/1P and so on.

DSP COM

The details of check result for the communication between each LSI and microcomputer are displayed.

004H: The communication between RC LSI and microcomputer is abnormal. (IF IC520)

002H: The communication between PR LSI and microcomputer is abnormal. (PR IC411)

001H: The communication between PP LSI and microcomputer is abnormal. (PR IC405)

Reference

The RC LSI communicates with the microcomputer by six pins of pin26(CS), pin25(SCK), pin24(SDA0), pin23(SDA1), pin22(SDA2) and pin21(SDA3).

The PR LSI communicates with the microcomputer by six pins of pin58(CS), pin57(SCK), pin56(SDA0), pin55(SDA1), pin54(SDA2) and pin53(SDA3).

The PP LSI communicates with the microcomputer by six pins of pin41(CS), pin40(SCK), pin39(SDA0), pin38(SDA1), pin37(SDA2) and pin36(SDA3). If the communication between LSI and the microcomputer is abnormal, the abnormality of other item may be detected at the same time.

MEMORY

The details of check result for the communication between each EEPROM and microcomputer are displayed.

080H: The communication between EEPROM of ES and microcomputer is abnormal.

040H: The communication between EEPROM of IF and microcomputer is abnormal.

020H: The communication between EEPROM of TG and microcomputer is abnormal.

010H: The communication between EEPROM of MB and microcomputer is abnormal.

Reference

The corresponding display for the data of each EEPROM on the service menu becomes a blank column, when the EEPROM on the TG, IF, ES and MB boards is abnormal.

• Page 23 Current Status Display

→PAGE23 (NEXT→▼ PREV→▲)

POWER : 13.0V
TIS : 250h
R GAIN : 800h
B GAIN : 800h
IRIS POS : 800h
KWC : 800h

EXIT MENU (YES→▲)

Information for production.

Page 24 TG ROM Operation

→PAGE24 (NEXT→▼ PREV→▲)
TG ROM

EXIT MENU (YES→▲)

Not in use

• Page 25 Carrier Adjustment When DPR (Dual Pixel Readout) is on.

→PAGE25 (NEXT→▼ PREV→▲)

R D.DARK : 128
G D.DARK : 128
B D.DARK : 128

EXIT MENU (YES→▲)

R D.DARK R Carrier balance adjustment at DPR ON G D.DARK G Carrier balance adjustment at DPR ON B D.DARK B Carrier balance adjustment at DPR ON

• Page 26 Option

→PAGE26 (NEXT→▼ PREV→▲)

OPTION1 : OFF
OPTION2 : OFF
:

Normally this item setting is OFF.

2-12-2. File Menu

DXC-D35/D35P

Reset items and standard values to be set.

		Standard set value					
		NO.1	NO.2	NO.3	NO.4	NO.5	NO.6 to 8
ITEM		STD	HISAT	FL	FILMLIKE	SVHS/VHS	USER1 to 3
M.BLACK		±0	±0	±0	±0	±0	±0
STRETCH		±0	±0	±0	±0	±0	±0
M.GAMMA		±0	±0	±0	-33	±0	±0
DTL LEV		±0	+10	±0	-99	-40	±0
V DTL LEV		±0	±0	±0	±0	-10	±0
DTL FREQ		М	M	. M	М	L	M
SAT		±0	±0	±0	±0	- 5	±0
HUE		±0	±0	±0	±0	±0	±0
SKIN SAT		±0	±0	±0	±0	±0	±0
SKIN HUE		±0	±0	±0	±0	±0	±0
M.KNEE P		310	310	310	310	310	310
M.KNEE S		90	90	90	90	90	90
GAMMA TBL		В	В	В	Α	В	В
COMB		OFF	OFF	OFF	OFF	OFF	OFF
R-G LEV	NTSC	65	80	99	12	65	65
	PAL	38	50	50	12	38	38
R-B LEV	NTSC	12	20	-15	9	12	12
	PAL	10	24	10	9	10	10
G-R LEV	NTSC	14	23	25	-6	14	14
	PAL	6	10	14	-6	6	6
G-B LEV	NTSC	32	46	-9	37	32	32
	PAL	15	30	12	37	15	15
B-R LEV	NTSC	10	11	0	-8	10	10
	PAL	6	10	10	-8	6	6
B-G LEV	NTSC	3	5	0	24	3	3
	PAL	7	12	-2	24	7	7
T-G WIDTH		40	40	40	40	40	40
R-B WIDTH		20	20	20	20	20	20
G-R WIDTH		20	20	20	20	20	20
G-B WIDTH		-40	-40	-40	-40	-40	-40
B-R WIDTH		-20	-20	-20	-20	-20	-20
B-G WIDTH		-20	-20	-20	-20	-20	-20
LEVEL DEP		52	52	52	52	52	52
V DTL LIM		20	20	20	20	20	20
CRISP		10	10	10	10	10	10
APERTURE		128	128	128	63	35	128
AFT DTL		10	10	10	10	40	10

	Standard set value					
	NO.1	NO.2	NO.3	NO.4	NO.5	NO.6 to 8
KNEE APT	24	24	24	63	24	24
HIGH DTL	63	63	63	63	63	63
CCS LEV	5	5	5	5	5	5
STRP1	20	20	20	20	20	20
STRP2	45	45	45	45	45	45
PRSP1	8	8	8	8	8	В
PRSP2	63	63	63	63	63	63

DXC-D35WS/D35WSP

Reset items and standard values to be set.

		Standard set value					
		NO.1	NO.2	NO.3	NO.4	NO.5	NO.6 to 8
ITEM		STD	HISAT	FL	FILMLIKE	SVHS/VHS	USER1 to 3
M.BLACK		±0	±0	±0	±0	±0	±0
STRETCH		±0	±0	±0	±0	±0	±0
M.GAMMA		±0	±0	±0	-33	±0	±0
DTL LEV		±0	10	±0	80	-50	±0
V DTL LEV		±0	±0	±0	±0	-10	±0
DTL FREQ		M	M	M	M	L	М
SAT		±0	±0	±0	±0	- 5	±0
HUE		±0	±0	±0	±0	±0	±0
SKIN SAT		±0	±0	±0	±0	±0	±0
SKIN HUE		±0	±0	±0	±0	±0	±0
M.KNEE P		310	310	310	310	310	310
M.KNEE S		90	90	90	90	90	90
GAMMA TBL		В	В	В	Α	В	В
COMB		OFF	OFF	OFF	OFF	OFF	OFF
R-G LEV	NTSC	65	80	99	12	65	65
	PAL	38	50	50	12	38	38
R-B LEV	NTSC	12	20	-15	9	12	12
	PAL	10	24	10	9	10	10
G-R LEV	NTSC	14	23	25	-6	14	14
	PAL	6	10	14	-6	6	6
G-B LEV	NTSC	32	46	-9	37	32	32
	PAL	15	30	12	37	15	15
B-R LEV	NTSC	10	11	0	-8	10	10
	PAL	6	10	10	-8	6	6
B-G LEV	NTSC	3	5	0	24	3	3
	PAL	7	12	-2	24	7	7
R-G WIDTH		40	40	40	40	40	40
R-B WIDTH		20	20	20	20	20	20
G-R WIDTH		20	20	20	20	20	20
G-B WIDTH		-40	-40	-40	-40	-40	-40
B-R WIDTH		-20	-20	-20	-20	-20	-20
B-G WIDTH		-20	-20	-20	-20	-20	-20
LEVEL DEP		52	52	52	52	52	52
V DTL LIM		20	20	20	20	20	20
CRISP		10	10	10	10	10	10
APERTURE		145	145	145	128	128	145
AFT DTL		10	10	- 10	10	40	10

	Standard set value					
	NO.1	NO.2	NO.3	NO.4	NO.5	NO.6 to 8
KNEE APT	24	24	24	63	24	24
HIGH DTL	63	63	63	63	63	63
CCS LEV	5	5	5	5	5	5
STRP1	20	20	20	20	20	20
STRP2	45	45	45	45	45	45
PRSP1	8	8	В	8	8	В
PRSP2	63	63	63	63	63	63

Page 1 All Reset (For DXC-D35/D35WS)

→ PAGE1 (NEXT→▼ PREV→▲)

ALL RESET
(YES→▲)
DEST: UC

EXIT MENU (YES→▲)

Each item value in all FILE can be restored to their standard setting (factory setting).

(For DXC-D35P/D35WSP)

→ PAGE1 (NEXT→▼ PREV→▲)

ALL RESET
(YES→▲)

EXIT MENU (YES→▲)

· Page 2 File Name Change/File Reset

→ PAGE 2 (NEXT→▼ PREV→▲)

FILE NO. : 1

FILE NAME :

(STD)

FILE RESET

(YES→▲)

EXIT MENU (YES→▲)

FILE NO. File No. of operation item
FILE NAME File name of operation item file
FILE RESET Performing of FILE RESET

· Page 3 File Recall

→ PAGE3 (NEXT→▼ PREV→▲)

FILE RECALL
FILE :*HISAT
SELECT FILE
STD
CHG FILE
(YES→▲)

EXIT MENU (YES→▲)

FILE File name which is recalled SELECT FILE Select file to be recalled Performing of FILE RECALL

· Page 4 File Basic Setting

→ PAGE4 (NEXT→▼ PREV→▲)

M.BLACK : ±0
STRETCH : ±0
M.GAMMA : ±0
DTL LEV : ±0
V DTL LEV : −10
DTL FREQ : M

EXIT MENU (YES→▲)

M.BLACK Master black level setting
STRETCH Black stretch level setting
M GAMMA Master GAMMA level setting
DTL LEV Detail level setting
V DTL LEV V detail level setting
DTL FREQ Detail center frequency setting

FILE DATA selected with SET UP switch is displayed on the PAGE 4 to 11. When data value is changed, the data in the FILE DATA selected with SET UP switch is also rewriten.

When the SET UP switch is switched while any of PAGE 4 to 11 is displayed, the display is changed in response to the SET UP switch position.

Page 5 File HUE Setting

→ PAGES (NEXT→▼ PREV→▲)

SAT : ±0
HUE : ±0
SKIN SAT : ±0
SKIN HUE : ±0

EXIT MENU (YES→▲)

SAT Chroma setting
HUE HUE setting
SKIN SAT Chroma setting for the skin tone area
SKIN HUE HUE setting for the skin tone area

Page 6 File Knee /GAMMA Setting

→ PAGE6 (NEXT→▼ PREV→▲)

M.KNEE P : 300
M.KNEE S : 90
GAMMA TBL : B
COMB : OFF

M.KNEE P

M.KNEE S

GAMMA TBL

COMB

A: Rising gain 3.5-fold

B: Rising gain 4.0-fold

COMB Filter selection

(OFF/GR/R/G)

Page 7 File Matrix Center Value Setting

→ PAGE7 (NEXT→▼ PREV→▲)

R-G LEV : 38

R-B LEV : 10

G-R LEV : 6

G-B LEV : 15

B-R LEV : 8

B-G LEV : 7

EXIT MENU (YES→▲)

R-G LEV
R-B coefficient center value setting
R-B LEV
R-B coefficient center value setting
G-R LEV
G-R coefficient center value setting
G-B LEV
G-B coefficient center value setting
B-R LEV
B-R coefficient center value setting
B-G LEV
B-G coefficient center value setting

· Page 8 File Matrix Variable Width Setting

→ PAGE8 (NEXT→▼ PREV→▲)

R-G WIDTH : 40
R-B WIDTH : 20
G-R WIDTH : 40
G-B WIDTH : -40
B-R WIDTH : -20
B-G WIDTH : -20

EXIT MENU (YES→▲)

R-G WIDTH HUE variable width of R-G coefficient setting
R-B WIDTH HUE variable width of R-B coefficient setting
G-R WIDTH HUE variable width of G-R coefficient setting
B-R WIDTH HUE variable width of B-R coefficient setting
B-G WIDTH HUE variable width of B-G coefficient setting

· Page 9 File Core Related Setting

→ PAGE9 (NEXT→▼ PREV→▲)

LEVEL DEP : 52
V DTL LIM : 20
CRISP : 6

LEVEL DEP Level depend level setting
V DTL LIM V detail compression setting
CRISP CRISPENING level setting

EXIT MENU (YES→▲)

Page 10 File Detail Related Setting

→ PAGE10 (NEXT→▼ PREV→▲)

APERTURE : 145
AFT DTL : 25
KNEE APT : 48
HIGH DTL : 63
CCS LEV : 5

EXIT MENU (YES→▲)

APERTURE Aperture level setting

AFT DTL Setting of the detail amount to be added after the gamma circuit

KNEE APT Setting of the detail amount higher than the knee point HIGH DTL Setting of the detail amount in the high light area

CCS LEV Cross color supress level setting

· Page 11 File Stretch Setting

→ PAGE11 (NEXT→▼ PREV→▲)

STRP1 : 20
STRP2 : 45
PRSP1 : 8
PRSP2 : 63

EXIT MENU (YES→▲)

STRP1 BLACK STRETCH Point1 setting
STRP2 BLACK STRETCH Point2 setting
PRSP1 BLACK COMPRESS Point1 setting
PRSP2 BLACK COMPRESS Point2 setting

• Page 12 File Store

→ PAGE12 (NEXT→▼ PREV→▲)

FILE STORE FILE: *HISAT DISTINATION FILE USER1 STORE FILE (YES→▲)

EXIT MENU (YES→▲)

FILE

File name to be recalled

DESTINATION FILE

Selection of FILE STORE destination

STORE FILE

Performing of FILE STORE




Section 3 Electrical Alignment


3-1. Preparation

3-1-2. Connection

3-1-1. Equipment Required

- · Digital voltmeter
- Oscilloscope (100 MHz or more)
- Vectorscope
- · Waveform monitor
- B/W monitor (Sony PVM-91/122 or equivalent)
- Color monitor (Sony PVM-1320 or equivalent)
- AC Adaptor (Sony CMA-8/8A/8CE/8ACE)
- · Camera Adaptor (Sony CA-537/537P)
- · Frequency counter
- · SC-H Phase Equipment
- Tripod Adaptor VCT-U14

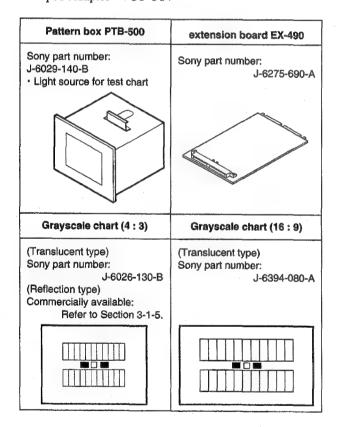

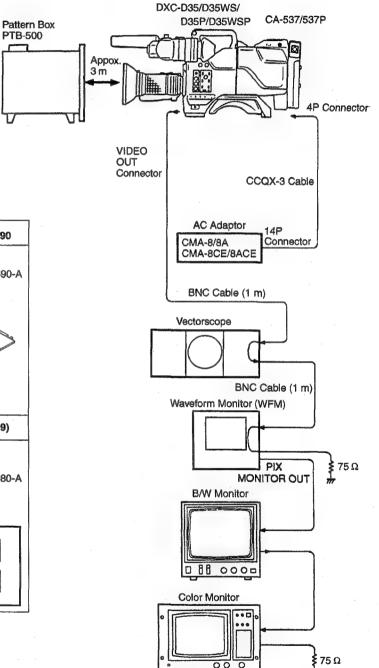

3-1-3. Setting Before Adjustment

Side Panel

GAIN switch:

OUTPUT/DL/DCC + switch:

W. BAL switch:

ZEBRA switch:

HYPER GAIN switch:

CAM/DCC +

PRESET

OFF

OFF

SET UP switch:

STD

EZ MODE button:

SKIN DTL switch:

OFF

ATW button:

OFF

Front Panel

FILTER control: 1 (3200 K)
SHUTTER switch: OFF

Camera Adaptor

S1 switch (IF-313 board): AUTO (Center position)

Viewfinder


DISPLAY switch: ON

• Lens


IRIS: M (Manual)
ZOOM: M (Manual)

3-1-4. Notes on Adjustment

- Before adjustment, be sure to perform 10-minute warmup.
- When using the SERVICE menu and FILE menu, refer to "2-12. Service Mode Operation".
- To shoot the chart frame covering fully the underscanned monitor frame, perform the following procedures.
 - 1. Set the camera to the best focus, then adjust the lens zoom and the orientation of the camera.
 - 2. Adjust the chart frame to align with the underscanned monitor frame as shown in the figure below.

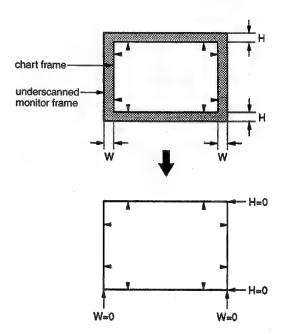

In case of the Grayscale chart:

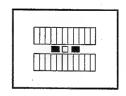

(underscanned monitor screen)

- When replacing the CCD unit, be sure to perform the following adjustment items.
 - 3-3-13. Shading Adjustment
 - 3-3-14. Flare Adjustment
- If the waveform to be measured is blurred and the amplitude level is not clear, set the FILTER switch on the waveform monitor to "LUM" or "LPASS" mode.

3-1-5. Maintaining the Grayscale Chart

For the CCD OUT level adjustment and the Gamma correction adjustment, using an 89.9 %-reflective grayscale chart is preferable.

If a reflective chart is not available, use a well-maintained pattern box and a transparent grayscale chart for adjustment.

Before beginning adjustment, set the illumination of the light source (or the luminous intensity on the chart surface) properly proceeding as follows and set the color temperature to 3200 K exactly by adjusting light.

Information on the reflective grayscale chart

Recommended chart

The reflective grayscale chart is commercially available.

Recommended chart:

Reflective grayscale chart (with a special case)

MURAKAMI COLOR RESEARCH LABORATORY GS-3

or equivalent

Supplier:

MURAKAMI COLOR RESEARCH LABORATORY

Address: 3-11-3, Kachidoki, Chuo-ku, Tokyo, JAPAN

Postcode 104-0054

Phone: 81-3-3532-3011

Fax: 81-3-3532-2056

Handling precautions

- · Do not touch the chart's surface.
- · Do not subject the surface to dirt, scratches or prolonged exposure to sunlight.
- · Protect the chart from excess moisture and harmful gas.
- · Avoid resting articles against the case.
- Open the case and dry the chart more an hour for a month in no use long period.

Replacement period when the chart is used as the reference

The reflective grayscale chart should be replaced every two years if it used as the reference. Because the chart deteriorates with time and proper adjustment cannot be achieved.

Replacement period varies according to storage conditions of the chart.

Setting illumination (when the reflective chart is used)

Equipment:


Illuminance meter (Calibrated)

- 1. Turn on the light source and warm up for about 30 minutes.
- 2. Place the illuminance meter on the chart surface.

 Adjust the position and angle of the light source so that the whole surface of the chart is evenly 2000 lx.

Note

Light the chart from almost the same direction and height as the camera to shoot the chart.

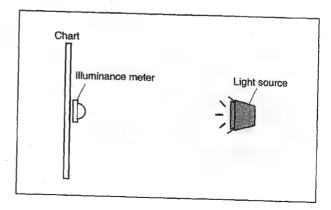


Setting luminous intensity (when the transparent chart is used)

Equipment: Luminance meter (Minolta LS-110 or equivalent. Calibrated.)

- 1. Light the pattern box and warm up for about 30 minutes.
- 2. Place the pattern box where the chart is not exposed to light, such as a darkroom. (Or cover the pattern box with a cover whose inside is painted in black.)
- 3. Place the luminance meter facing straight to the chart at a distance of 1 m from it.
- 4. Adjust the luminance control of the pattern box so that the white portion in the center of the chart is $573 \pm 6 \text{ cd/m}^2$.

Note

This corresponds to the luminous intensity on the 89.9 %-reflective chart at 2000 lx.

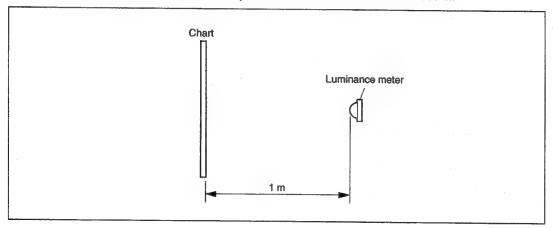

3-2. Before Adjustment

3-2-1. Color Bar Signal Confirmation


Equipment:

Waveform monitor, Vectorscope

Preparation: Test point:

OUTPUT/DL/DCC+ switch: BARS VIDEO OUT connector

Specification:

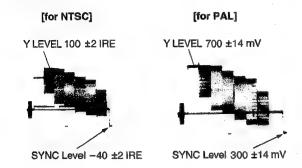

Chroma Level
 Confirm that the beam spots of each color (R, Y_L, G, C_Y, G, B and M_G) are inside the area "⊞".

Notes

- Partial difference between scale and signal level is caused by photographic error.
- If the specifications are not met, carry out from "3-3-2. INT SC Phase Adjustment" through "3-3-9. Chroma (YC) Level Adjustment".
- Use the vectorscope conforming to setup "7.5 IRE". (for NTSC)

3-2-2. Sensitivity Measurement Confirmation

Object:

Overall white

Light:

3200K, 2000 lux

(If the pattern box is used, set the

AUTO mode)

Equipment:

Waveform monitor

Preparation:

- Shoot the overall white pattern covering fully the monitor frame.
- Lens iris \rightarrow F11
- OUTPUT/DL/DCC + switch: CAM/DCC +
- W. BAL switch: PRESET


Note

If the zoom position is at the "TELE" edge, F value of the camera may decrease. When decreasing, adjust the distance between the pattern box and the camera and bring the zoom position slightly from the "TELE" edge to "WIDE".

Specification:

 100 ± 10 IRE (for NTSC)

 $700 \pm 70 \text{ mV (for PAL)}$

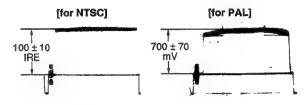

Note

If the specification is not met, perform "3-3-11. CCD OUT Level Adjustment".

3-3. Camera Adjustment

Note

Before the adjustment, enter the "PAGE 1" of SERVICE menu, and perform the "RESET".

3-3-1. Sub-Carrier Frequency Adjustment

Equipment:

Frequency counter

To be extended: ES-32 board (for DXC-D35/D35P)

ES-33 board (for DXC-D35WS/D35WSP)

Test point:

TP501 (GND: E501)

/ES-32 board (for DXC-D35/D35P)

/ES-33 board (for DXC-D35WS/D35WSP)

Adjusting point: SERVICE menu "PAGE 8"

→ SC FREQ:

Adjust the sub-Carrier Frequency by


UP ▲ switch or DOWN ▼ switch to

meet the specification.

Specification:

 $3,579,545 \pm 10$ Hz (for NTSC)

 $4,433,618 \pm 10 \text{ Hz (for PAL)}$

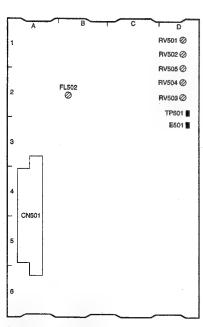

ES-32 board (A side) (DXC-D35/D35P) ES-33 board (A side) (DXC-D35WS/D35WSP)

3-3-2. INT SC-H Phase Adjustment

Note

Stated below is a procedure with the SC-H phase measuring equipment (Tektronix Waveform monitor 1765). If any other equipment is used, perform adjustment at the following adjustment point by reading the instruction manual attached.

Equipment:

Waveform monitor (SC-H Phase mode)

Preparation:

• Put the Tektronix Waveform monitor 1765 to SC-H

mode.

Test point:


VIDEO OUT connector

Adjustment Procedure

1. SERVICE menu "PAGE 8"

 \rightarrow SC-H

2. Adjust the phase relationship between SC (Burst) and H beam spot correctly by UP ▲ switch or DOWN ▼ switch.

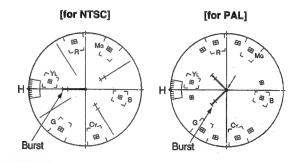

Note

After this adjustment, set the mode of Tektronix Waveform monitor 1765 to "WFM" mode.

3-3-3. Y/R-Y/B-Y CLP Level Adjustment

Equipment: Oscilloscope

To be extended: IF-532 board (for DXC-D35/D35P)

IF-700 board (for DXC-D35WS/D35WSP)

Preparation: OUTPUT/DL/DCC + switch: BARS

Test point: TP60, 61, 62 (GND: TP63)

/EX-490 board

Trigger: HD (TP83/EX-490 board)

Adjustment Procedure

 Select "PAGE 10" of SERVICE menu, make sure that R-Y and B-Y mode must be "ON".

2. SERVICE menu "PAGE 6"

 \rightarrow Y CLP:

R-Y CLP:

B-Y CLP:

Adjust the following items by UP ▲ switch or DOWN
 ▼ switch to meet the specification.

Note

In case of Y CLP for NTSC model, perform the adjustment as follows.

- ① Select "PAGE 9" of SERVICE menu, and set the "SETUP" to "OFF".
- ② Select "PAGE 6" of SERVICE menu, and move the cursor to Y CLP.
- 3 Adjustment: $A = 0 \pm 5 \text{ mV}$
- Select "PAGE 9" of SERVICE menu, and set the "SETUP" to "ON".
- (5) And return to "PAGE 6".

item	Test Point	Specification
Y CLP	TP61 (NTSC)	A = 0 ±5 mV (PAL)
		\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\
R-Y CLP	TP60	B = 0 ±5 mV
	7	<u></u>
B-Y CLP	TP62	$C = 0 \pm 5 \text{ mV}$

3-3-4. Y/SYNC/R-Y/B-Y Level Adjustment

Equipment: Oscilloscope

To be extended: IF-532 board (for DXC-D35/D35P)

IF-700 board (for DXC-D35WS/D35WSP)

Preparation:

OUTPUT/DL/DCC + switch: BARS

Test point:

TP60, 61, 62 (GND: TP63)

/EX-490 board

Trigger: HD (TP83/EX-490 board)

Adjustment Procedure

Note

Following procedures are for DXC-D35WS/D35WSP. For DXC-D35/D35P, perform steps 2 to 4 below.

- 1. Select "PAGE 9" of ADVANCE menu, set "16:9/4:3" to "4:3".
- 2. Select "PAGE 10" of SERVICE menu, make sure that R-Y and B-Y mode are "ON".
- 3. SERVICE menu "PAGE 5"

 \rightarrow Y LEV:

R-Y LEV:

B-Y LEV:

SYNC LEV:

SETUP LEV:

In case of Y LEV for NTSC model, perform the adjustment as follows.

- 1 Move the cursor to Y LEV.
- ② Adjust the "A" of Y LEV level.
- Move the cursor to SETUP LEV, and adjust the "F" of setup level.
- 4 Repeat step 1 through 3 several times.
- 4. Adjust by UP ▲ switch or DOWN ▼ switch.
- 5. Select "PAGE 9" of ADVANCE menu, and set the "16:9/4:3" to "4:3".
- 6. SERVICE menu "PAGE 5"

 \rightarrow W Y LEV:

W R-Y LEV:


WB-Y LEV:


7. Adjust by UP ▲ switch or DOWN ▼ switch to meet the specification.

(continued)


3-3. Camera Adjustment

		Specification				
Item	Test Point					
YLEV	TP61	NTSC: A = 714 ±10 mV				
		$F = 54 \pm 5 \text{ mV}$				
		PAL: $A = 700 \pm 10 \text{ mV}$				
*W Y LEV	TP61	NTSC: $A = 714 \pm 10 \text{ mV}$				
		PAL: $A = 700 \pm 10 \text{ mV}$				
SYNC LEV	TP61	NTSC: B = 286 ±5 mV				
		PAL: $B = 300 \pm 5 \text{ mV}$				

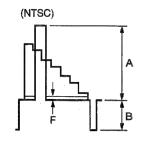

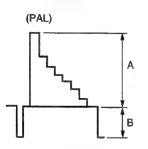


R-Y LEV TP60 *W R-Y LEV TP60 NTSC: $C = 700 \pm 20 \text{ mV}$ PAL: $C = 525 \pm 20 \text{ mV}$ NTSC: $C = 700 \pm 20 \text{ mV}$ PAL: $C = 525 \pm 20 \text{ mV}$

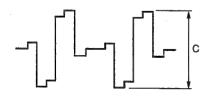

B-Y LEV TP62 *W B-Y LEV TP62

NTSC: $D = 700 \pm 20 \text{ mV}$ PAL: $D = 525 \pm 20 \text{ mV}$ NTSC: $D = 700 \pm 20 \text{ mV}$

NISC: $D = 700 \pm 20 \text{ mV}$ PAL: $D = 525 \pm 20 \text{ mV}$

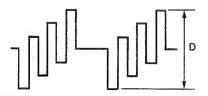

*: DXC-D35WS/35WSP only

3-3-5. Carrier Balance Adjustment

Equipment:

Verctorscope (MAX GAIN)

Preparation:


OUTPUT/DL/DCC + switch: BARS

Test point:

VIDEO OUT connector

Adjusting point

- 1. SERVICE menu "PAGE 7"
 - \rightarrow R-Y C/B
 - B-Y C/B

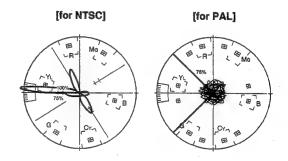

3-3-6. Chroma (VBS) Level Adjustment

Note

Use the vectorscope conforming to setup "7.5 IRE". (for NTSC)

Equipment:

Verctorscope

To be extended: ES-32 board (for DXC-D35/D35P)

ES-33 board (for DXC-D35WS/D35WSP)

Preparation:

- GAIN switch/Verctorscope: 75 % CAL
- Adjust the PHASE control on the vectorscope so that the burst spot is overlapped to the 75 % axis.
- OUTPUT/DL/DCC + switch: BARS

Test point:

VIDEO OUT connector

Adjustment Procedure

1. [for NTSC] SERVICE menu "PAGE 7"

→ B-Y BST

Adjust by the UP ▲ switch or DOWN ▼ switch so that burst spot is located at 75 % scale mark on the vector-scope screen.

(In case of NTSC, make sure that "R-Y BST" must be "0".)

[for PAL]

SERVICE menu "PAGE 7"

→ R-Y BST

B-Y BST

Adjust "R-Y BST" and "B-Y BST" alternately by UP ▲ switch or DOWN ▼ switch so that burst spot is located at 75 % scale mark on the vectorscope screen.

- 2. Adjust the adjusting volume controls below to enter the beam spot of each color within the area "田" specified for each color on the vectorscope screen.
 - **Ø** RV503 (B-Y LEV)

/ES-32 board (DXC-D35/D35P)

/ES-33 board (DXC-D35WS/D35WSP)

♥ FL502 (PHASE)

/ES-32 board (DXC-D35/D35P)


/ES-33 board (DXC-D35WS/D35WSP)


RV504 (CHROAMA VBS LEV)

/ES-32 board (DXC-D35/D35P)

/ES-33 board (DXC-D35WS/D35WSP)

3. Then, perform above procedure item 1 again

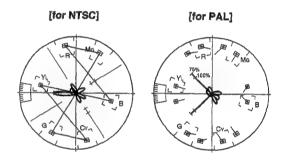

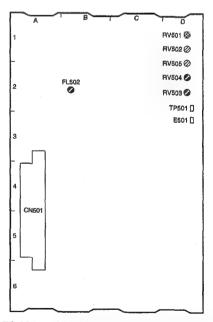

ES-32 board (A side) (DXC-D35/D35P) ES-33 board (A side) (DXC-D35WS/D35WSP)

3-3-7. Y (VBS) Level Adjustment

Equipment:

Waveform monitor

To be extended: ES-32 board (for DXC-D35/D35P)

ES-33 board (for DXC-D35WS/D35WSP)

Preparation:

OUTPUT/DL/DCC+ switch: BARS

Test point:

VIDEO OUT connector

Adjustment Procedure

1. [for NTSC]

• SERVICE menu "PAGE 9"

→ SET UP: ON

[for PAL]

SERVICE menu "PAGE 9"

→COMP LVL: 525 (not 700)

2. Adjusting point: **⊘**RV501 (Y LEVEL)

/ES-32 board (for DXC-D35/D35P)

/ES-33 board (for DXC-D35WS/D35WSP)


Specification:

 $B = 100 \pm 2 IRE (for NTSC)$

 $B = 700 \pm 10 \text{ mV (for PAL)}$

[for NTSC]

[for PAL]

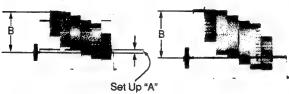

Note

In the NTSC model, check that the set up level is within $A = 7.5 \pm 5.0$ IRE.

If without the range, perform the setup level adjustment in Section 3-3-4, "Y/SYNC/R-Y/B-Y Level Adjustment.

3-3-8. Y (YC) Level Adjustment

Note

Be sure that "3-3-7. Y (VBS) Level Adjustment" is

completed.

Equipment:

Oscilloscope

To be extended: ES-32 board (for DXC-D35/D35P)

ES-33 board (for DXC-D35WS/D35WSP)

Preparation:

OUTPUT/DL/DCC + switch: BARS

Test point:

TP66 (GND: TP67)/EX-490 board

Trigger:

HD (TP84/EX-490 board)

Adjusting point: ORV502 (Y LEVEL)


/ES-32 board (for DXC-D35/D35P)


/ES-33 board (for DXC-D35WS/D35WSP)


Specification:

 $A = 1.00 \pm 0.02 \text{ V (for NTSC)}$

 $A = 1.00 \pm 0.02 \text{ V (for PAL)}$

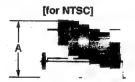

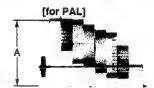

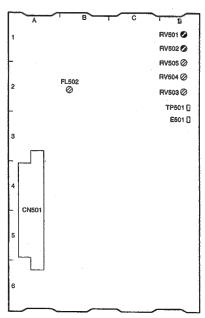

ES-32 board (A side) (DXC-D35/D35P) ES-33 board (A side) (DXC-D35WS/D35WSP)

3-3-9. Chroma (YC) Level Adjustment

Equipment:

Oscilloscope

To be extended: ES-32 board (for DXC-D35/D35P)

ES-33 board (for DXC-D35WS/D35WSP)

Preparation:

OUTPUT/DL/DCC + switch: BARS TP64 (GND: TP65)/EX-490 board

Test point: Trigger:

HD (TP84/EX-490 board)

Adjusting point: ORV505 (CHROMA (YC) LEV)

/ES-32 board (for DXC-D35/D35P)


/ES-33 board (for DXC-D35WS/D35WSP)

Specification:


 $A = 286 \pm 5 \text{ mV (for NTSC)}$


 $A = 300 \pm 10 \text{ mV (for PAL)}$

[for NTSC]

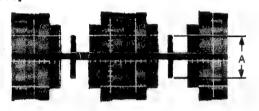

[for PAL]

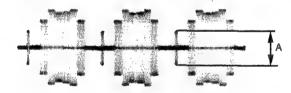

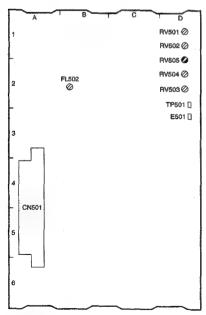

3-3-10. VF SYNC/BLKG Level Adjustment

Equipment:

Oscilloscope

To be extended: ES-32 board (for DXC-D35/D35P)

ES-33 board (for DXC-D35WS/D35WSP)

Preparation:

OUTPUT/DL/DCC + switch: BARS

Test point:

TP82 (GND: TP83)/EX-490 board

Trigger:

HD (TP84/EX-490 board)

Adjustment Procedure

1. SERVICE menu "PAGE 7"

VF SYNC

→ VF BLKG


Note

For the adjustment procedure, at the first "VF BLKG" adjustment is done, and next, "VF SYNC" adjustment is done.

Adjust the following items by UP A switch or DOWN ▼ switch to meet the specification.

Item	Test Point	Specification		
VF BLKG	TP82	NTSC: A = 50 ±10 mV PAL: A = 50 ±10 mV		
VF SYNC	TP82	NTSC: B = 290 ±10 mV PAL: B = 300 ±10 mV		



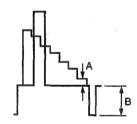



ES-32 board (A side) (DXC-D35/D35P) ES-33 board (A side) (DXC-D35WS/D35WSP)

3-3-11. CCD Output Level Adjustment

Notes

- · Usually, this adjustment is not required. Only when the output level of CCD unit is largely different from the specification, make the adjustment.
- · When the new CCD unit for spare parts is replaced, this adjustment is not required because of the correct adjustment at the factory.
- · It is advisable to use a reflection type grayscale chart for this adjustment. Further more, before adjustment, setting of the luminance (or brightness) on the chart surface and the color temperature setting are required. For details, refer to Section 3-1-5, "Maintaining the Grayscale Chart".

Lightening:

3200K, 2000 lux

(When using the pattern box, set to

Auto mode.)

Object:

Grayscale chart

Equipment:

Oscilloscope To be extended: VA-165 board (for DXC-D35/D35P)

VA-185 board (for DXC-D35WS/D35WSP)

Preparation:

- OUTPUT/DL/DCC+ switch: CAM/DCC +
- · W. BAL switch: PRESET.
- · Select a large lens iris to shoot the gray scale chart covering fully the underscanned frame. (Refer to Section 3-1-4.)
- Adjust the lens iris so that the video level at TP27/ extension board (VA-185 board) is 165 ± 5 mV.

Trigger:

HD (TP72/EX-490 board)

Adjustment Procedure

1. Test point:

TP15/EX-490 board

Adjusting point: ORV1/PA-254 board

Specification: 2. Test point:

 $A = 165 \pm 5 \text{ mV}$


Adjusting point: ORV1/PA-256 board

TP21/EX-490 board

Specification:

 $A = 165 \pm 5 \text{ mV}$



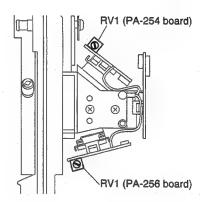

3-3-12. Carrier Adjustment at DPR (Double Pixel Reading) ON

Equipment:

Waveform monitor, Vectorscope

(MAX GAIN)

Preparation:

· HYPER GAIN switch: ON

• OUTPUT/DL/DCC + switch: CAM/DCC +

Test point:

VIDEO OUT connector

Adjustment Procedure

SEVICE menu "PAGE25"

 \rightarrow R D.DARK:


G D.DARK:

B D.DARK:


2. Set the lens iris to the close (C).

3. Adjust the settings of R D.DARK, G D.DARK and B D.DARK by UP ▲ switch or DOWN ▼ switch to meet the specifications 1 and 2 below.

Specification 1: $A = 10 \pm 1$ IRE (for NTSC) $A = 20 \pm 7 \text{ mV (for PAL)}$

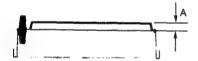

Specification 2: Beam spot of the black level comes to the center position of the vectorscope screen

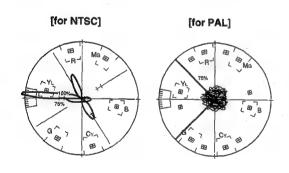

4. Check that the specifications 1 and 2 are satisfied at GAIN 0 dB.

3-3-13. Shading Adjustment

Note

When replacing the lens and CCD unit, perform this adjustment.

Object:

Overall white

Equipment:

Waveform monitor, Oscilloscope To be extended: VA-169 board (DXC-D35/D35P)

VA-185 board (DXC-D35WS/D35WSP)

Trigger:

VD (TP73/EX-490 baord)

Preparation:

[When replacing the CCD unit]

Attach the lens VCL-918BY or equivalent to this unit. (Refer to the instruction manual, adjusting the Lens in Section 5, "Designating the lens".)

Set the LENS SEL of the ADVANCE menu "PAGE 4" to 1. Set the data following the adjustment procedure. The R,G,B value of the number 1 takes as the reference to the values of LENS SEL 2, 3 and 4.

Reference

LENS SEL	EXTENDER OFF			EXTENDER ON		
	R	G	В	R	G	В
1 (Addition value)						
2	-15	10	-15	0	0	0
3	-25	20	-25	0	0	0
4	0	0	0	0	0	0

[When replacing the lens]

Set the LENS SEL of the ADVANCE menu "PAGE 4" to Set the data following the adjustment procedure.


Adjustment Procedure

- 1. SERVICE menu "PAGE 2"
 - →R W. SHAD:
 - G W. SHAD:
 - B W. SHAD:
- 2. Shoot the center portion of pattern box by zooming the lens to fully TELE position.

If the lens has an extender, set the extender OFF.

3. Adjust the lens iris to bring the white level "A" to 70 ±2 IRE.

Test point: VIDEO OUT connector

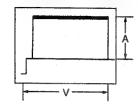


4. In the following items, by pressing the UP ▲ or DOWN ▼ switches, adjust the waveform of the oscilloscope to be flat.

GND: TP38/EX-490 board

Item	Test point	Specification
R W. SHAD	CL101	
G W. SHAD	CL201	
B W. SHAD	CL301	

5. If the lens has an extender, set the extender ON and perform the adjustment of step 4.

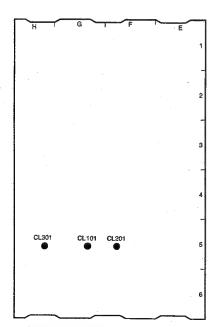

VA-169 board (B side) (DXC-D35/D35P) VA-185 board (B side) (DXC-D35WS/D35WSP)

3-3-14. Flare Adjustment

Object:

Grayscale chart

Equipment:

Waveform monitor

Preparation:

• OUTPUT/DL/DCC + switch: CAM/DCC +

· Select a large lens iris and shoot the grayscale chart covering fully the underscanned frame. (Refer to Section 3-1-4.)

Test point:

VIDEO OUT connector


Adjustment Procedure

- 1. SERVICE menu "PAGE 3"
 - → R FLARE: x
 - G FLARE: 5
 - B FLARE: x


Note

Make sure that "G FLARE" is "5".

- 2. Push the WHT/BLK switch in the "BLK" direction to make a black balance.
- 3. Adjust the lens iris to bring the white level to A = 100
- 4. With the W. BAL switch set to "A", push the WHT/ BLK switch in the "WHT" direction to make a white balance.

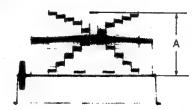

- 5. Make the lens iris large by two steps.
- 6. Adjust the flare with UP ▲ and DOWN ▼ switches alternatively to minimize the carrier leakage level.

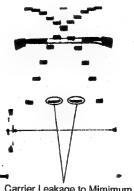

Carrier Leakage to Mimimum

3-3-15. MIC Level/MIC Level IND Adjustment

Equipment:

Oscilloscope

Preparation:

OUTPUT/DL/DCC+ switch: BARS

Adjustment Procedure

MIC Level Adjustment

Test point: CL201 (GND: Capacitor C202 ⊕ side)

/MB-629 board (for DXC-D35/D35P)


/MB-785 board (for DXC-D35WS/D35WSP)

Adjusting point: ©RV201

/MB-629 board (for DXC-D35/D35P)


/MB-785 board (for DXC-D35WS/D35WSP)


Specification: $A = 110 \pm 5 \text{ mV}$

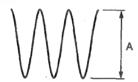

MIC Level IND Adjustment

- SERVICE menu "PAGE 17"
 → MIC ADJ
- 2. Adjust by the DOWN ▼ switch, and stop at the point where the ¬ mark just appears on the monitor screen.
- 3. Adjust by the UP ▲ switch, and stop at the point where the ▷ mark just disappears on the monitor screen.
- 4. Set the DOWN ▼ switch at the five-descending position from the point the ▷ mark disappears.

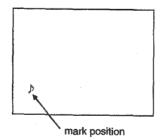

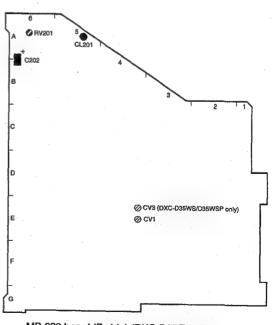

MB-629 board (B side) (DXC-D35/D35P) MB-785 board (B side) (DXC-D35WS/D35WSP)

3-3-16. Character Position Adjustment

Equipment:

Color monitor (or, B/W monitor)

Preparation:

OUTPUT/DL/DCC + switch: BARS

Test point:

MONITOR OUT connector

Adjustment Procedure

1. Set the "MARKER" to "ON" on the BASIC menu.

2. Select "PAGE 9" on the ADVANCE menu, set "16:9/4:3" to "16:9" position.

Note

This step shall be performed for DXC-D35WS/D35WSP only.

3. Set the "MARKER" to "CENT/90 %" on the "PAGE 4" of ADVANCE menu.

4. Adjusting point:


⊘CV1/MB-629 board (for DXC-D35/D35P)

⊘CV3/MB-785 board (for DXC-D35WS/D35WSP)

Specification:

"a" = "b" (for NTSC)

[for NTSC]

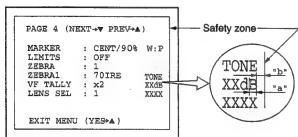



Specification:

Bring the characters to the safety zone as close as possible, yet

prevent them from overlapping. (for PAL)

[for PAL]

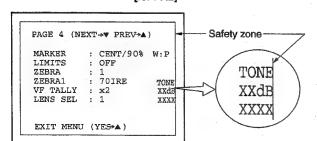

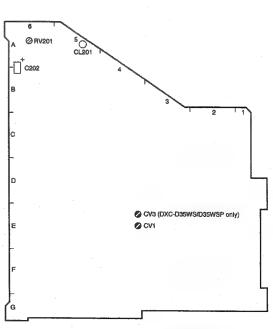

MB-629 board (B side) (DXC-D35/D35P) MB-785 board (B side) (DXC-D35WS/D35WSP)

3-3-17. 4: 3 Title Adjustment (Only for DXC-D35WS/D35WSP)

Equipment:

Color monitor (or, B/W monitor)

Preparation:

OUTPUT/DL/DCC + switch: BARS

Test point:

MONITOR OUT connector


Adjustment Procedure

- 1. Select "PAGE 9" on the ADVANCE menu, set "16:9/4:3" to "4:3" position.
- 2. Select "PAGE 8" on the ADVANCE menu, set "CLOCK IND" to "BARS" position.
- 3. Set the cursor to "EXIT MENU" then press the UP ▲ switch to return to the menu selecting screen.
- 4. Adjusting point: ◆CV1/MB-785 board

Specification:

Align the center of the two-digit figure XX with the boundary between magenta and red of the color bar as shown in the following figure. (for NTSC)


[for NTSC]

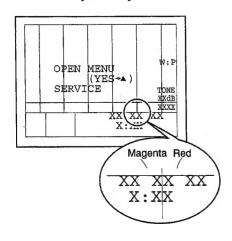


Specification:

Align the left end of the ":" with the boundary between magenta and red of the color bar as shown in the following figure. (for PAL)

[for PAL]

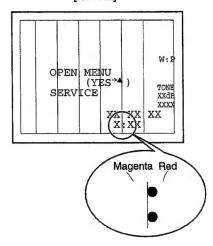

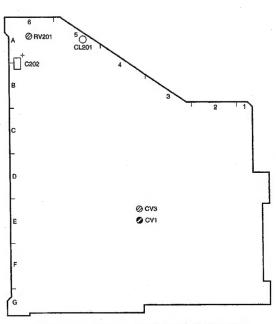

3-4. Changing the Standard Setting Values (Video Level)

When changing the setting of black level, flare, gamma, manual knee and white clip by the user's desire, perform the procedures below.

3-4-1. Setting Status before Changing the Setting.

Side Panel

GAIN switch:

LOW (0 dB)

OUTPUT/DL/DCC +:

CAM/DCC +

WHITE BAL switch:

A

ZEBRA switch:

OFF

HYPER GAIN switch:

OFF

SET UP switch:

STD

EZ MODE button: A.IRIS MODE:

OFF STD

ATW button:

OFF

Front Panel

FILTER control:

1 (3200 K)

SHUTTER switch:

OFF

Lens

IRIS:

M (Manual)

ZOOM:

M (Manual)

3-4-2. Changing the Setting Value of Black

Equipment:

Waveform monitor

Test point:

VIDEO OUT connector

Procedure for changing the setting

- 1. Set the lens iris to the close position (C).
- 2. Push the WHT/BLK switch in the "BLK" direction to make a black balance.
- 3. SERVICE menu "PAGE 15"
 - \rightarrow M.BLACK:
- 4. Set the black level A with the UP ▲ or DOWN ▼ switch.

M.BLACK Standard setting value = 2070 (for NTSC) 2075 (for PAL)



3-4-3. Changing the Flare Compensation Setting Value

Object:

Grayscale chart

Equipment:

Waveform monitor

Preparation:

Select a large lens iris and shoot the

grayscale chart covering fully the

underscanned frame.

Test point:

VIDEO OUT connector


Procedure for changing the setting

1. SERVICE menu "PAGE 3"

 \rightarrow R FLARE: x G FLARE: 5

100 IRE.


B FLARE: x
2. Adjust the lens iris to bring the white level A to A =

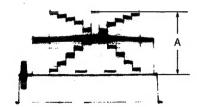

Note

To make the flare compensation more effectively, set a big value to G FLARE.

G FLARE standard setting value = 5

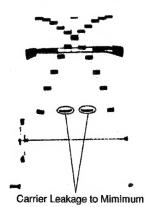

- 3. Make the lens iris large by more two steps.
- Adjust the "R FLARE" and "B FLARE" alternatively with the UP ▲ or DOWN ▼ switch in order to minimize the carrier leakage level.

3-4-4. Changing the Gamma Correction Setting Value

Note

It is advisable to use a reflection type grayscale chart for this adjustment. Further more, before adjustment, setting of the luminance (or brightness) on the chart surface and the color temperature setting are required. For details, refer to Section 3-1-5, "Maintaining the Grayscale Chart".

Object:

Grayscale chart

Equipment:

Waveform monitor

Preparation:

Select a large lens iris and shoot the

grayscale chart covering fully the

underscanned frame.


Test point:

VIDEO OUT connector

Procedure for changing the setting

- Push the WHT/BLK switch in the "WHT" direction to make a white balance.
- Adjust the lens iris to bring the white level to A = 100 IRE.
- 3. SERVICE menu "PAGE15"
 - → M.GAMMA
- Set the cross point B of the grayscale with the UP ▲ or DOWN ▼ switch.

M.GAMMA standard setting value = 132

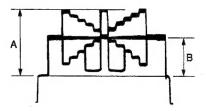

3-4-5. Changing the Manual Knee/White Clip Setting Value

Equipment:

Waveform monitor

Preparation:

OUTPUT/DL/DCC + switch : CAM/DL

Test point:

VIDEO OUT connector

Procedure for changing the setting

1. Changing of the knee point setting value.

ADVANCE menu "PAGE 2"

 \rightarrow DL: OFF


2. SERVICE menu "PAGE 10"

→ TEST SAW: 2

3. FILE menu "PAGE 6"

→ M.KNEE P:

4. Set the knee point with the UP ▲ or DOWN ▼ switch.

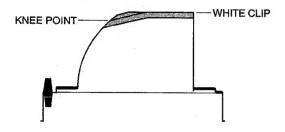


5. Changing of the knee slope setting.

FILE menu "PAGE 6"

 \rightarrow M.KNEE S:

6. Set the knee slope with the UP ▲ or DOWN ▼ switch.

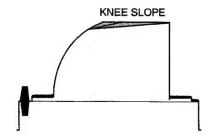

Reference

In STD, HISAT, FL, FILMLIKE, SVHS/VHS and USER1 to 3 files, the manual knee setting is available in every file. To return the changed manual knee setting values to the standard setting values, perform the following procedures.

- (1) Set SETUP switch to STD.
- (2) FILE menu "PAGE 3" Recall FILE STD.
- (3) FILE menu "PAGE 6"
 Set M.KNEE P and M.KNEE S.
- (4) FILE menu "PAGE 12" Store *STD in FILE STD.
- (5) FILE menu "PAGE 3" Recall FILE STD to STD
- (6) Set SETUP switch to FILE.
- (7) FILE menu "PAGE3"
 Recall FILE HISAT.
- (8) FILE menu "PAGE 6"
 Set M.KNEE P and M.KNEE S.
- (9) FILE menu "PAGE 12"
 Store *HISAT in FILE HISAT.
- (10) For each of FL, FILMLIKE, SVHS/VHS and USER1 to 3 files, perform the steps 7 to 9.
- (11) FILE menu "PAGE 3"
 Recall FILE HISAT to HISAT.
- (12) Return SETUP switch to STD.

Changing of the white clip level setting value.

The values at the factory setting are as follows.

NTSC Model = 107 IRE

PAL Model = 109%

SERVICE menu "PAGE 16"

→ WHT CLIP:

8. The white clip level can be decreased with the DOWN▼ switch.

W.CLIP standard setting value = 255

Note

When reducing the white clip setting value, it is recommendable to change the former mentioned manual knee setting in order to keep the reproduction of the grayscale in the high luminance level part.